



USER MANUAL

Gocator Laser Displacement Sensors

Gocator 2345, 2381 & 2385

Firmware version: 4.7.x.xx

Document revision: F

Copyright

Copyright © 2019 by LMI Technologies, Inc. All rights reserved.

Proprietary

This document, submitted in confidence, contains proprietary information which shall not be reproduced or transferred to other documents or disclosed to others or used for manufacturing or any other purpose without prior written permission of LMI Technologies Inc.

No part of this publication may be copied, photocopied, reproduced, transmitted, transcribed, or reduced to any electronic medium or machine readable form without prior written consent of LMI Technologies, Inc.

Trademarks and Restrictions

Gocator™ is a registered trademark of LMI Technologies, Inc. Any other company or product names mentioned herein may be trademarks of their respective owners.

Information contained within this manual is subject to change.

This product is designated for use solely as a component and as such it does not comply with the standards relating to laser products specified in U.S. FDA CFR Title 21 Part 1040.

Contact Information

LMI Technologies, Inc.
9200 Glenlyon Parkway
Burnaby BC V5J 5J8
Canada

Telephone: +1 604-636-1011

Fax: +1 604-516-8368

www.lmi3d.com

Table of Contents

Copyright	2
Table of Contents	3
Introduction	9
Safety and Maintenance	10
Laser Safety	10
Laser Classes	11
Precautions and Responsibilities	11
Nominal Ocular Hazard Distance (NOHD)	12
Systems Sold or Used in the USA	12
Electrical Safety	13
Handling, Cleaning, and Maintenance	13
Environment and Lighting	14
Getting Started	15
System Overview	15
Standalone System	16
Hardware Overview	17
Gocator Sensor	17
Gocator Cordsets	17
Installation	19
Grounding: Gocator	19
Grounding: Recommended Practices for Cordsets	19
Mounting	20
Network Setup	22
Client Setup	22
Gocator Setup	24
Next Steps	24
Gocator Web Interface	26
Unblocking Flash	26
Google Chrome	26
Internet Explorer	27
Firefox	28
Microsoft Edge	29
User Interface Overview	31
Toolbar	32
Creating, Saving and Loading Jobs (Settings)	33
Recording, Playback, and Measurement Simulation	34
Recording Filtering	36
Downloading, Uploading, and Exporting	37

Replay Data	
Metrics Area	40
Data Viewer	40
Status Bar	40
Log	41
Frame Information	41
Quick Edit Mode	42
Interface Language	42
Management and Maintenance	43
Manage Page Overview	43
Sensor System	44
Sensor Autostart	44
Layout	45
Networking	45
Motion and Alignment	46
Alignment Reference	47
Encoder Resolution	47
Jobs	48
Security	49
Maintenance	50
Sensor Backups and Factory Reset	51
Firmware Upgrade	52
Support	53
Support Files	53
Scan Setup and Alignment	55
Scan Page Overview	55
Data Viewer	56
Data Viewer Controls	56
Video Mode	56
Exposure Information	56
Exposures	56
Overexposure and Underexposure	57
Spots and Dropouts	58
Profile Mode	59
Section Mode	60
Surface Mode	60
Region Definition	60
Intensity Output	61
Scan Modes	62
Triggers	63
Trigger Examples	66
Trigger Settings	67

Maximum Input Trigger Rate	69	Adding and Configuring a Tool	95
Maximum Encoder Rate	69	Regions	96
Sensor	69	Decisions	99
Active Area	69	Filters	100
Tracking Window	71	Measurement Anchoring	102
Transformations	72	Enabling and Disabling Measurements	104
Exposure	73	Editing a Tool or Measurement Name	106
Single Exposure	74	Changing a Measurement ID	106
Dynamic Exposure	75	Removing a Tool	106
Multiple Exposure	76	Profile Measurement	107
Spacing	78	Feature Points	107
Sub-Sampling	78	Measurement Tools	109
Spacing Interval	79	Position	109
Advanced	80	Measurements, Features, and	
Material	81	Settings	110
Camera Gain and Dynamic Exposure	81	XLine	110
Alignment	82	Scripts	113
Alignment States	82	Built-in Functions	113
Alignment Types	82	Output	118
Aligning Sensors	83	Output Page Overview	118
Clearing Alignment	84	Ethernet Output	119
Surface Generation	84	Digital Output	122
Part Detection	84	Analog Output	125
Filters	84	Serial Output	127
Gap Filling	85	Dashboard	128
Median	86	Dashboard Page Overview	128
Smoothing	86	State and Health Information	128
Decimation	87	Statistics	129
Data Viewer	88	Measurements	130
Data Viewer Controls	88	Performance	130
Video Mode	88	Gocator Emulator	132
Exposure Information	88	Limitations	132
Exposures	88	Downloading a Support File	133
Overexposure and Underexposure	89	Running the Emulator	134
Spots and Dropouts	90	Adding a Scenario to the Emulator	135
Profile Mode	91	Running a Scenario	135
Region Definition	92	Removing a Scenario from the Emulator	136
Models	93	Using Replay Protection	137
Measurement	94	Stopping and Restarting the Emulator	137
Measure Page Overview	94	Working with Jobs and Data	137
Data Viewer	95	Creating, Saving, and Loading Jobs	137
Tools Panel	95	Playback and Measurement Simulation	138

Downloading, Uploading, and Exporting	
Replay Data	140
Downloading and Uploading Jobs	142
Scan, Model, and Measurement Settings	144
Calculating Potential Maximum Frame Rate ..	144
Protocol Output	144
Remote Operation	145
Gocator Device Files	146
Live Files	146
Log File	146
Job Files	147
Job File Components	147
Accessing Files and Components	148
Configuration	148
Setup	149
Filters	150
XSmoothing	150
YSmoothing	150
XGapFilling	151
YGapFilling	151
XMedian	151
YMedian	151
XDecimation	152
YDecimation	152
XSlope	152
YSlope	152
Trigger	153
Layout	154
Alignment	155
Disk	156
Bar	156
Plate	156
Devices / Device	156
Tracking	159
Material	160
IndependentExposures	162
SurfaceGeneration	162
FixedLength	162
VariableLength	163
Rotational	163
SurfaceSections	163
ProfileGeneration	163

FixedLength	164
VariableLength	164
Rotational	164
PartDetection	165
EdgeFiltering	166
PartMatching	166
Edge	167
BoundingBox	167
Ellipse	167
Replay	167
RecordingFiltering	168
Conditions/AnyMeasurement	168
Conditions/AnyData	168
Conditions/Measurement	168
Streams/Stream (Read-only)	169
ToolOptions	169
MeasurementOptions	170
FeatureOptions	170
StreamOptions	171
Tools	171
Profile Types	171
ProfileFeature	171
ProfileLine	172
ProfileRegion2d	172
Surface Types	172
Region3D	172
SurfaceFeature	172
SurfaceRegion2d	173
Geometric Feature Types	173
Parameter Types	173
ProfileArea	175
ProfileBoundingBox	177
ProfileBridgeValue	178
ProfileCircle	180
ProfileDimension	181
ProfileGroove	183
ProfileIntersect	185
ProfileLine	186
ProfilePanel	188
ProfilePosition	190
ProfileStrip	192
Script	194

SurfaceBoundingBox	194	Get States	238
SurfaceCsHole	196	Log In/Out	240
SurfaceDimension	199	Change Password	240
SurfaceEllipse	201	Set Buddy	241
SurfaceHole	202	List Files	241
SurfaceOpening	205	Copy File	241
SurfacePlane	207	Read File	242
SurfacePosition	209	Write File	242
SurfaceStud	210	Delete File	243
SurfaceVolume	212	Get Default Job	243
Tool	214	Set Default Job	244
Tool	216	Get Loaded Job	244
Custom	217	Get Alignment Reference	245
Output	218	Set Alignment Reference	245
Ethernet	218	Clear Alignment	245
Ascii	220	Get Timestamp	246
EIP	221	Get Encoder	246
Modbus	221	Reset Encoder	246
Digital0 and Digital1	221	Start	247
Analog	222	Scheduled Start	247
Serial	223	Stop	248
Selcom	223	Get Auto Start Enabled	248
Ascii	224	Set Auto Start Enabled	248
Transform	224	Start Alignment	249
Device	225	Start Exposure Auto-set	249
Part Models	226	Software Trigger	250
Edge Points	226	Schedule Digital Output	250
Configuration	227	Schedule Analog Output	251
Protocols	228	Ping	251
Gocator Protocol	228	Reset	252
Data Types	229	Backup	252
Commands	229	Restore	253
Discovery Commands	230	Restore Factory	253
Get Address	230	Get Recording Enabled	254
Set Address	231	Set Recording Enabled	254
Get Info	232	Clear Replay Data	255
Control Commands	233	Get Playback Source	255
Protocol Version	234	Set Playback Source	255
Get Address	234	Simulate	256
Set Address	235	Seek Playback	256
Get System Info	235	Step Playback	257
Get System Info	237	Playback Position	257

Clear Measurement Stats	258	Stamp	284
Clear Log	258	Measurement Registers	285
Simulate Unaligned	258	EtherNet/IP Protocol	287
Acquire	259	Concepts	287
Acquire Unaligned	259	Basic Object	288
Create Model	260	Identity Object (Class 0x01)	288
Detect Edges	260	TCP/IP Object (Class 0xF5)	288
Add Tool	260	Ethernet Link Object (Class 0xF6)	288
Add Measurement	261	Assembly Object (Class 0x04)	289
Read File (Progressive)	261	Command Assembly	289
Export CSV (Progressive)	262	Sensor State Assembly	290
Export Bitmap (Progressive)	263	Sample State Assembly	291
Upgrade Commands	264	ASCII Protocol	293
Start Upgrade	264	Connection Settings	293
Start Upgrade Extended	265	Ethernet Communication	293
Get Upgrade Status	265	Serial Communication	293
Get Upgrade Log	265	Polling Operation Commands (Ethernet Only)	294
Results	266	Command and Reply Format	294
Data Results	266	Special Characters	295
Stamp	267	Control Commands	295
Video	267	Start	295
Profile	268	Stop	296
Resampled Profile	269	Trigger	296
Profile Intensity	269	LoadJob	296
Surface	270	Stamp	297
Surface Intensity	271	Stationary Alignment	297
Surface Section	271	Moving Alignment	298
Surface Section Intensity	272	Clear Alignment	298
Measurement	273	Data Commands	298
Operation Result	273	Result	299
Exposure Calibration Result	274	Value	299
Edge Match Result	274	Decision	300
Bounding Box Match Result	275	Health Commands	301
Ellipse Match Result	275	Health	301
Health Results	275	Standard Result Format	301
Modbus Protocol	280	Custom Result Format	302
Concepts	280	Selcom Protocol	303
Messages	280	Troubleshooting	304
Registers	281	Specifications	306
Control Registers	282	Gocator 2345, 2381 & 2385	306
Output Registers	283	Gocator 2345	309
State	283	Gocator 2381	312

Gocator 2385	315
Gocator Power/LAN Connector	317
Grounding Shield	318
Power	318
Laser Safety Input	319
Gocator I/O Connector	320
Grounding Shield	320
Digital Outputs	320
Inverting Outputs	321
Digital Input	321
Analog Output	323
Software Licenses	324

Introduction

Gocator laser profile sensors are designed for distance measurement and control applications. Gocator sensors are configured using a web browser and can be connected to a variety of input and output devices.

This documentation describes how to connect, configure, and use a Gocator. It also contains reference information on the device's protocols and job files. The documentation applies to the following sensors:

- Gocator 2345
- Gocator 2381
- Gocator 2385



C revision Gocator sensors are only supported by firmware version 4.5 SR1 or later. These sensors are compatible with SDK applications built with version 4.x of the SDK. The sensors are also compatible with jobs created on sensors running firmware 4.x.

Notational Conventions

This documentation uses the following notational conventions:



Follow these safety guidelines to avoid potential injury or property damage.



Consider this information in order to make best use of the product.


Safety and Maintenance

The following sections describe the safe use and maintenance of Gocator sensors.


Laser Safety

Gocator sensors contain semiconductor lasers that emit visible or invisible light and are designated as Class 2M or Class 3R, depending on the chosen laser option. See *Laser Classes* on the next page for more information on the laser classes used in Gocator sensors.

Gocator sensors are referred to as *components*, indicating that they are sold only to qualified customers for incorporation into their own equipment. These sensors do not incorporate safety items that the customer may be required to provide in their own equipment (e.g., remote interlocks, key control; refer to the references below for detailed information). As such, these sensors do not fully comply with the standards relating to laser products specified in IEC 60825-1 and FDA CFR Title 21 Part 1040.

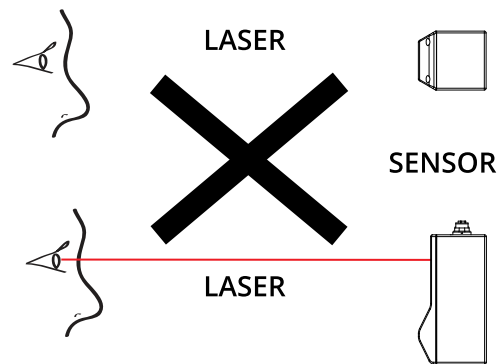

WARNING: DO NOT LOOK DIRECTLY INTO THE LASER BEAM

 Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

References

1. *International standard IEC 60825-1 (2001-08) consolidated edition*, Safety of laser products – Part 1: Equipment classification, requirements and user's guide.
2. *Technical report 60825-10*, Safety of laser products – Part 10. Application guidelines and explanatory notes to IEC 60825-1.
3. *Laser Notice No. 50*, FDA and CDRH <http://www.fda.gov/cdrh/rad-health.html>

Laser Classes

Class 2 laser components

Class 2 laser components are considered to be safe, provided that:

- The user's blink reflex can terminate exposure (in under 0.25 seconds).
- Users do not need to look repeatedly at the beam or reflected light.
- Exposure is only accidental.

Class 2M laser components

Class 2M laser components should not cause permanent damage to the eye under reasonably foreseeable conditions of operation, provided that:

- No optical aids are used (these could focus the beam).
- The user's blink reflex can terminate exposure (in under 0.25 seconds).
- Users do not need to look repeatedly at the beam or reflected light.
- Exposure is only accidental.

Class 3R laser components

Class 3R laser products emit radiation where direct intrabeam viewing is potentially hazardous, but the risk is lower with 3R lasers than for 3B lasers. Fewer manufacturing requirements and control measures for 3R laser users apply than for 3B lasers.

- Eye protection and protective clothing are not required.
- The laser beam must be terminated at the end of an appropriate path.
- Avoid unintentional reflections.
- Personnel must be trained in working with laser equipment.

For more information, see *Precautions and Responsibilities* below.

Precautions and Responsibilities


Precautions specified in IEC 60825-1 and FDA CFR Title 21 Part 1040 are as follows:

Requirement	Class 2M	Class 3R
Remote interlock	Not required	Not required
Key control	Not required	Not required
Power-on delays	Not required	Not required
Beam attenuator	Not required	Not required
Emission indicator	Not required	Not required
Warning signs	Not required	Not required
Beam path	Not required	Terminate beam at useful length

Requirement	Class 2M	Class 3R
Specular reflection	Not required	Prevent unintentional reflections
Eye protection	Not required	Not required
Laser safety officer	Not required	Not required
Training	Not required	Required for operator and maintenance personnel

Nominal Ocular Hazard Distance (NOHD)

Nominal Ocular Hazard Distance (NOHD) is the distance from the source at which the intensity or the energy per surface unit becomes lower than the Maximum Permissible Exposure (MPE) on the cornea and on the skin.

 The laser beam is considered dangerous if the operator is closer to the source than the NOHD.

The following table provides the NOHD values for each Gocator model and laser class, assuming continuous operation of the laser. As a configurable device, Gocator lets you set the laser exposure (laser on-time) independently of the frame period (total cycle time for data acquisition). Continuous operation of the laser means that the laser exposure is configured to be identical to the frame period, which is also referred to as 100% duty cycle. However, in many applications the laser exposure can be smaller than the frame period (less than 100% duty cycle), thereby reducing the NOHD. The table therefore shows the worst-case NOHD.

Model	Laser Class	Wavelength (nm)	Class I NOHD (mm)	Class II NOHD (mm)
2345	2M	660	410	-
2345	3R	660	1850	736
2381	2	660	1310	-
2385	2M	660	4115	-
2385	3R	660	18511	7367

Systems Sold or Used in the USA

Systems that incorporate laser components or laser products manufactured by LMI Technologies require certification by the FDA.

Customers are responsible for achieving and maintaining this certification.

Customers are advised to obtain the information booklet *Regulations for the Administration and Enforcement of the Radiation Control for Health and Safety Act of 1968: HHS Publication FDA 88-8035*.

This publication, containing the full details of laser safety requirements, can be obtained directly from the FDA, or downloaded from their web site at <https://www.fda.gov/Radiation-EmittingProducts/ElectronicProductRadiationControlProgram/default.htm>.

Electrical Safety



Failure to follow the guidelines described in this section may result in electrical shock or equipment damage.

Sensors should be connected to earth ground

All sensors should be connected to earth ground through their housing. All sensors should be mounted on an earth grounded frame using electrically conductive hardware to ensure the housing of the sensor is connected to earth ground. Use a multi-meter to check the continuity between the sensor connector and earth ground to ensure a proper connection.

Minimize voltage potential between system ground and sensor ground

Care should be taken to minimize the voltage potential between system ground (ground reference for I/O signals) and sensor ground. This voltage potential can be determined by measuring the voltage between Analog_out- and system ground. The maximum permissible voltage potential is 12 V but should be kept below 10 V to avoid damage to the serial and encoder connections

See *Gocator I/O Connector* on page 320 for a description of the connector pins.

Use a suitable power supply

The +24 to +48 VDC power supply used with Gocator sensors should be an isolated supply with inrush current protection or be able to handle a high capacitive load.

Use care when handling powered devices

Wires connecting to the sensor should not be handled while the sensor is powered. Doing so may cause electrical shock to the user or damage to the equipment.

Handling, Cleaning, and Maintenance



Dirty or damaged sensor windows (emitter or camera) can affect accuracy. Use caution when handling the sensor or cleaning the sensor's windows.

Keep sensor windows clean

Use dry, clean air to remove dust or other dirt particles. If dirt remains, clean the windows carefully with a soft, lint-free cloth and non-streaking glass cleaner or isopropyl alcohol. Ensure that no residue is left on the windows after cleaning.

Turn off lasers when not in use

LMI Technologies uses semiconductor lasers in Gocator sensors. To maximize the lifespan of the sensor, turn off the laser when not in use.

Avoid excessive modifications to files stored on the sensor

Settings for Gocator sensors are stored in flash memory inside the sensor. Flash memory has an expected lifetime of 100,000 writes. To maximize lifetime, avoid frequent or unnecessary file save operations.

Environment and Lighting

Avoid strong ambient light sources

The imager used in this product is highly sensitive to ambient light hence stray light may have adverse effects on measurement. Do not operate this device near windows or lighting fixtures that could influence measurement. If the unit must be installed in an environment with high ambient light levels, a lighting shield or similar device may need to be installed to prevent light from affecting measurement.

Avoid installing sensors in hazardous environments

To ensure reliable operation and to prevent damage to Gocator sensors, avoid installing the sensor in locations

- that are humid, dusty, or poorly ventilated;
- with a high temperature, such as places exposed to direct sunlight;
- where there are flammable or corrosive gases;
- where the unit may be directly subjected to harsh vibration or impact;
- where water, oil, or chemicals may splash onto the unit;
- where static electricity is easily generated.

Ensure that ambient conditions are within specifications

Gocator sensors are suitable for operation between 0–50° C and 25–85% relative humidity (non-condensing). Measurement error due to temperature is limited to 0.015% of full scale per degree C.

The storage temperature is -30–70° C.



The sensor must be heat-sunk through the frame it is mounted to. When a sensor is properly heat sunk, the difference between ambient temperature and the temperature reported in the sensor's health channel is less than 15° C.



Gocator sensors are high-accuracy devices, and the temperature of all of its components must therefore be in equilibrium. When the sensor is powered up, a warm-up time of at least one hour is required to reach a consistent spread of temperature in the sensor.

Getting Started


The following sections provide system and hardware overviews, in addition to installation and setup procedures.

System Overview

Gocator sensors can be installed and used in a variety of scenarios. Sensors can be connected as standalone devices.

Standalone System


Standalone systems are typically used when only a single Gocator sensor is required. The sensor can be connected to a computer's Ethernet port for setup and can also be connected to devices such as encoders, photocells, or PLCs.

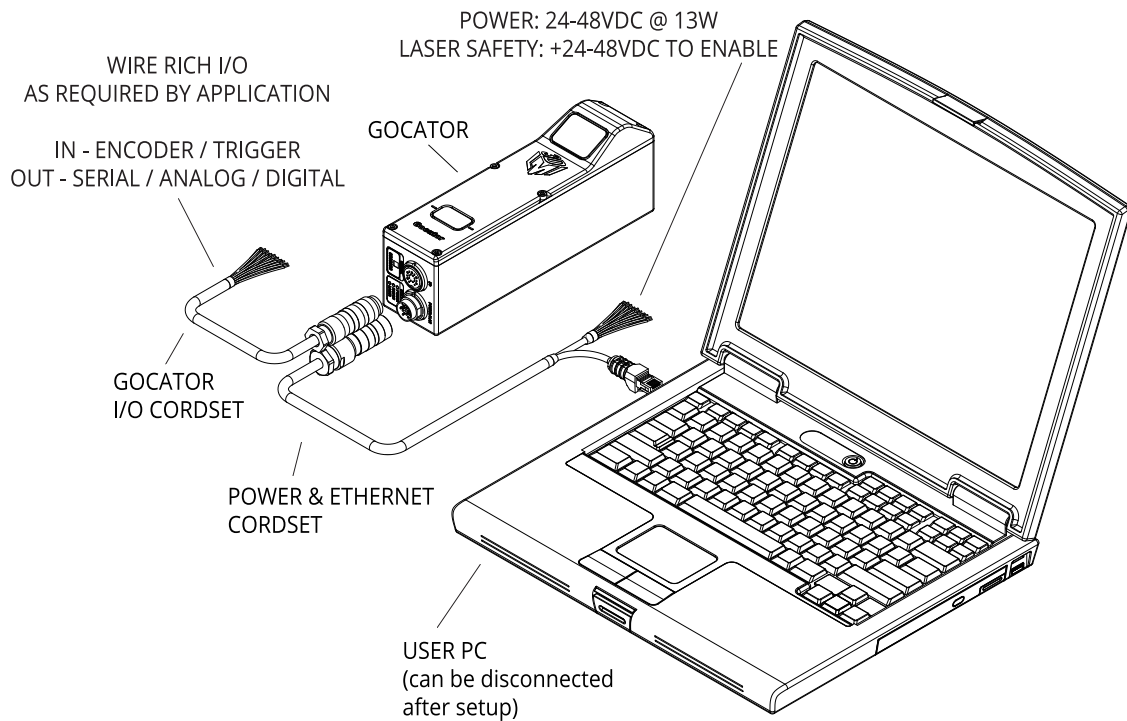

Hardware Overview

The following sections describe Gocator and its associated hardware.

Gocator Sensor

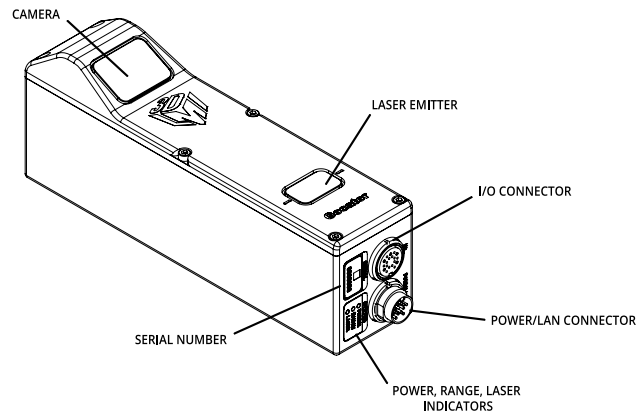

Gocator 2345


Item	Description
Camera	Observes laser light reflected from target surfaces.
Laser Emitter	Emits structured light for laser profiling.
I/O Connector	Accepts input and output signals.
Power / LAN Connector	Accepts power and laser safety signals and connects to 1000 Mbit/s Ethernet network.
Power Indicator	Illuminates when power is applied (blue).
Range Indicator	Illuminates when camera detects laser light and is within the target range (green).
Laser Indicator	Illuminates when laser safety input is active (amber).
Serial Number	Unique sensor serial number.

Gocator Cordsets

Gocator sensors use two types of cordsets.

The Power & Ethernet cordset provides power and laser safety interlock to the sensor. It is also used for sensor communication via 1000 Mbit/s Ethernet with a standard RJ45 connector.

The Gocator I/O cordset provides digital I/O connections and analog outputs.

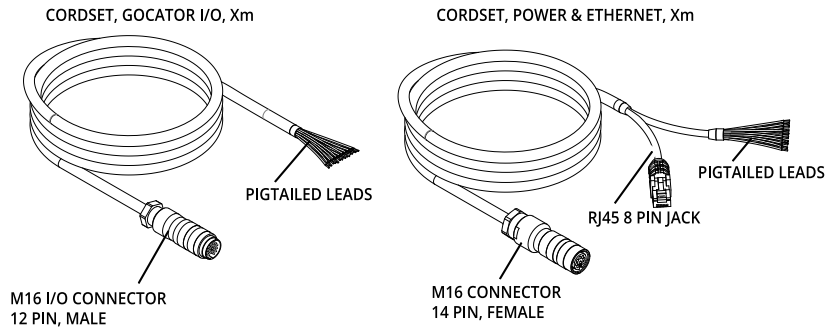

The maximum cordset length is 60 m.


See *Gocator I/O Connector* on page 320 and *Gocator Power/LAN Connector* on page 317 for pinout details.

Installation

The following sections provide grounding, mounting, and orientation information.

Grounding: Gocator

Gocators should be grounded to the earth/chassis through their housings and through the grounding shield of the Power I/O cordset. Gocator sensors have been designed to provide adequate grounding through the use of M5 x 0.8 pitch mounting screws. Always check grounding with a multi-meter to ensure electrical continuity between the mounting frame and the Gocator's connectors.


 The frame or electrical cabinet that the Gocator is mounted to must be connected to earth ground.

Grounding: Recommended Practices for Cordsets

If you need to minimize interference with other equipment, you can ground the Power & Ethernet or the Power & Ethernet to Master cordset (depending on which cordset you are using) by terminating the shield of the cordset before the split. The most effective grounding method is to use a 360-degree clamp.

CORDSET, POWER & ETHERNET, Xm

CORDSET, GOCATOR POWER & ETHERNET TO MASTER, Xm

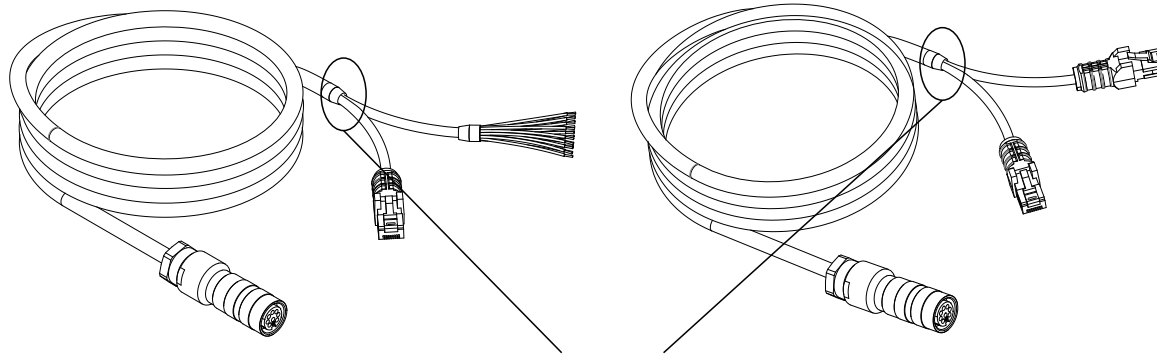

Attach the 360-degree clamp before the split

To terminate the cordset's shield:

1. Expose the cordset's braided shield by cutting the plastic jacket before the point where the cordset splits.



2. Install a 360-degree ground clamp.




Mounting


Sensors should be mounted using a model-dependent number of screws. Some models also provide the option to mount using bolts in through-body holes. Refer to the Dimension drawings of the sensors in *Specifications* on page 306 for the appropriate screw diameter, pitch, and length, and bolt hole diameter.




Proper care should be taken in order to ensure that the internal threads are not damaged from cross-threading or improper insertion of screws.

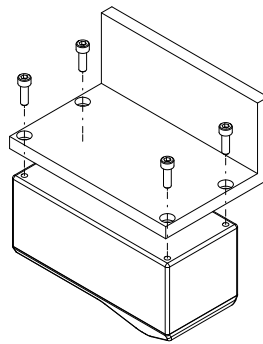


Sensors should not be installed near objects that might occlude a camera's view of the laser.

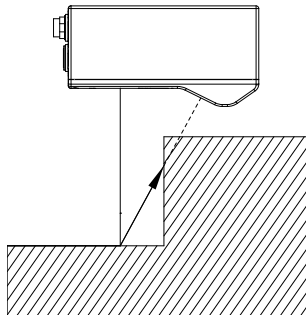

Sensors should not be installed near surfaces that might create unanticipated laser reflections.

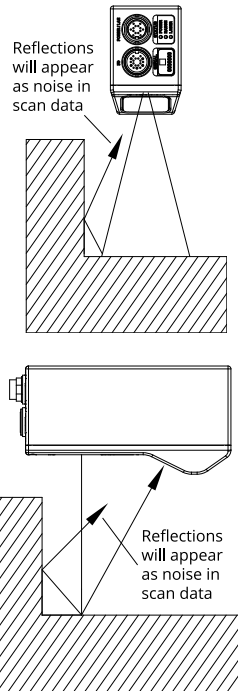

To ensure optimal performance, mount Gocator 2345 and 2385 sensors at no more than +/- 15 degrees around the Y axis.

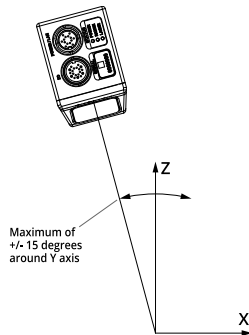


The sensor must be heat sunk through the frame it is mounted to. When a sensor is properly heat sunk, the difference between ambient temperature and the temperature reported in the sensor's health channel is less than 15° C.



Gocator sensors are high-accuracy devices. The temperature of all of its components must be in equilibrium. When the sensor is powered up, a warm-up time of at least one hour is required to reach a consistent spread of temperature within the sensor.

Network Setup


The following sections provide procedures for client PC and Gocator network setup.

 DHCP is not recommended for Gocator sensors. If you choose to use DHCP, the DHCP server should try to preserve IP addresses. Ideally, you should use static IP address assignment (by MAC address) to do this.

Client Setup


Sensors are shipped with the following default network configuration:

Setting	Default
DHCP	Disabled
IP Address	192.168.1.10
Subnet Mask	255.255.255.0
Gateway	0.0.0.0

 All Gocator sensors are configured to 192.168.1.10 as the default IP address.

To connect to a sensor for the first time:


1. Connect cables and apply power.
Sensor cabling is illustrated in *System Overview* on page 15.

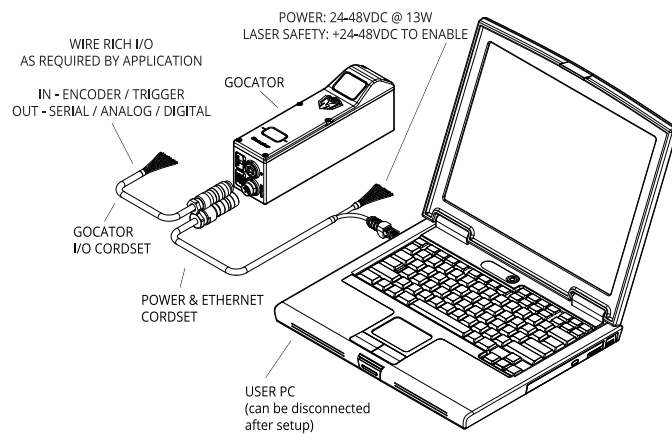

2. Change the client PC's network settings.


Windows 7


- a. Open the Control Panel, select **Network and Sharing Center**, and then click **Change Adapter Settings**.
- b. Right-click the network connection you want to modify, and then click **Properties**.
- c. On the **Networking** tab, click **Internet Protocol Version 4 (TCP/IPv4)**, and then click **Properties**.
- d. Select the **Use the following IP address** option.
- e. Enter IP Address "192.168.1.5" and Subnet Mask "255.255.255.0", then click **OK**.

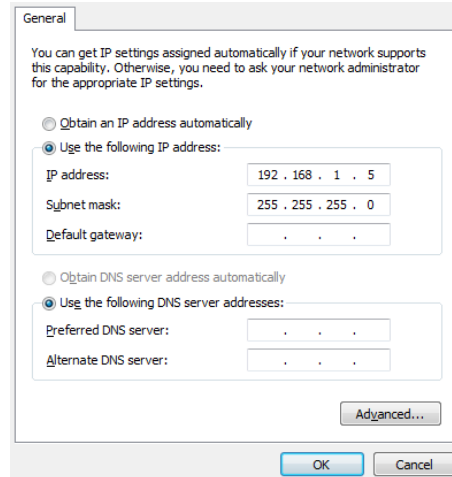

Mac OS X v10.6

- a. Open the Network pane in **System Preferences** and select **Ethernet**.
- b. Set **Configure** to **Manually**.
- c. Enter IP Address "192.168.1.5" and Subnet Mask "255.255.255.0", then click **Apply**.

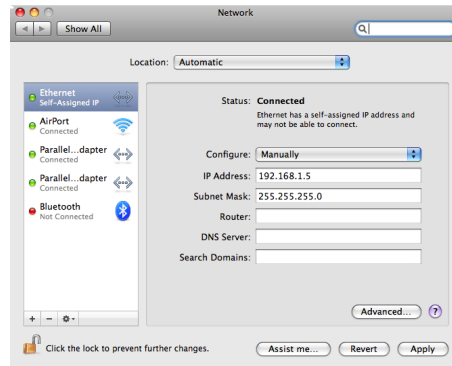

 See *Troubleshooting* on page 304 if you experience any problems while attempting to establish a connection to the sensor.

Gocator Setup

The Gocator is shipped with a default configuration that will produce laser profiles for molten metal levels.


The following procedure describes how to set up a sensor system for operations. After you have completed the setup, you can perform laser profiling to verify basic sensor operation.


To configure a sensor system:

1. Power up the sensor.
The power indicator (blue) should turn on immediately.
2. Enter the sensor's IP address (192.168.1.10) in a web browser.
The Gocator interface loads.
By default, Gocator 2345 and 2385 sensors are secured with passwords. For more information on passwords, see *Security* on page 49.




3. Go to the **Manage** page.
4. Ensure that Replay mode is off (the slider is set to the left).



 Replay mode disables measurements.



5. Ensure that the Laser Safety Switch is enabled or the Laser Safety input is high.
6. Go to the **Scan** page.
7. Observe the profile in the data viewer

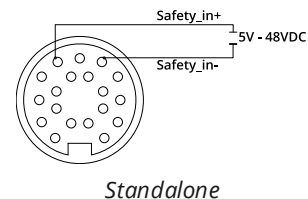

Next Steps

After you complete the steps in this section, the Gocator measurement system is ready to be configured for an application using the software interface. The interface is explained in the following sections:

Management and Maintenance (page 43)

Contains settings for sensor system layout, network, motion and alignment, handling jobs, and sensor maintenance.

Scan Setup and Alignment (page 55)

Contains settings for scan mode, trigger source, detailed sensor configuration, and performing alignment.

Measurement (page 94)

Contains built-in measurement tools and their settings.

Output (page 118)

Contains settings for configuring output protocols used to communicate measurements to external devices.

Dashboard (page 128)

Provides monitoring of measurement statistics and sensor health.

Toolbar (page 32)

Controls sensor operation, manages jobs, and replays recorded measurement data.


Gocator Web Interface

The following sections describe the Gocator web interface.

Unblocking Flash

The current version of the Gocator web interface uses the Adobe Flash software platform. Many browsers currently block Adobe Flash by default due to new web standards and security concerns.

If you have issues running the Gocator web interface in your browser, the instructions provided below should help you get up and running.


 LMI is currently working to move the Gocator web interface off Adobe Flash to a WebGL-based interface in an upcoming release.

Google Chrome


Recent versions of Google Chrome aggressively block Flash, even ignoring site exceptions. Use the following instructions to unblock Flash in Chrome 61 and later.

To unblock Flash in Google Chrome:


1. In the Google Chrome browser address bar, type `chrome://settings/content/flash` and press Enter.
2. In the settings page that displays, enable **Allow sites to run Flash** and disable **Ask first**.

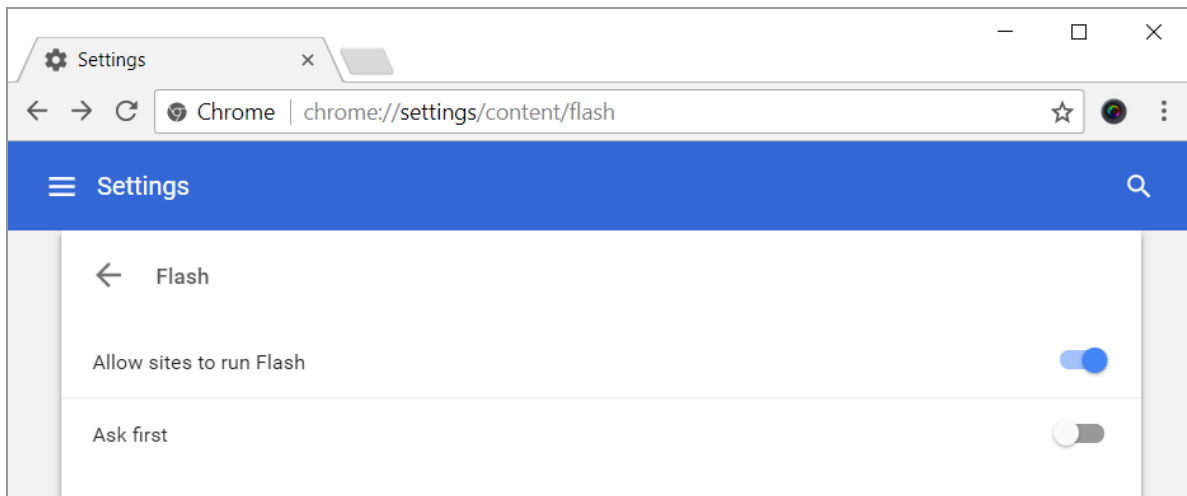

3. Restart Chrome by clicking **Relaunch Now**.

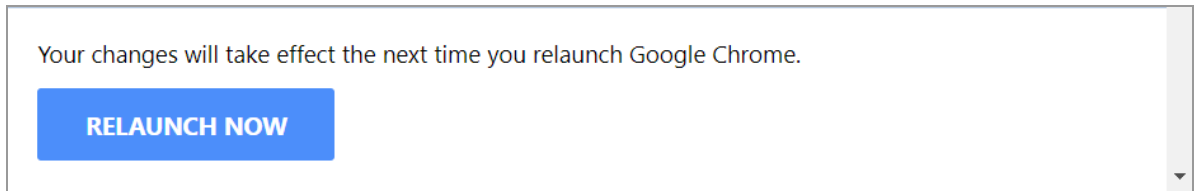

4. As the Gocator interface is loading, click the Plugins Blocked icon (🚫) to the right of the address bar and click "Allow Flash content this time."

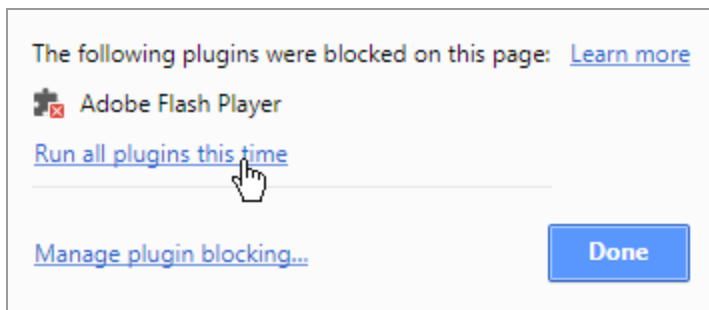


You must perform this step *each time* you launch the Gocator interface in Google Chrome.

Internet Explorer


Use the following steps to unblock Flash in Internet Explorer 11.

To unblock Flash in Internet Explorer:


1. In Internet Explorer, click the settings icon (⚙️) and choose the **Manage add-ons** item from the drop-down menu.

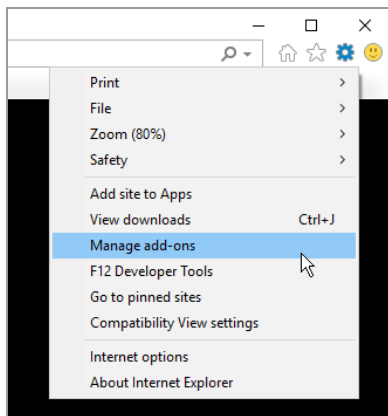

2. In the **Manage add-ons** dialog, scroll down to the **Shockwave Flash Object** extension and click on it.

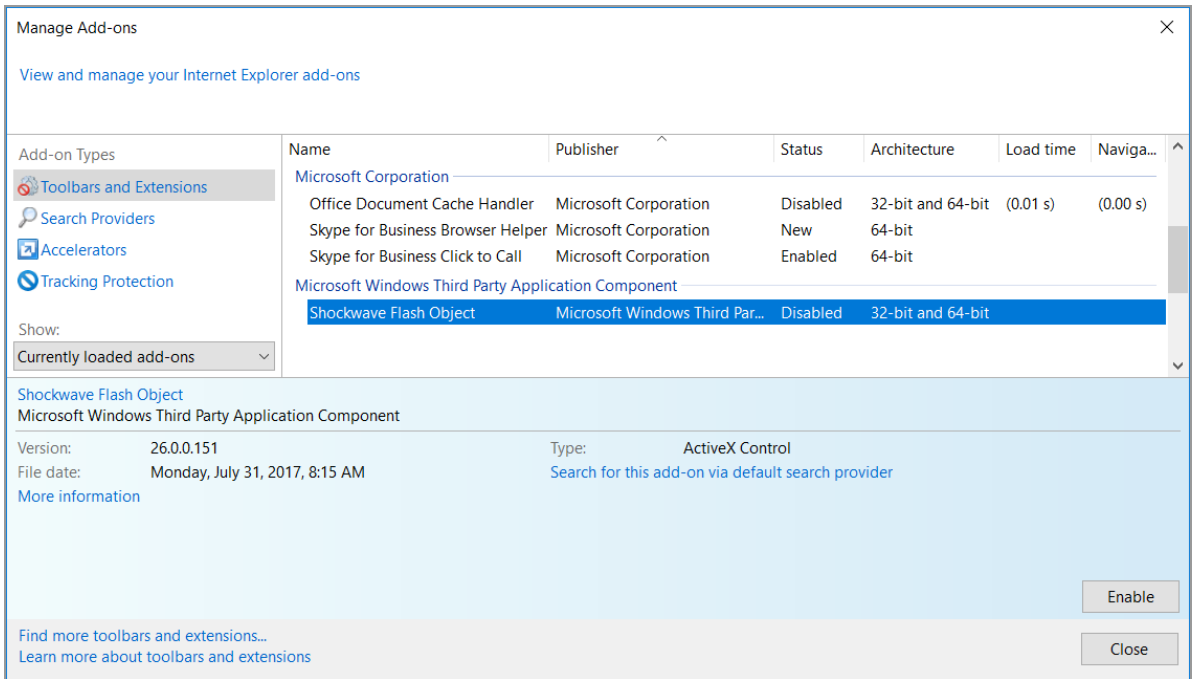

If you don't see Shockwave Flash Object in the list, you may need to choose **All add-ons** in the **Show** drop-down.

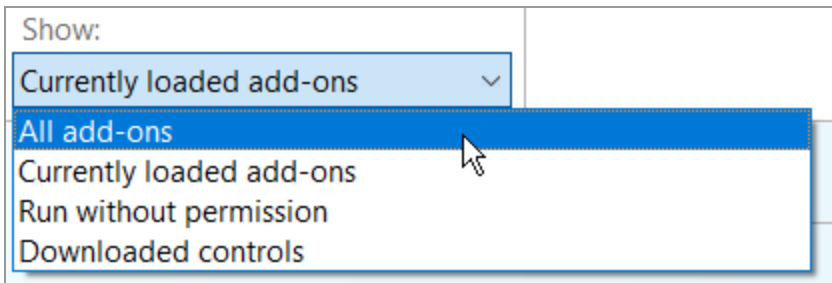


3. In the dialog, click **Enable**.

Firefox


Use the following steps to unblock Flash in Firefox.

To unblock Flash in Firefox:

1. In Firefox, click the menu icon (☰) and then click the **Add-ons** icon from the drop-down menu.

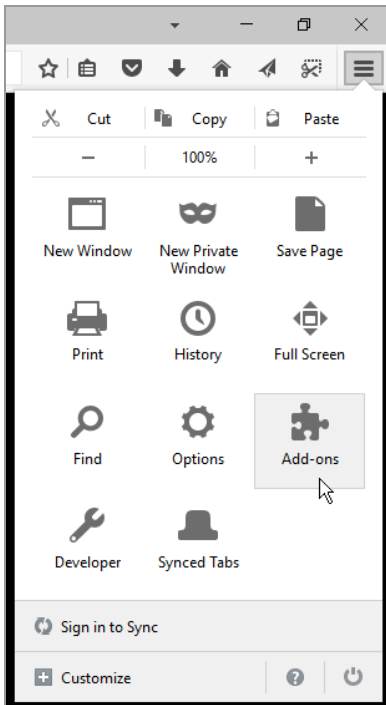

2. In the Add-ons Manager, click the Plugins category to the left and choose **Always Activate** next to Shockwave Flash.

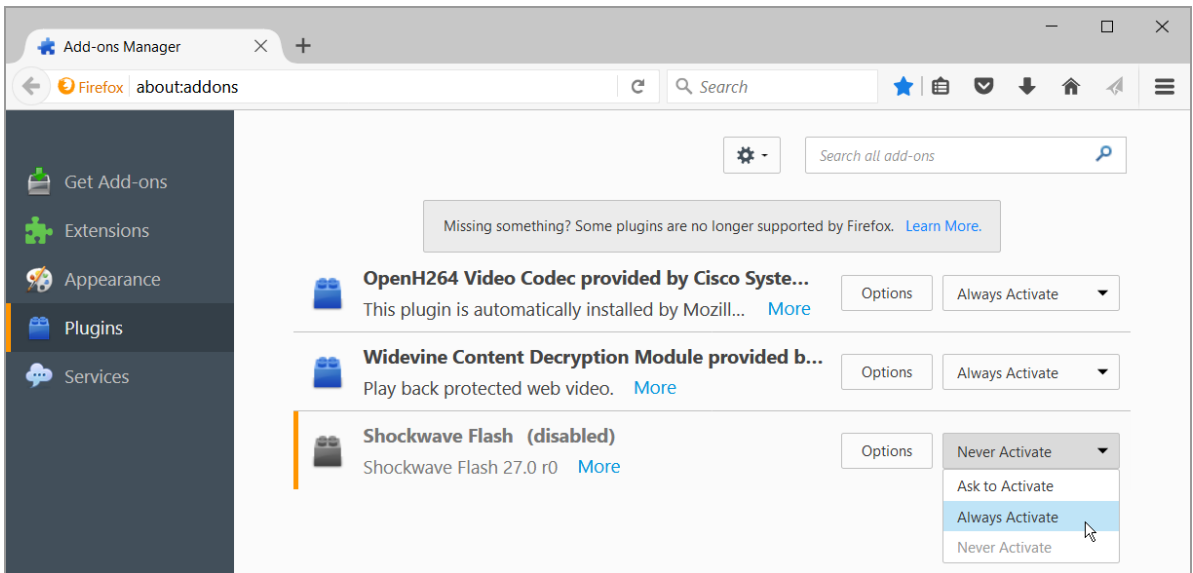


Microsoft Edge


Use the following steps to unblock Flash in Microsoft Edge.

To unblock Flash in Microsoft Edge:


1. In Microsoft Edge, click the menu icon (☰) and then choose the **Settings** item from the drop-down menu.

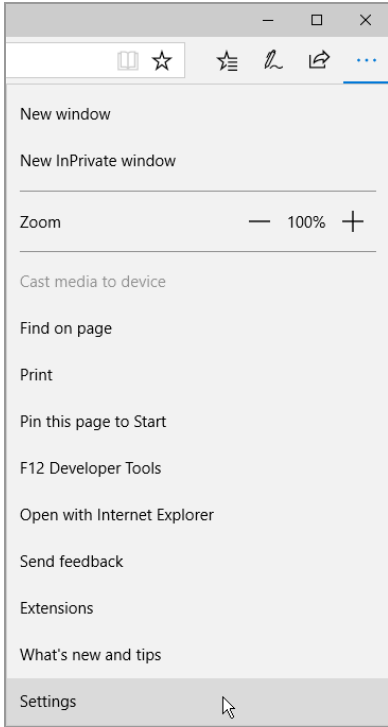

2. In the Settings drop-down, scroll down and click **View advanced settings**.

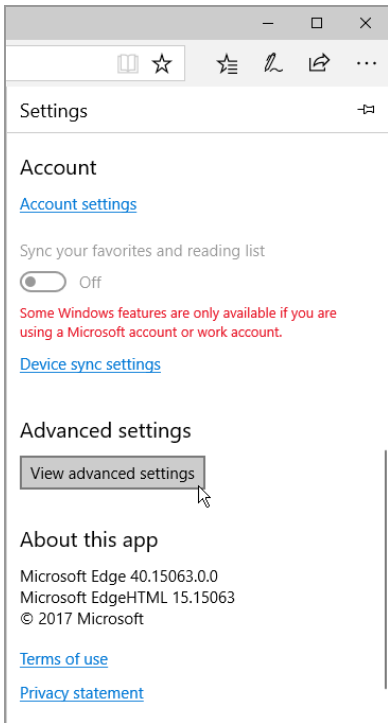


3. Under **Advanced settings**, set **Use Adobe Flash Player** to **On**.

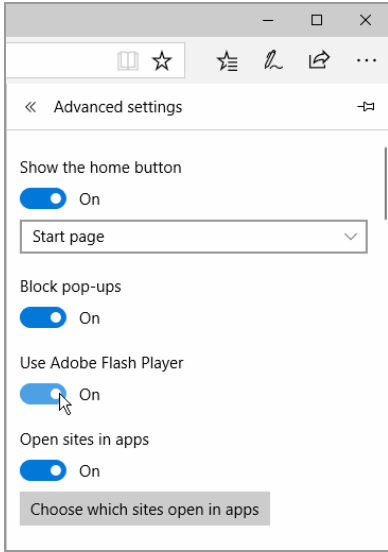

User Interface Overview


Gocator sensors are configured by connecting to a *Main* sensor with a web browser. The Gocator web interface is illustrated below.

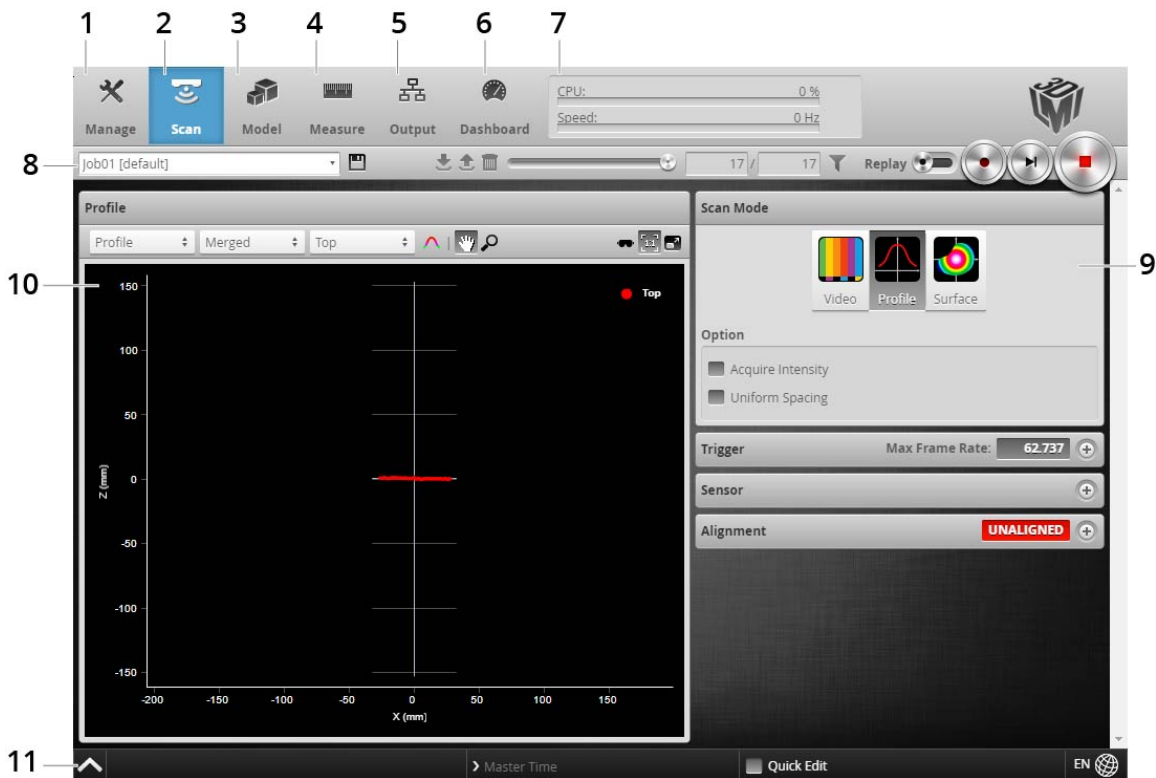

Element	Description	
1	Manage page	Contains settings for sensor system layout, network, motion and alignment, handling jobs, and sensor maintenance. See <i>Management and Maintenance</i> on page 43.
2	Scan page	Contains settings for scan mode, trigger source, detailed sensor configuration, and performing alignment. See <i>Scan Setup and Alignment</i> on page 55.
3	Model page	Lets you set up sections and part matching.
4	Measure page	Contains built-in measurement tools and their settings. See <i>Measurement</i> on page 94.
5	Output page	Contains settings for configuring output protocols used to communicate measurements to external devices. See <i>Output</i> on page 118.
6	Dashboard page	Provides monitoring of measurement statistics and sensor health. See <i>Dashboard</i> on page 128.
7	CPU Load and Speed	Provides important sensor performance metrics. See <i>Metrics Area</i> on page 40.
8	Toolbar	Controls sensor operation, manages jobs, and filters and replays recorded measurement data. See <i>Toolbar</i> below.
9	Configuration area	Provides controls to configure scan and measurement tool settings.
10	Data viewer	Displays sensor data, tool setup controls, and measurements. See <i>Data Viewer</i> on page 95 for its use when the Measure page is active.
11	Status bar	Displays log messages from the sensor (errors, warnings, and other information) and frame information , and lets you switch the interface language . For more information,

Toolbar

The toolbar is used for performing operations such as managing jobs, working with replay data, and starting and stopping the sensor.

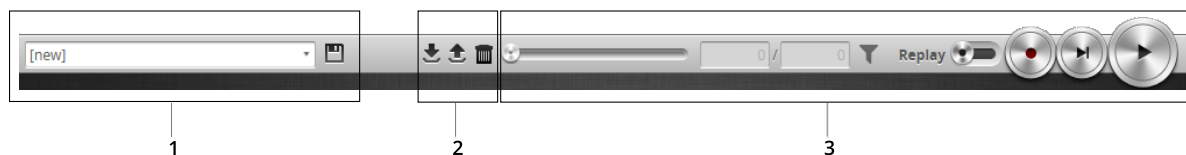

Element	Description	
1	Job controls	For saving and loading jobs. For more information, see <i>Creating, Saving and Loading Jobs (Settings)</i> on the next page.
2	Replay data controls	For downloading, uploading, and exporting recorded data. For more information, see <i>Downloading, Uploading, and Exporting Replay Data</i> on page 37.
3	Sensor operation / replay control	Use the sensor operation controls to start sensors, enable and

Element	Description
	filter recording, and control recorded data. For more information, see <i>Recording, Playback, and Measurement Simulation</i> on the next page.

Creating, Saving and Loading Jobs (Settings)

A Gocator can store several hundred jobs. Being able to switch between jobs is useful when a Gocator is used with different constraints during separate production runs. For example, width decision minimum and maximum values might allow greater variation during one production run of a part, but might allow less variation during another production run, depending on the desired grade of the part.

Most of the settings that can be changed in the Gocator's web interface, such as the ones in the **Manage**, **Measure**, and **Output** pages, are temporary until saved in a job file. Each sensor can have multiple job files. If there is a job file that is designated as the default, it will be loaded automatically when the sensor is reset.


When you change sensor settings using the Gocator web interface in the emulator, some changes are saved automatically, while other changes are temporary until you save them manually. The following table lists the types of information that can be saved in a sensor.

Setting Type	Behavior
Job	Most of the settings that can be changed in the Gocator's web interface, such as the ones in the Manage , Measure , and Output pages, are temporary until saved in a job file. Each sensor can have multiple job files. If there is a job file that is designated as the default, it will be loaded automatically when the sensor is reset.
Network Address	Network address changes are saved when you click the Save button in Networking on the Manage page. The sensor must be reset before changes take effect.

The job drop-down list in the toolbar shows the jobs stored in the sensor. The job that is currently active is listed at the top. The job name will be marked with "[unsaved]" to indicate any unsaved changes.



To create a job:

1. Choose **[New]** in the job drop-down list and type a name for the job.
2. Click the **Save** button  or press **Enter** to save the job.
The job is saved to sensor storage using the name you provided. Saving a job automatically sets it as the default, that is, the job loaded when then sensor is restarted.

To save a job:

- Click the **Save** button .

The job is saved to sensor storage. Saving a job automatically sets it as the default, that is, the job loaded when the sensor is restarted.

To load (switch) jobs:

- Select an existing file name in the job drop-down list.

The job is activated. If there are any unsaved changes in the current job, you will be asked whether you want to discard those changes.

You can perform other job management tasks—such as downloading job files from a sensor to a computer, uploading job files to a sensor from a computer, and so on—in the **Jobs** panel in the **Manage** page. See *Jobs* on page 48 for more information.

Recording, Playback, and Measurement Simulation

Gocator sensors can record and replay recorded scan data, and also simulate measurement tools on recorded data. This feature is most often used for troubleshooting and fine-tuning measurements, but can also be helpful during setup.


Recording and playback are controlled using the toolbar controls.



Recording and playback controls when replay is off

To record live data:

1. Toggle **Replay** mode off by setting the slider to the left in the **Toolbar**.

 Replay mode disables measurements.

2. (Optional) Configure recording filtering.
For more information on recording filtering, see *Recording Filtering* on page 36.
3. Click the **Record** button to enable recording.




The center of the Record button turns red.

When recording is enabled (and replay is off), the sensor will store the most recent data as it runs. Remember to disable recording if you no longer want to record live data. (Press the **Record** button again to disable recording).

4. Press the **Snapshot** button or **Start** button.

The **Snapshot** button records a single frame. The **Start** button will run the sensor continuously and all frames will be recorded, up to available memory. When the memory limit is reached, the oldest data will be discarded.

Newly recorded data is appended to existing replay data unless the sensor job has been modified.

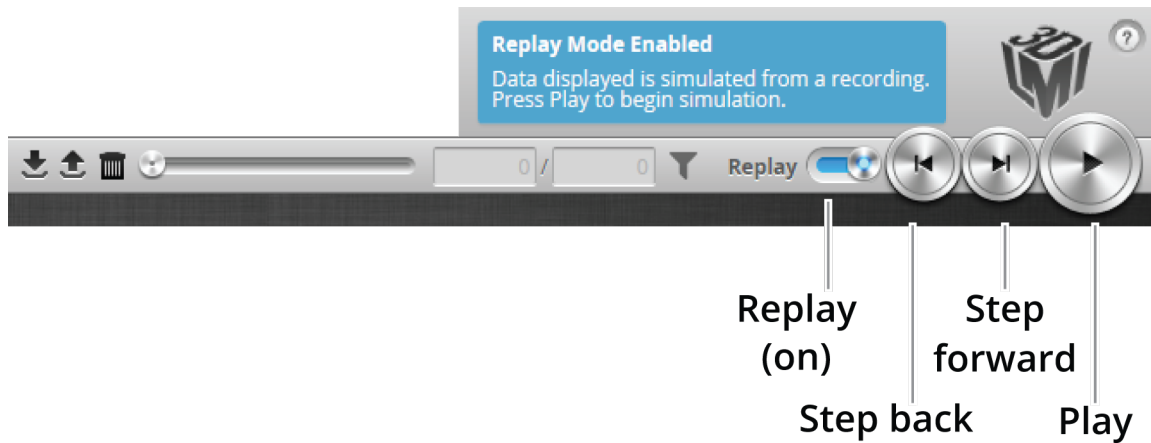

Playback controls when replay is on

To replay data:


1. Toggle **Replay** mode on by setting the slider to the right in the **Toolbar**.
The slider's background turns blue and a Replay Mode Enabled message is displayed.
2. Use the **Replay** slider or the **Step Forward**, **Step Back**, or **Play** buttons to review data.
The **Step Forward** and **Step Back** buttons move and the current replay location backward and forward by a single frame, respectively.
The **Play** button advances the replay location continuously, animating the playback until the end of the replay data.
The **Stop** button (replaces the **Play** button while playing) can be used to pause the replay at a particular location.
The **Replay** slider (or **Replay Position** box) can be used to go to a specific replay frame.

To simulate measurements on replay data:

1. Toggle **Replay** mode on by setting the slider to the right in the **Toolbar**.
The slider's background turns blue and a Replay Mode Enabled message is displayed.
To change the mode, **Replay Protection** must be unchecked.


- Go to the **Measure** page.
Modify settings for existing measurements, add new measurement tools, or delete measurement tools as desired. For information on adding and configuring measurements, see *Measurement* on page 94.
- Use the **Replay Slider**, **Step Forward**, **Step Back**, or **Play** button to simulate measurements.
Step or play through recorded data to execute the measurement tools on the recording.
Individual measurement values can be viewed directly in the data viewer. Statistics on the measurements that have been simulated can be viewed in the **Dashboard** page; for more information on the dashboard, see *Dashboard* on page 128.

To clear replay data:

- Stop the sensor if it is running by clicking the **Stop** button.
- Click the **Clear Replay Data** button .

Recording Filtering

Replay data is often used for troubleshooting. But replay data can contain thousands of frames, which makes finding a specific frame to troubleshoot difficult. Recording filtering lets you choose which frames Gocator records, based on one or more conditions, which makes it easier to find problems.

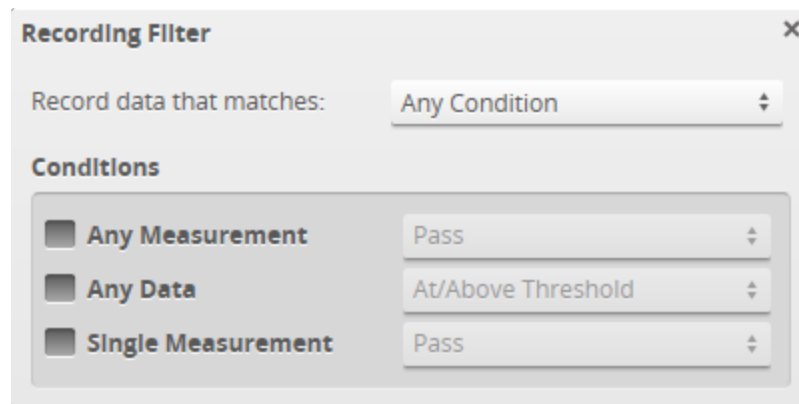

How Gocator treats conditions

Setting	Description
Any Condition	Gocator records a frame when any condition is true.
All Conditions	Gocator only records a frame if all conditions are true.

Conditions


Setting	Description
Any Measurement	Gocator records a frame when <i>any</i> measurement is in the state you select. The following states are supported: <ul style="list-style-type: none"> pass fail or invalid fail and valid valid invalid

Setting	Description
Single Measurement	Gocator records a frame if the measurement with the ID you specify in ID is in the state you select. This setting supports the same states as the Any Measurement setting (see above).
Any Data	<p>At/Above Threshold: Gocator records a frame if the number of valid points in the frame is above the value you specify in Range Count Threshold.</p> <p>Below Threshold: Gocator records a frame if the number of valid points is below the threshold you specify.</p>

To set recording filtering:

1. Make sure recording is enabled by clicking the Record button.




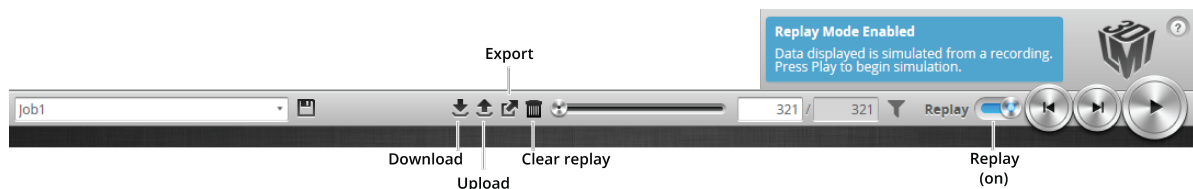
2. Click the Recording Filtering button .
3. In the Recording Filtering dialog, choose how Gocator treats conditions:
For information on the available settings, see *How Gocator treats conditions* on the previous page.
4. Configure the conditions that will cause Gocator to record a frame:
For information on the available settings, see *Conditions* on the previous page.
5. Click the "x" button or outside of the Recording Filtering dialog to close the dialog.
The recording filter icon turns green to show that recording filters have been set.
When you run the sensor, Gocator only records the frames that satisfy the conditions you have set.


Downloading, Uploading, and Exporting Replay Data

Replay data (recorded scan data) can be downloaded from a Gocator to a client computer, or uploaded from a client computer to a Gocator.

Data can also be exported from a Gocator to a client computer in order to process the data using third-party tools.

 You can only upload replay data to the same sensor model that was used to create the data.




 Replay data is not loaded or saved when you load or save jobs.


To download replay data:

1. Click the Download button .

2. In the **File Download** dialog, click **Save**.
3. In the **Save As...** dialog, choose a location, optionally change the name (keeping the .rec extension), and click **Save**.


To upload replay data:

1. Click the Upload button .
The Upload menu appears.

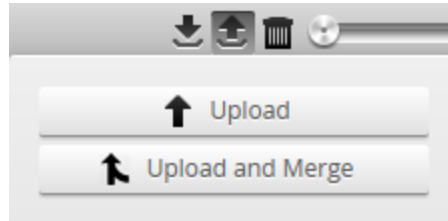


2. In the Upload menu, choose one of the following:
 - **Upload:** Unloads the current job and creates a new unsaved and untitled job from the content of the replay data file.
 - **Upload and merge:** Uploads the replay data and merges the data's associated job with the current job. Specifically, the settings on the **Scan** page are overwritten, but all other settings of the current job are preserved, including any measurements or models.


If you have unsaved changes in the current job, the firmware asks whether you want to discard the changes.

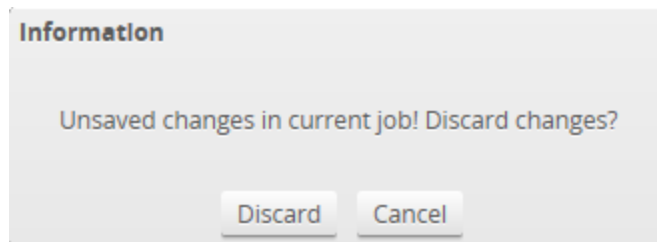


3. Do one of the following:
 - Click **Discard** to discard any unsaved changes.
 - Click **Cancel** to return to the main window to save your changes.
4. If you clicked **Discard**, navigate to the replay data to upload from the client computer and click **OK**.
The replay data is loaded, and a new unsaved, untitled job is created.

Replay data can be exported using the CSV format. If you have enabled **Acquire Intensity** in the **Scan Mode** panel on the **Scan** page, the exported CSV file includes intensity data.

 *Surface* intensity data cannot be exported to the CSV format. It can only be [exported separately as a bitmap](#).

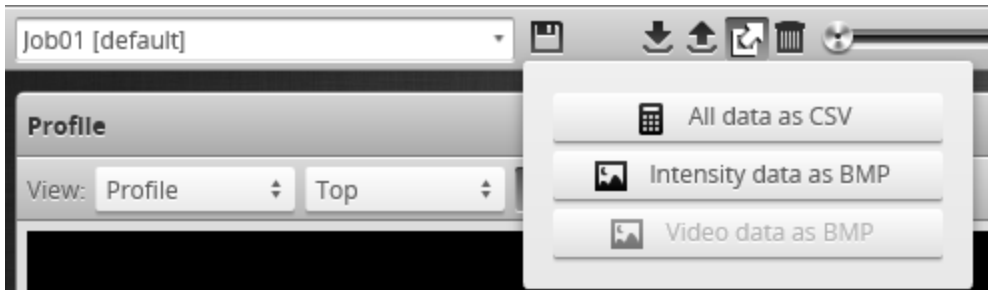


To export replay data in the CSV format:

1. In the **Scan Mode** panel, switch to Profile or Surface.
2. Click the Export button  and select **All Data as CSV**.


In Profile mode, all data in the record buffer is exported. In Surface mode, only data at the current replay location is exported.

Use the playback control buttons to move to a different replay location; for information on playback, see *To replay data in Recording, Playback, and Measurement Simulation* on page 34.

 The decision values in the exported data depend on the *current* state of the job, not the state during recording. For example, if you record data when a measurement returns a *pass* decision, change the measurement's settings so that a *fail* decision is returned, and then export to CSV, you will see a *fail* decision in the exported data.


Recorded intensity data can be exported to a bitmap (.BMP format). **Acquire Intensity** must be checked in the **Scan Mode** panel while data was being recorded in order to export intensity data.

To export recorded intensity data to the BMP format:

- Click the **Export** button  and select **Intensity data as BMP**.

Only the intensity data in the current replay location is exported.

Use the playback control buttons to move to a different replay location; for information on playback, see *To replay data in Recording, Playback, and Measurement Simulation* on page 34.

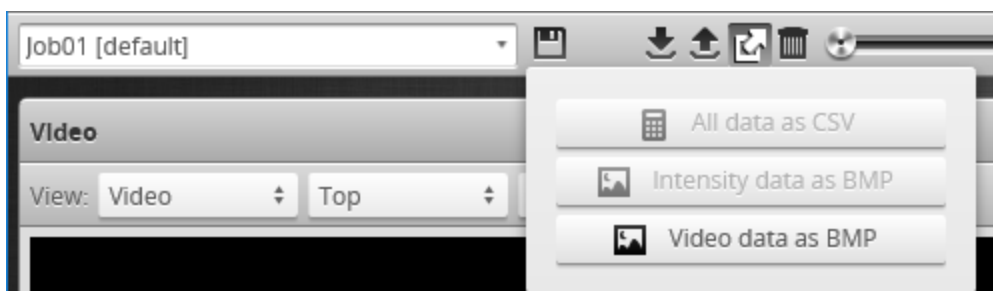

To export video data to a BMP file:

1. In the **Scan Mode** panel, switch to Video mode.
Use the playback control buttons to move to a different replay location; for information on playback,


see *To replay data in Recording, Playback, and Measurement Simulation* on page 34.

2. Click the Export button  and select **Video data as BMP**.

Metrics Area

The **Metrics** area displays two important sensor performance metrics: CPU load and speed (current frame rate).

The **CPU** bar in the **Metrics** panel (at the top of the interface) displays how much of the CPU is being utilized. A warning symbol (⚠) will appear next to the **CPU** bar if the sensor drops profiles because the CPU is over-loaded.



CPU at 100%

The **Speed** bar displays the frame rate of the sensor. A warning symbol (⚠) will appear next to it if triggers (external input or encoder) are dropped because the external rate exceeds the maximum frame rate.

Open the log for details on the warning. For more information on logs, see *Log* on the next page.

Data Viewer

The data viewer is displayed in both the **Scan** and the **Measure** pages, but displays different information depending on which page is active.

When the **Scan** page is active, the data viewer displays sensor data and can be used to adjust the active area and other settings. Depending on the selected operation mode (page 62), the data viewer can display video images, profiles, sections, or surfaces. For details, see *Data Viewer* on page 88.

When the **Measure** page is active, the data viewer displays sensor data onto which representations of measurement tools and their measurements are superimposed. For details, see *Data Viewer* on page 95.

Status Bar

The status bar provides sensor information, and lets you enable Quick Edit mode and change the interface language.




Element	Description
1 System log	Lets you read the warnings and errors that the system has displayed. For more information, see <i>Log</i> on the next page.

Element	Description
2	Frame information
3	Quick Edit checkbox
4	Interface language menu

Log


The log, located at the bottom of the web interface, is a centralized location for all messages that the Gocator displays, including warnings and errors.

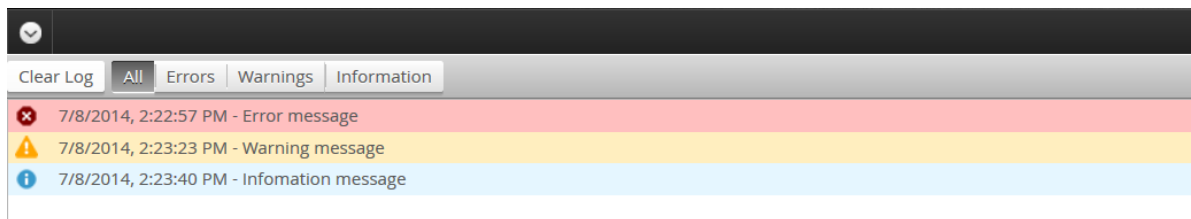

A number indicates the number of unread messages:



To use the log:

1. Click on the Log open button  at the bottom of the web interface.
2. Click on the appropriate tab for the information you need.

Frame Information

The area to the right of the status bar displays useful frame information, both when the sensor is running and when viewing recorded data.



This information is especially useful when you have enabled [recording filtering](#). If you look at a recording playback, when you have enabled recording filtering, some frames can be excluded, resulting in variable "gaps" in the data.

The following information is available:

Frame Index: Displays the index in the data buffer of the current frame. The value resets to 0 when the sensor is restarted or when recording is enabled.

Master Time: Displays the recording time of the current frame, with respect to when the sensor was started.

Encoder Index: Displays the encoder index of the current frame.

Timestamp: Displays the timestamp the current frame, in microseconds from when the sensor was started.

To switch between types of frame information:


- Click the frame information area to switch to the next available type of information.

Quick Edit Mode

When working with a very large number of [measurement tools](#) (for example, a few dozen), you can switch to a "Quick Edit" mode to make configuration faster.



When this mode is enabled, the data viewer and measurement results are not refreshed after each setting change. Also, when Quick Edit is enabled, in Replay mode, [stepping through frames](#) or playing back scan data does not change the displayed frame.

 When a sensor is running, Quick Edit mode is ignored: all changes to settings are reflected immediately in the data viewer.

Interface Language

The language button on the right side of the status bar lets you change the language of the Gocator interface.



To use the log:

1. Click the language button at the bottom of the web interface.



2. Choose a language from the list.




The Gocator interface reloads on the page you were working in, displaying the page using the language you chose. The sensor state is preserved.

Management and Maintenance

The following sections describe how to set up the sensor connections and networking, how to calibrate encoders and choose the alignment reference, and how to perform maintenance tasks.

Manage Page Overview

Gocator's system and maintenance tasks are performed on the **Manage** page.

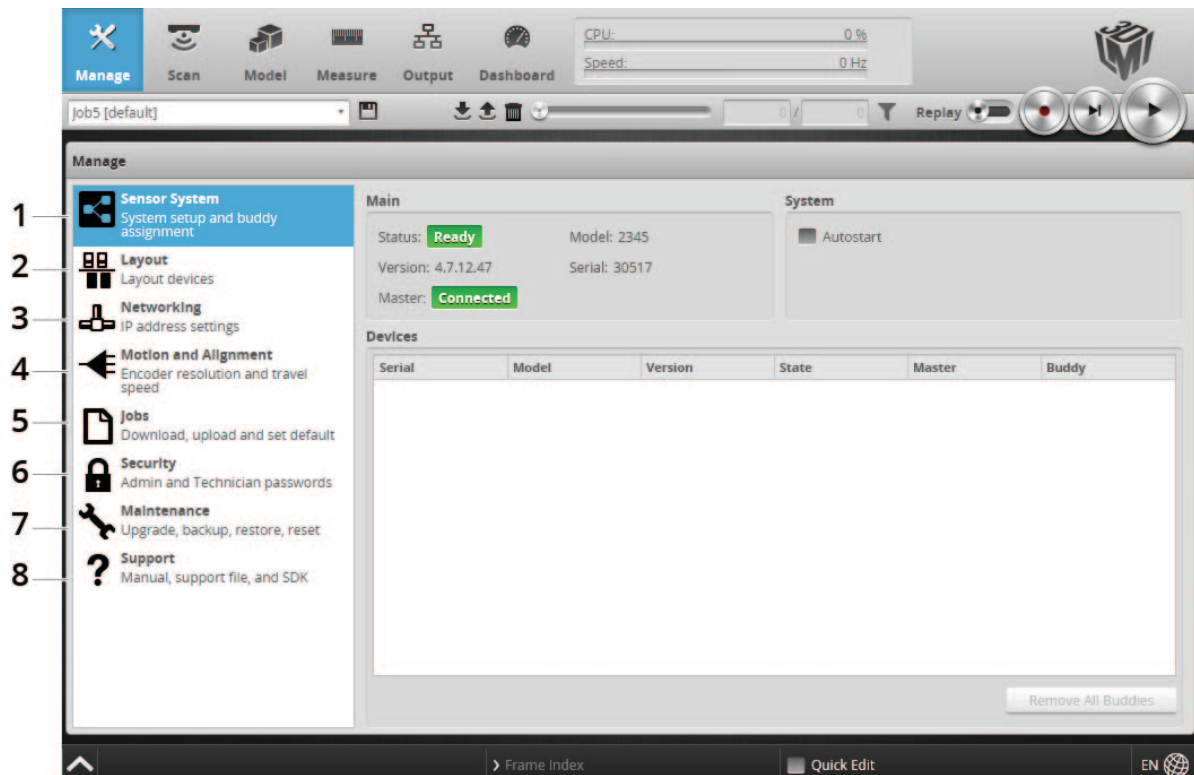


Element	Description
1 Sensor System	Contains sensor information, buddy assignment, and the autostart setting. See <i>Sensor System</i> on the next page.
2 Layout	Contains settings for configuring dual- and multi-sensor system layouts.
3 Networking	Contains settings for configuring the network. See <i>Networking</i> on page 45.
4 Motion and Alignment	Contains settings to configure the encoder. See <i>Motion and Alignment</i> on page 46.
5 Jobs	Lets you manage jobs stored on the sensor. See <i>Jobs</i> on page 48.
6 Security	Lets you change passwords. See <i>Security</i> on page 49.
7 Maintenance	Lets you upgrade firmware, create/restore backups, and reset sensors. See <i>Maintenance</i> on page 50.

Element	Description
8 Support	Lets you open an HTML version or download a PDF version of the manual, download the SDK, or save a support file. Also provides device information. See <i>Support</i> on page 53


Sensor System


The following sections describe the **Sensor System** category on the **Manage** page. This category provides sensor information and the autostart setting. It also lets you choose which sensors to add to a dual- or multi-sensor system.

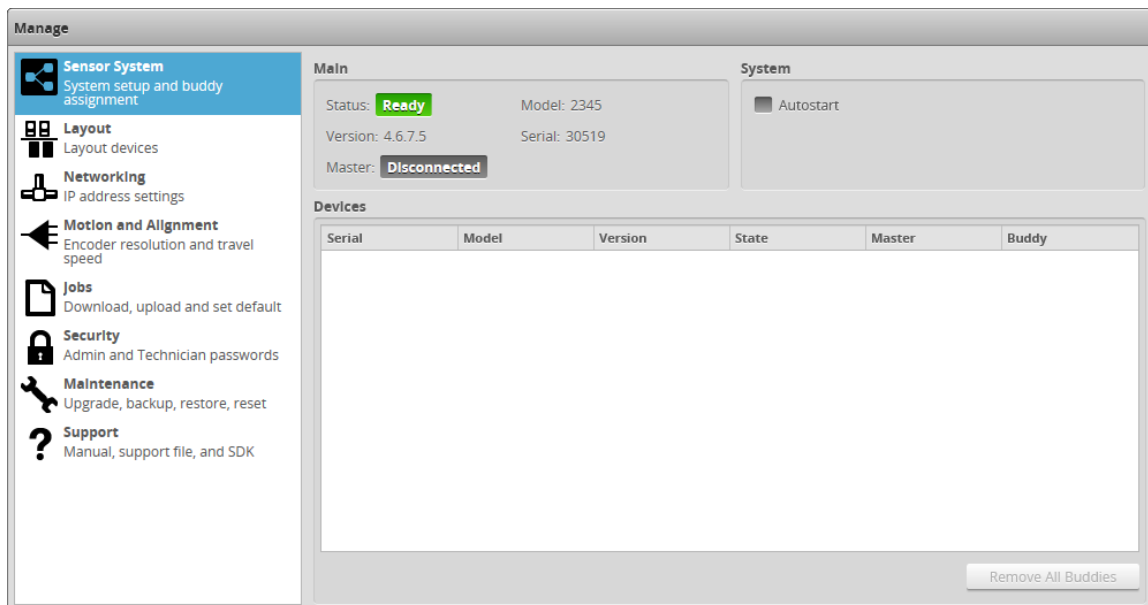

Sensor Autostart

With the **Autostart** setting enabled, data acquisition and measurement functions begin automatically when the sensor is powered on. Autostart must be enabled if the sensor will be used without being connected to a computer.

 This option is enabled by default on Gocator 2345 and 2385 sensors.

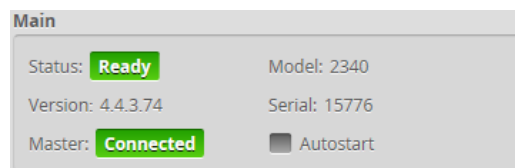


To enable/disable Autostart:

1. Go to the **Manage** page and click on the **Sensor System** category.
2. Check/uncheck the **Autostart** option in the **Main** section.


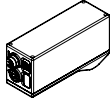

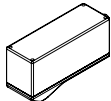
Layout

Mounting orientations must be specified for standalone sensors. This information allows the alignment procedure to determine the correct system-wide coordinates for data acquisition and measurements.

For Gocator 2345 and 2385 sensors, only use the Normal orientation.

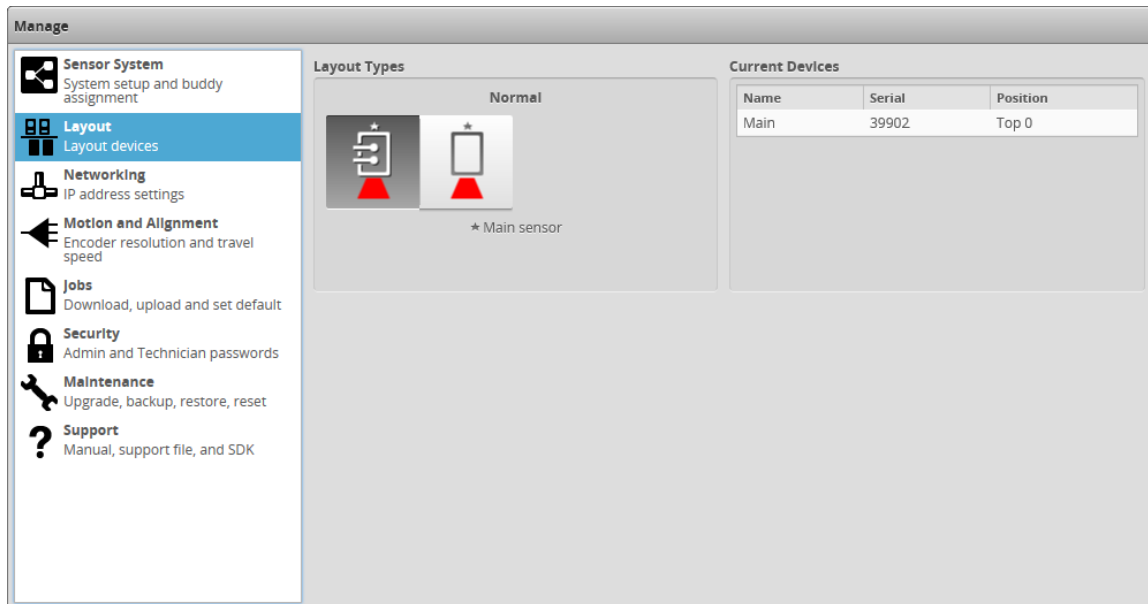


Supported Layouts

Layout Type	Example
 Normal The sensor operates as an isolated device.	
 Reverse The sensor operates as an isolated device, but in a reverse orientation. You can use this layout to change the handedness of the data.	

Networking

The **Networking** category on the **Manage** page provides network settings. Settings must be configured to match the network to which the Gocator sensors are connected.

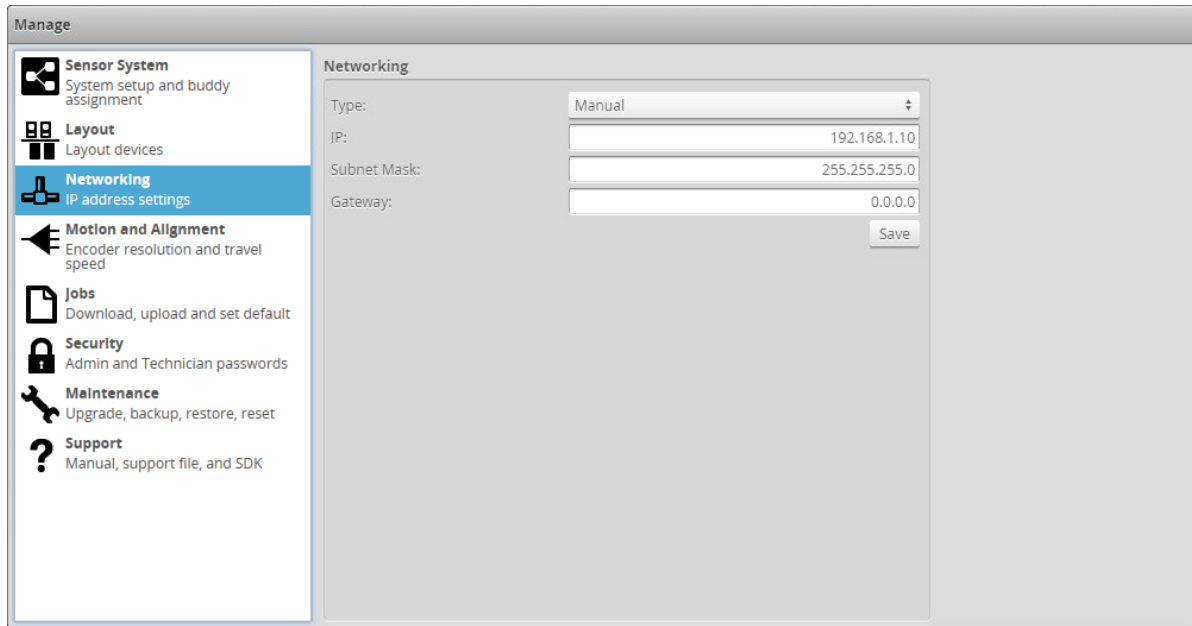


To configure the network settings:


1. Go to the **Manage** page.
2. In the **Networking** category, specify the Type, IP, Subnet Mask, and Gateway settings.
The Gocator sensor can be configured to use DHCP or assigned a static IP address.
3. Click on the **Save** button.
You will be prompted to confirm your selection.

Motion and Alignment


The **Motion and Alignment** category on the **Manage** page lets you configure alignment reference, encoder resolution, and travel speed, and confirm that encoder signals are being received by the sensor.

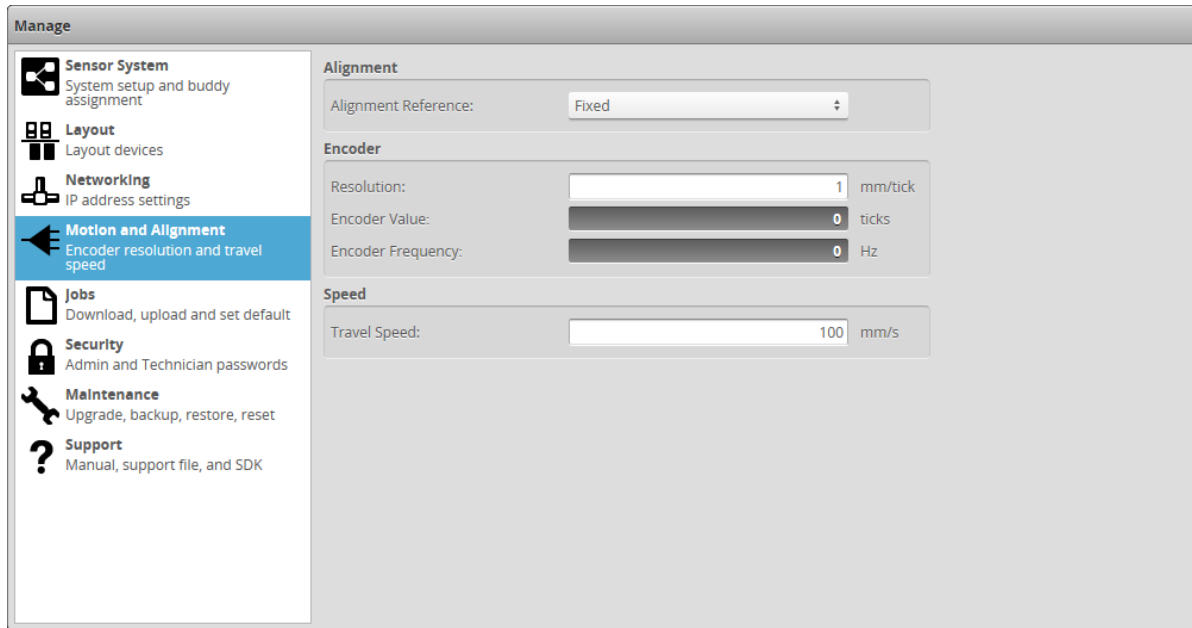

Alignment Reference

 Gocator 2345 and 2385 sensors only support fixed alignment.

The **Alignment Reference** setting can have one of two values: **Fixed** or **Dynamic**.

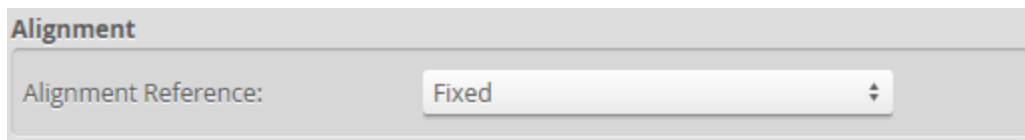

Setting	Description
Fixed	A single, global alignment is used for all jobs. This is typically used when the sensor mounting is constant over time and between scans, for example, when the sensor is mounted in a permanent position over a conveyor belt.
Dynamic	A separate alignment is used for each job. This is typically used when the sensor's position relative to the object scanned is always changing, for example, when the sensor is mounted on a robot arm moving to different scanning locations.

To configure alignment reference:

1. Go to the **Manage** page and click on the **Motion and Alignment** category.
2. In the Alignment section, choose **Fixed** or **Dynamic** in the **Alignment Reference** drop-down.


Encoder Resolution

Many systems use an encoder to communicate movement of a transport mechanism such as a conveyor to Gocator sensors to control when an exposure is taken and a profile is created, which in turn

determines the Y resolution (that is, the resolution along the direction of travel). For the measurement of molten metal level, these settings are not used.


Jobs

The **Jobs** category on the **Manage** page lets you manage the jobs stored on a sensor.

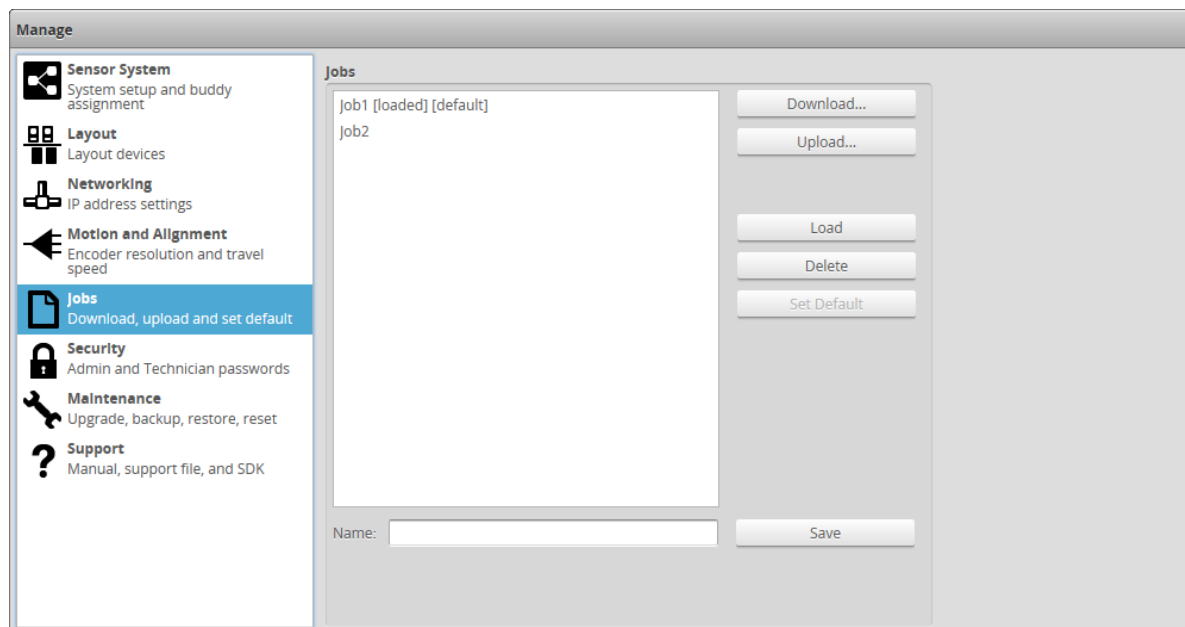


Element	Description
Name field	Used to provide a job name when saving files.
Jobs list	Displays the jobs that are currently saved in the sensor's flash storage.
Save button	Saves current settings to the job using the name in the Name field.
Load button	Loads the job that is selected in the job list. Reloading the current job discards any unsaved changes.
Delete button	Deletes the job that is selected in the job list.
Set as Default button	Sets the selected job as the default to be loaded when the sensor starts. When the default job is selected, this button is used to clear the default.
Download... button	Downloads the selected job to the client computer.
Upload... button	Uploads a job from the client computer.

Jobs can be loaded (currently activated in sensor memory) and set as default independently. For example, Job1 could be loaded, while Job2 is set as the default. Default jobs load automatically when a sensor is power cycled or reset.

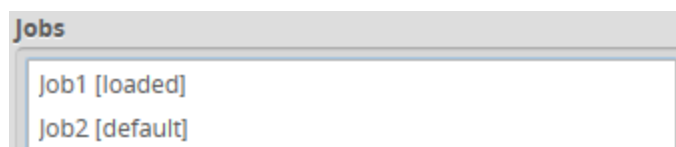

Unsaved jobs are indicated by "[unsaved]".

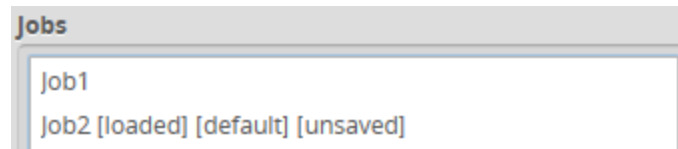

To save a job:

1. Go to the **Manage** page and click on the **Jobs** category.
2. Provide a name in the **Name** field.
To save an existing job under a different name, click on it in the **Jobs** list and then modify it in the **Name** field.
3. Click on the **Save** button or press **Enter**.
Saving a job automatically sets it as the default, that is, the job loaded when the sensor is restarted.


To download, load, or delete a job, or to set one as a default, or clear a default:

1. Go to the **Manage** page and click on the **Jobs** category.
2. Select a job in the **Jobs** list.
3. Click on the appropriate button for the operation.

Security

Passwords prevent unauthorized access to a Gocator sensor. Each sensor has two accounts: Administrator and Technician. By default, the password for each account is as follows:

- Administrator: northfloraroad
- Technician: gocator

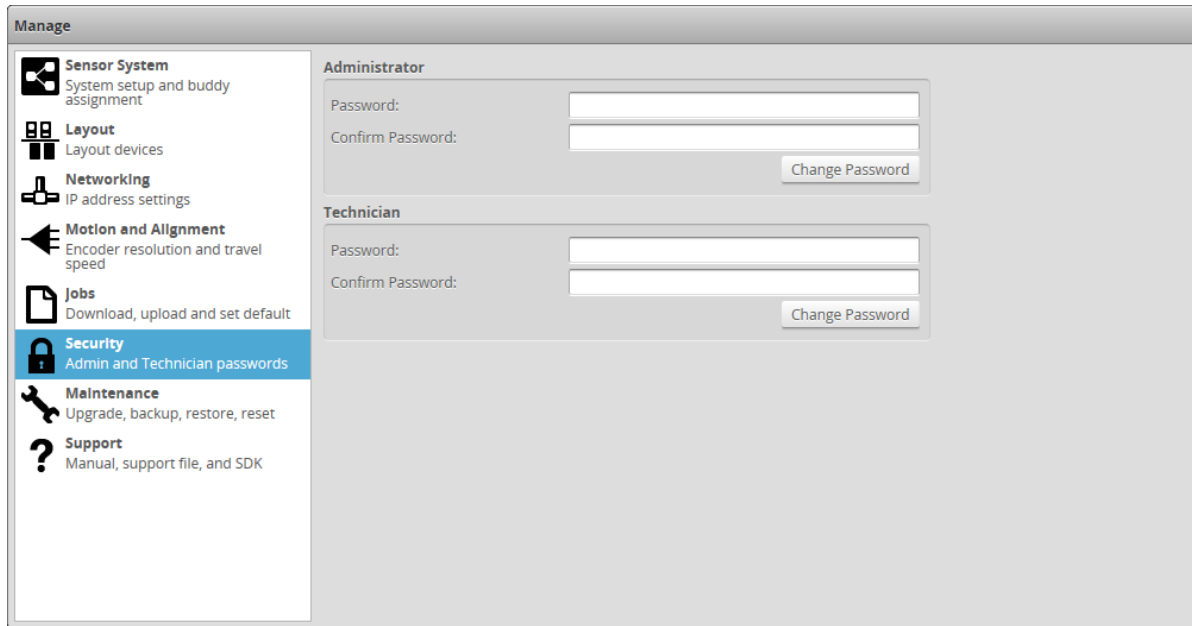

Gocator Account Types

Account	Description
Administrator	The Administrator account has privileges to use the toolbar (loading and saving jobs, recording and viewing replay data), to view all pages and edit all settings, and to perform setup procedures such as sensor alignment.
Technician	The Technician account has privileges to use the toolbar (loading and saving jobs, recording and viewing replay data), to view limited technician-accessible functionality, and to start or stop the sensor.


To change the password for the Administrator or Technician account:

1. Go to the **Manage** page and click on the **Security** category.
2. In the **Administrator** or the **Technician** section, enter the an account password and password confirmation.
3. Click **Change Password**.
The new password will be required the next time that a user logs in to the sensor.

Maintenance

The **Maintenance** category in the **Manage** page is used to do the following:

- upgrade the firmware and check for firmware updates;
- back up and restore all saved jobs and recorded data;
- restore the sensor to factory defaults;
- reset the sensor.

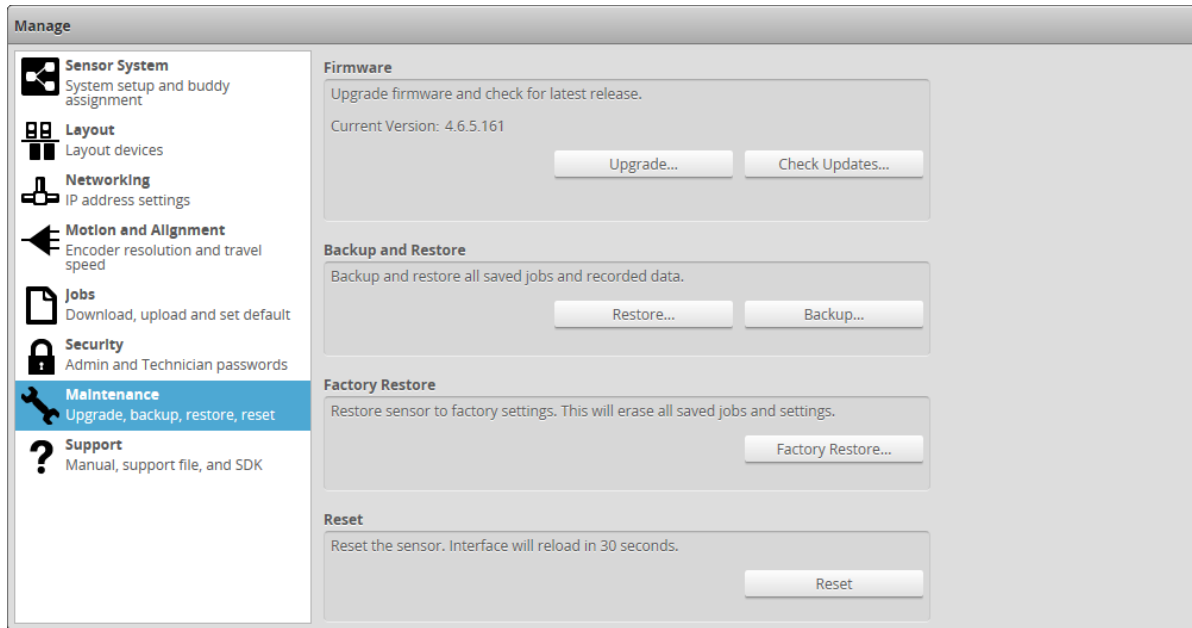


Sensor Backups and Factory Reset

You can create sensor backups, restore from a backup, and restore to factory defaults in the **Maintenance** category.

Backup files contain all of the information stored on a sensor, including jobs and alignment.

An Administrator should create a backup file in the unlikely event that a sensor fails and a replacement sensor is needed. If this happens, the new sensor can be restored with the backup file.

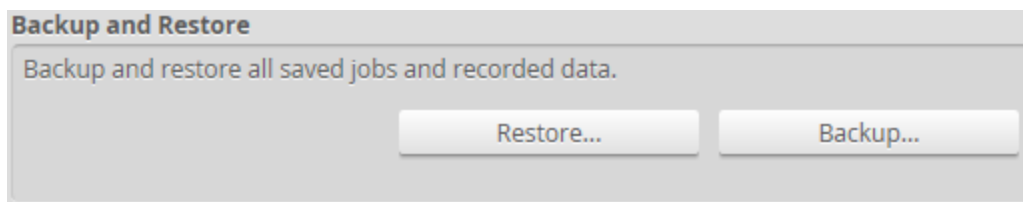

To create a backup:

1. Go to the **Manage** page and click on the **Maintenance** category.
2. Click the **Backup...** button under **Backup and Restore**.
3. When you are prompted, save the backup.
Backups are saved as a single archive that contains all of the files from the sensor.

Factory Restore

Restore sensor to factory settings. This will erase all saved jobs and settings.

Factory Restore...

To restore from a backup:

1. Go to the **Manage** page and click on the **Maintenance** category.
2. Click the **Restore...** button under **Backup and Restore**.
3. When you are prompted, select a backup file to restore.
The backup file is uploaded and then used to restore the sensor. Any files that were on the sensor before the restore operation will be lost.

To restore a sensor to its factory default settings:

1. Go to the **Manage** page and click on **Maintenance**.
2. Consider making a backup.
Before proceeding, you should perform a backup. Restoring to factory defaults cannot be undone.
3. Click the **Factory Restore...** button under **Factory Restore**.
You will be prompted whether you want to proceed.

Firmware Upgrade

LMI recommends routinely updating firmware to ensure that Gocator sensors always have the latest features and fixes.



Do not use the standard Gocator 2300 series firmware on Gocator 2345 or 2385 sensors. Only download the firmware from the appropriate location on LMI's FTP site.

If the client computer is not connected to the Internet, firmware can be downloaded and transferred to the client computer by using another computer to download the firmware from LMI's FTP site.

To upgrade the firmware:

1. Go to the **Manage** page and click on the **Maintenance** category.
2. Click the **Upgrade...** button in the **Firmware** section.
3. Locate the firmware file in the **File** dialog and then click open.
4. Wait for the upgrade to complete.
After the firmware upgrade is complete, the sensor will self-reset.



The **Check Updates...** feature is not available on Gocator 2345 and Gocator 2385 sensors.

Support

The **Support** category in the **Manage** page is used to do the following:

- download the SDK
- save a support file
- get device information



The links to the user manual in this category lead to the standard Gocator line profile sensor user manual. Be sure to use the user manual specific to Gocator 2345 and 2385.

The screenshot shows the 'Manage' page interface. On the left is a navigation menu with categories: Sensor System, Layout, Networking, Motion and Alignment, Jobs, Security, Maintenance, and Support (highlighted in blue). The main content area is divided into sections: 'Device Information' (Part Number: 332345C-2M-R-50-T, Serial: 30517, Version: 4.7.12.47), 'Support File' (with fields for Filename: support and Description, and a Download button), 'User Manual' (with Open HTML and Download PDF buttons), and 'Software Development Kit (SDK)' (with a Download button).

Support Files

You can download a support file from a sensor and save it on your computer. You can then use the support file to create a scenario in the Gocator emulator (for more information on the emulator, see *Gocator Emulator* on page 132). LMI's support staff may also request a support file to help in troubleshooting.

Support File

Download a support file which contains all jobs, data and current state of the sensor.

Filename:

Description:

Sensor running in surface mode. Contains Surface Stud and Countersunk Hole measurements, in addition to scan data from the current production run.

To download a support file:

1. Go to the **Manage** page and click on the **Support** category.
2. In **Filename**, type the name you want to use for the support file.


When you create a scenario from a support file in the emulator, the filename you provide here is displayed in the emulator's scenario list.

Support files end with the .gs extension, but you do not need to type the extension in **Filename**.

3. (Optional) In **Description**, type a description of the support file.

When you create a scenario from a support file in the emulator, the description is displayed below the emulator's scenario list.

4. Click **Download**, and then when prompted, click **Save**.


 Downloading a support file stops the sensor.

Scan Setup and Alignment

The following sections describe the steps to configure Gocator sensors for laser profiling using the **Scan** page. Setup and alignment should be performed before adding and configuring measurements or outputs.

Scan Page Overview

The **Scan** page lets you configure sensors and perform alignment.

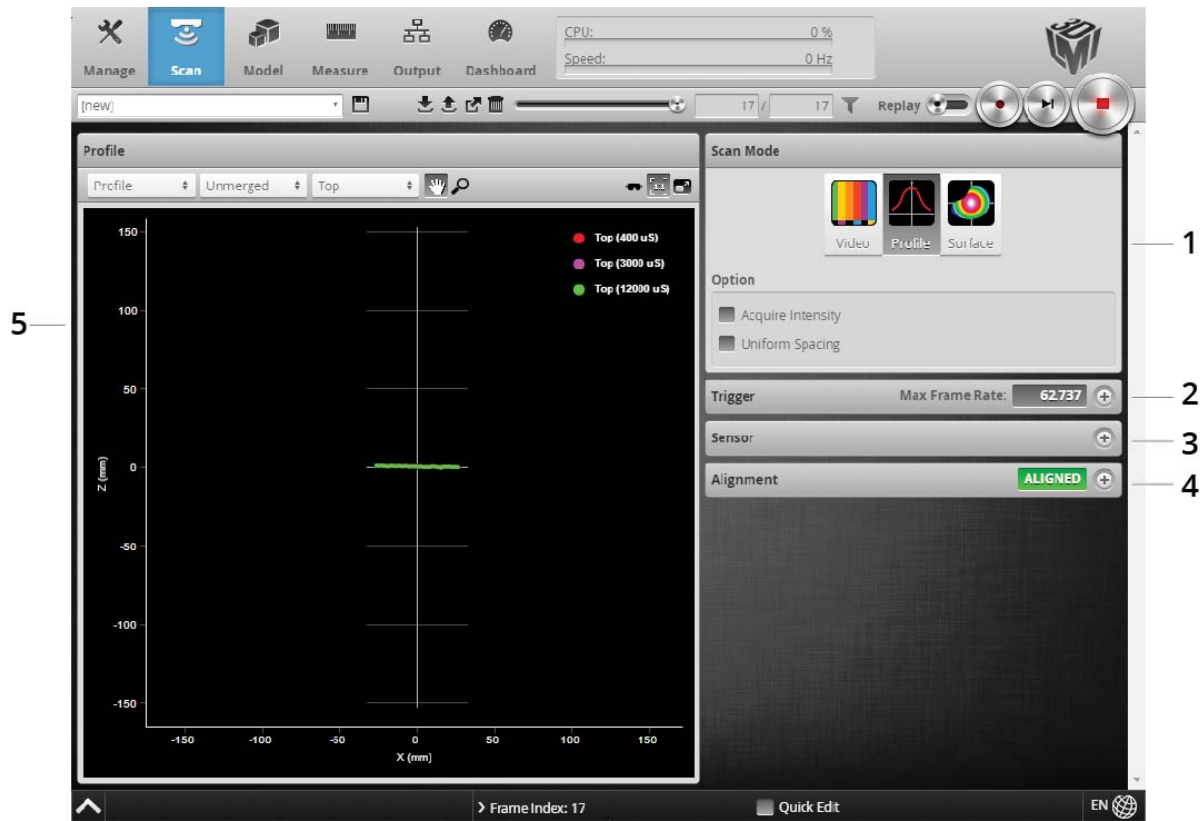

Element	Description
1	Scan Mode panel Contains settings for the current scan mode (Video, Profile, or Surface) and other options. See <i>Scan Modes</i> on page 62.
2	Trigger panel Contains trigger source and trigger-related settings. See <i>Triggers</i> on page 63.
3	Sensor panel Contains settings for an individual sensor, such as active area or exposure. See <i>Sensor</i> on page 69.
4	Alignment panel Used to perform alignment. See <i>Alignment</i> on page 82.
5	Data Viewer Displays sensor data and adjusts regions of interest. Depending on the current operation mode, the data viewer can display video images, profile plots, or surface views. See <i>Data Viewer</i> on page 88.

The following table provides quick references for specific goals that you can achieve from the panels in the **Scan** page.

Goal	Reference
Select a trigger source that is appropriate for the application.	Triggers (page 63)
Ensure that camera exposure is appropriate for laser profiling .	Exposure (page 73)
Find the right balance between profile quality, speed, and CPU utilization.	Active Area (page 69) Exposure (page 73) Job Files (page 147)
Specify mounting orientations.	Layout (page 45)
Calibrate the system so that laser profile data can be aligned to a common reference and values can be correctly scaled in the axis of motion.	Aligning Sensors (page 83)
Specify smoothing, gap-filling, and resampling parameters to remove effects of occlusions.	Filters (page 84)

Data Viewer

The data viewer can display video images, profiles, and intensity images. It is also used to configure the active area (*Active Area* on page 69) and measurement tools (see *Measurement* on page 94). The data viewer changes depending on the current operation mode and the panel that has been selected.

Data Viewer Controls

The data viewer is controlled by mouse clicks and by the buttons on the display toolbar. The mouse wheel can also be used for zooming in and out.

Press 'F' when the cursor is in the data viewer to switch to full screen. Press Esc to exit full screen.

Video Mode


In Video mode, the data viewer displays a camera image. In this mode, you can configure the data viewer to display exposure, spot, and dropout information that can be useful in properly setting up the system for scanning.

Exposure Information

In Video mode, you can display exposure-related information.

Exposures

If you have set **Exposure Mode** to **Multiple**, and have set more than one exposure, a drop-down at the top of the data viewer lists the available exposures. Choosing an exposure changes the view of the data viewer to that exposure.

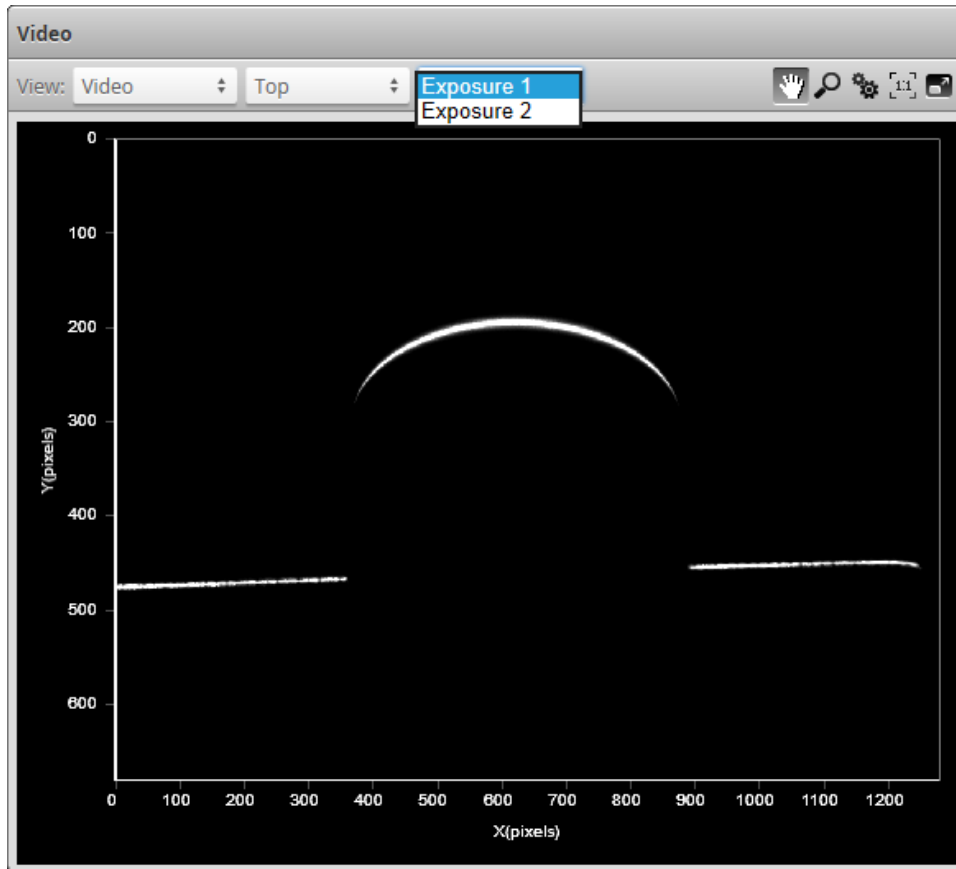


For details on setting exposure in the **Exposure** tab in the **Sensor** panel, see *Exposure* on page 73.

To select the exposure view of the display:

1. Go to the **Scan** page and choose **Video** mode in the **Scan Mode** panel.
2. Select the exposure.
Use the second drop-down list next to **View** at the top of the data viewer to select the exposure.

Overexposure and Underexposure

You can display a color exposure overlay on the video image to help set the correct exposure.

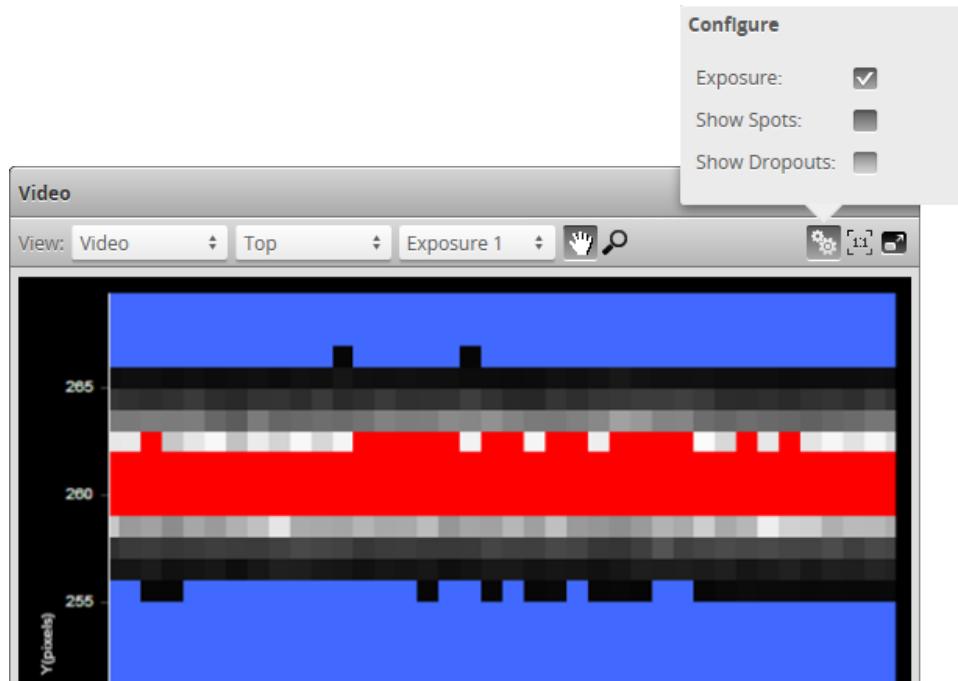

The **Exposure** setting uses the following colors:

- Blue: Indicates background pixels ignored by the sensor.
- Red: Indicates saturated pixels.

Correct tuning of exposure depends on the reflective properties of the target material and on the requirements of the application. Settings should be carefully evaluated for each application, but often a good starting point is to set the exposure so that there are 2 to 3 red pixels in the center of the laser line.


To display an overlay:

1. Go to the **Scan** page and choose **Video** mode in the **Scan Mode** panel.
2. Check **Exposure** at the top of the data viewer.

Spots and Dropouts

Various settings can affect how the **Material** settings behave. In Video mode, you can examine how the **Material** settings are affected. To do this, in Video mode, check the **Show Spots** option at the top of the data viewer to overlay a representation of the spots in the data viewer.

In the image below, the white and gray squares represent the laser line as it appears on the camera sensor. Spots (which represent the center of the laser line on the camera sensor for each column) are displayed as red "x" symbols. Dropouts (where no spot is detected on the camera sensor in a given column) are depicted at the upper edge of the data viewer as yellow dots.

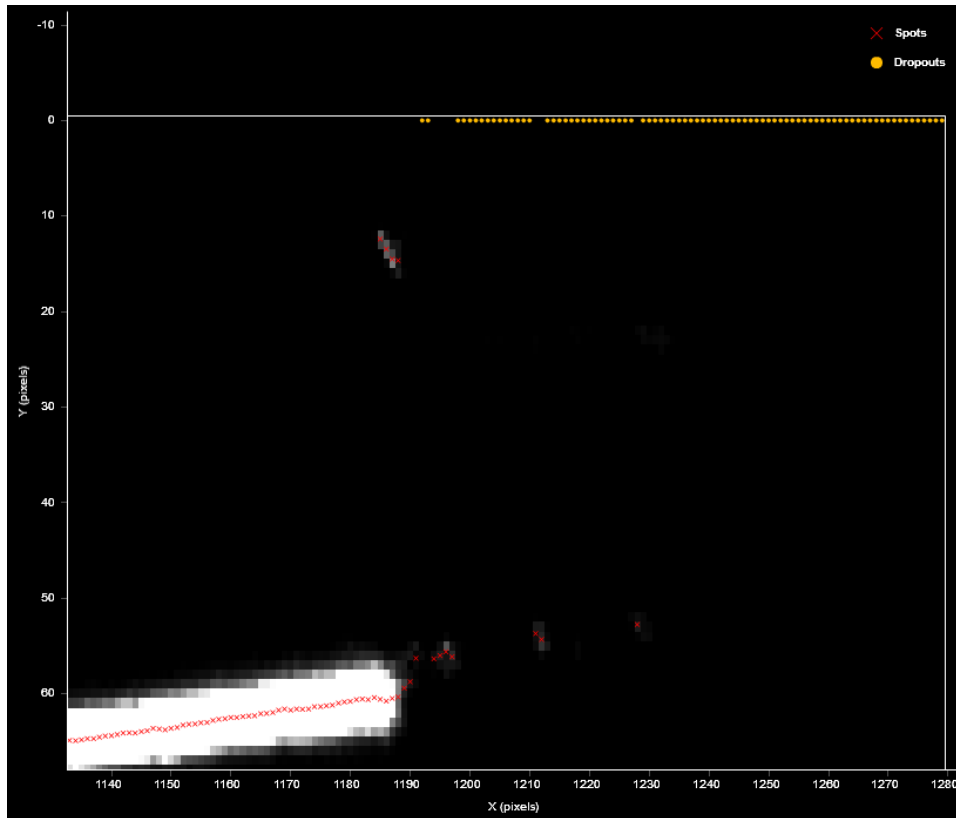


To show data dropouts:

1. Go to the **Scan** page and choose **Video** mode in the **Scan Mode** panel.
2. check the **Show Dropouts** option at the top of the data viewer.

For more information on the material settings, see *Advanced* on page 80.


Profile Mode

When the Gocator is in Profile scan mode, the data viewer displays profile plots.

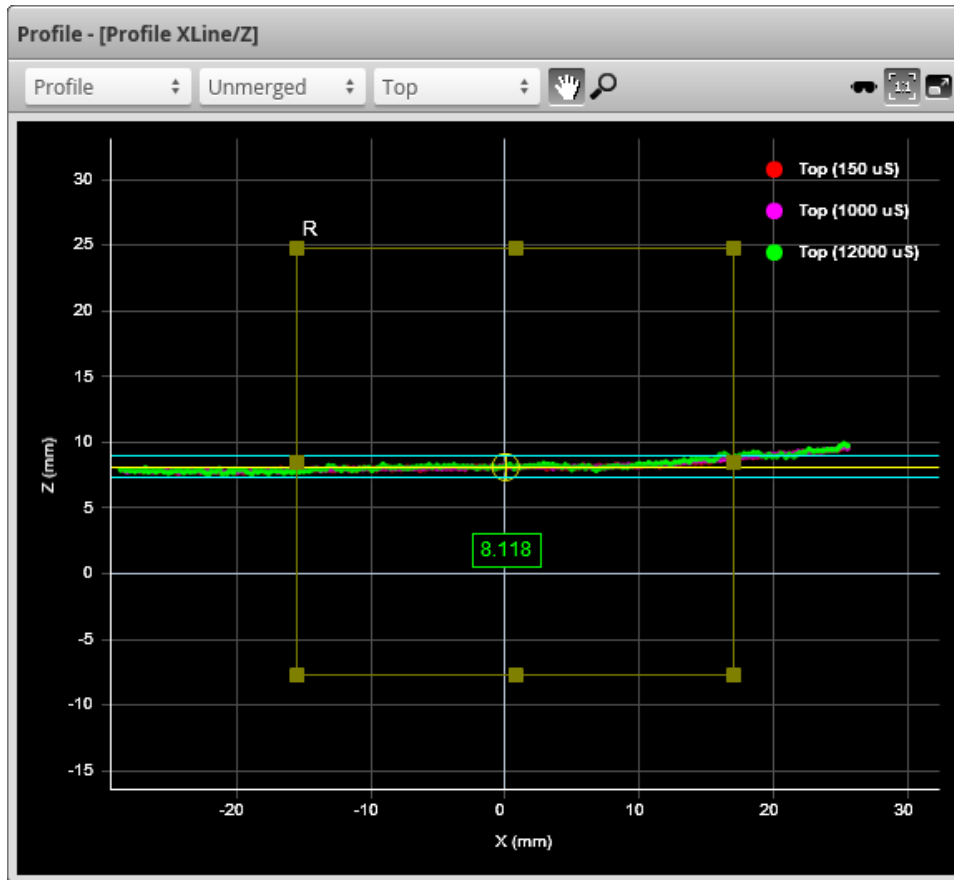

When in the **Scan** page, selecting a panel (e.g., **Sensor** or **Alignment** panel) automatically sets the display to the most appropriate display view.

When [multiple exposures](#) have been configured, a drop-down above the data viewer provides two options: **Merged** and **Unmerged**. The XLine tool is designed to work with unmerged data, so it is recommended to select **Unmerged**. Changing this option in the data viewer does not affect the data the tool runs on. However, to avoid confusion, leave this set to **Unmerged**.

When the sensor is in Profile mode, or in Surface mode when a section is displayed, a safety goggle mode button () is available in the data viewer. Enabling this mode changes some colors to ensure that profiles are visible in the data viewer when wearing laser safety goggles.

Section Mode

Gocator 2345 and 2385 sensors do not currently support this feature.


Surface Mode

Gocator 2345 and 2385 sensors do not currently support this feature.

Region Definition

Regions, such as an active area or a measurement region, can be graphically set up using the data viewer.

When the **Scan** page is active, the data viewer can be used to graphically configure the active area. The **Active Area** setting can also be configured manually by entering values into its fields and is found in the **Sensor** panel (see *Sensor* on page 69).

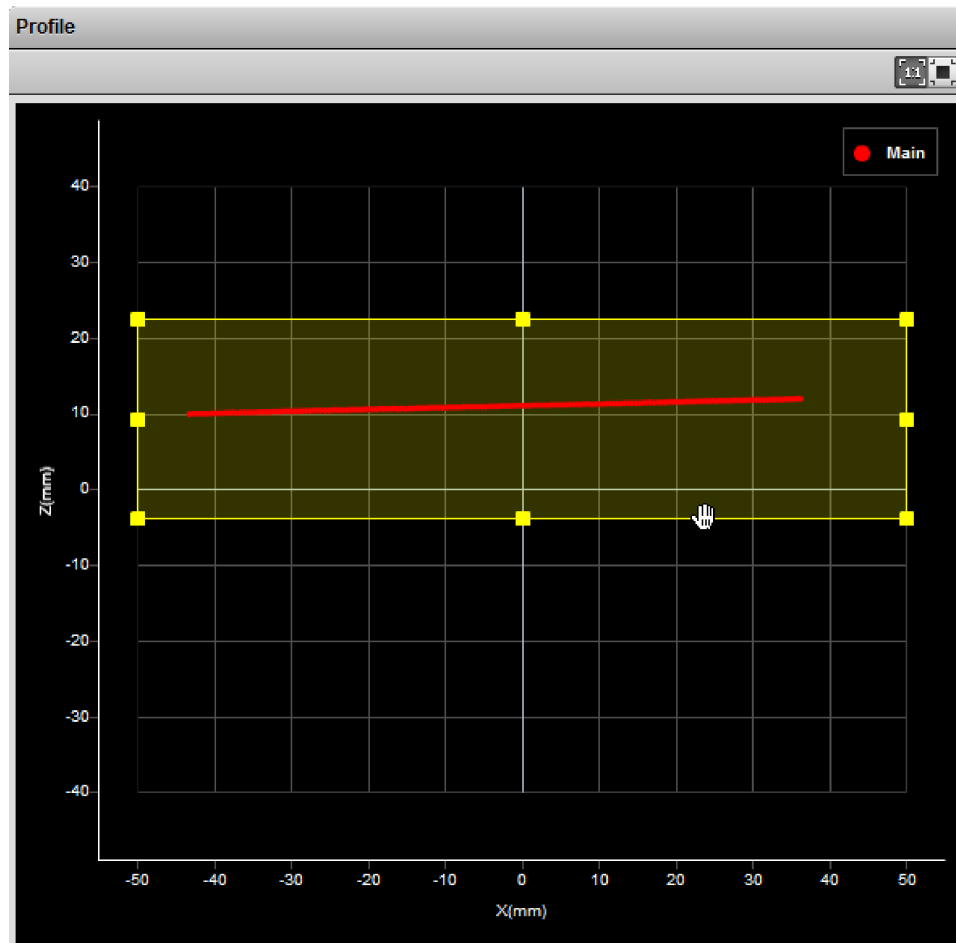


To set up a region of interest:

1. Move the mouse cursor to the rectangle.
The rectangle is automatically displayed when a setup or measurement requires an area to be specified.
2. Drag the rectangle to move it, and use the handles on the rectangle's border to resize it.

Intensity Output

Gocator sensors can produce intensity images that measure the amount of light reflected by an object. An 8-bit intensity value is output for each range value along the laser line. Gocator applies the same coordinate system and resampling logic as the ranges to the intensity values.

Intensity output is enabled by checking **Acquire Intensity** in the **Scan Mode** panel.

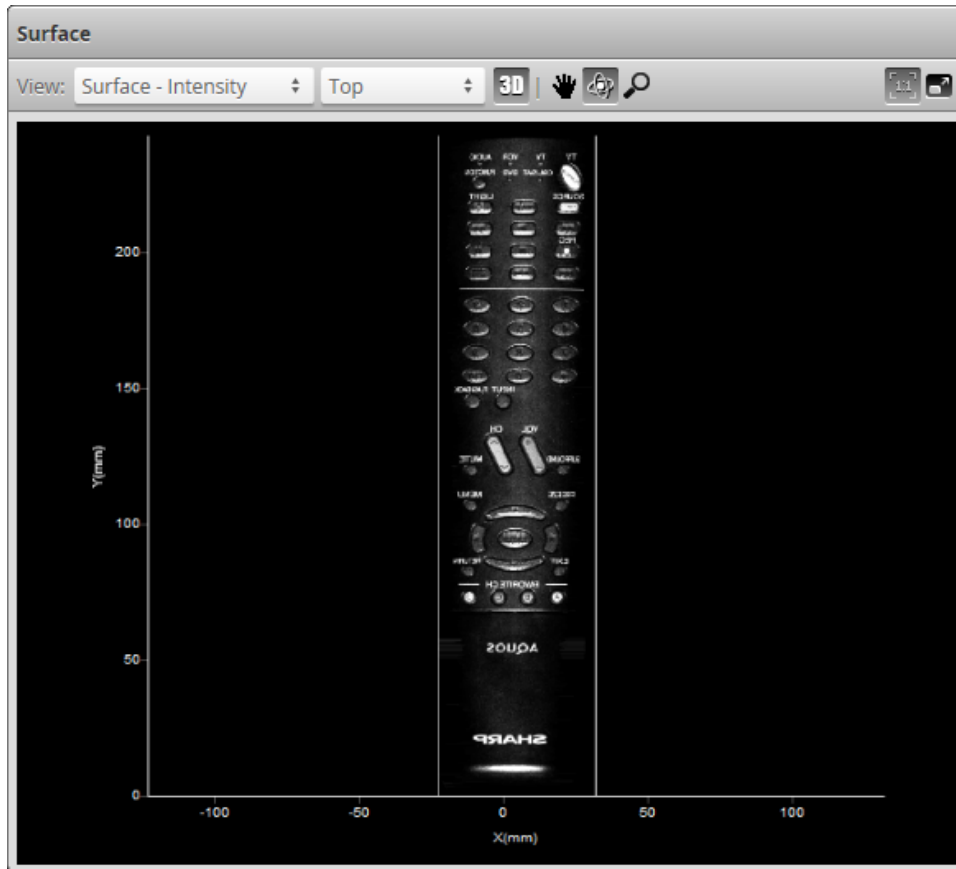


Scan Modes

The Gocator web interface supports threescan modes: Video, Profile, and Surface. The scan mode can be selected in the **Scan Mode** panel.



Do *not* change the scan mode during casting. This will cause measurement to stop.

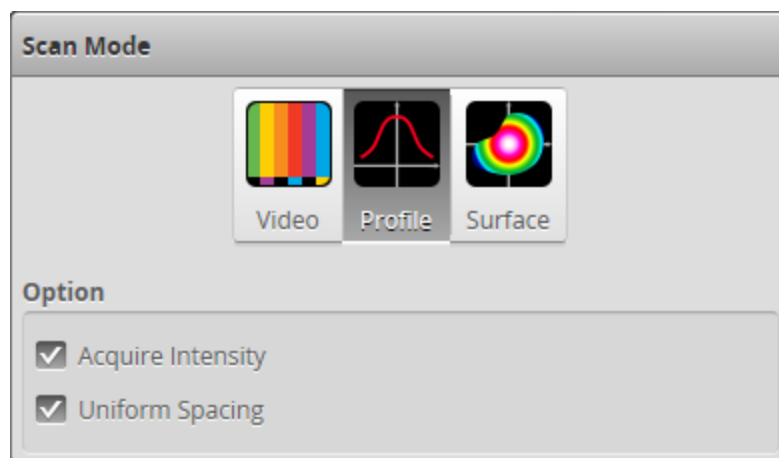


Mode and Option	Description
Video	Outputs video images from the Gocator. This mode is useful for configuring exposure time and troubleshooting stray light or ambient light problems.
Profile	Outputs profiles and performs profile measurements. Video images are processed internally to produce laser profiles and cross-sectional measurements.
Surface	Gocator 2345 and 2385 sensors do not support this mode.
Uniform Spacing	This setting should be left disabled on Gocator 2345 and 2385 sensors. When this option is enabled, ranges are resampled to a uniform spacing along the X axis. The size of the spacing can be set in the Spacing tab (see <i>Spacing Interval</i> on page 79). When the option is disabled, the Gocator outputs unprocessed range data. Ranges are reported in (x,z) coordinate pairs. Post-profiling processing is disabled. Only a subset of the measurement tools is available. Disable this option to extract ranges from the Gocator at the highest possible rate. When the sensor is in Surface mode, this option is not available.
Acquire Intensity	When this option is enabled, an intensity value will be produced for each laser profile point.

Triggers

A trigger is an event that causes a Gocator sensor to take a single picture. Triggers are configured in the **Trigger** panel on the **Scan** page.

When a trigger is processed, the laser is strobed and the camera exposes to produce an image. The resulting image is processed inside the sensor to yield a profile (range/distance information), which can then be used for measurement.

The sensor can be triggered by one of the sources described in the table below.

 The encoder setting is not supported by Gocator 2345 and 2385 sensors.
--

Trigger

Source	Description
--------	-------------


Time	Sensors have an internal clock that can be used to generate fixed-frequency triggers. The external input can be used to enable or disable the time triggers.
------	--

Trigger Source **Description**

An encoder can be connected to provide triggers in response to motion. Three encoder triggering behaviors are supported. These behaviors are set using the **Behavior** setting.


Track Backward

A scan is triggered when the target object moves forward. If the target object moves backward, it must move forward by at least the distance that the target travelled backward (this distance backward is "tracked"), plus one encoder spacing, to trigger the next scan.

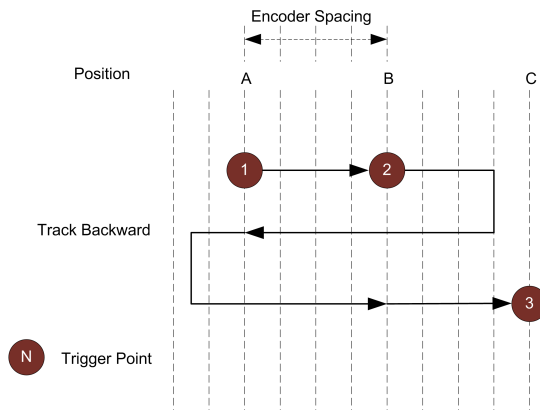

Ignore Backward


A scan is triggered only when the target object moves forward. If the target object moves backward, it must move forward by at least the distance of one encoder spacing to trigger the next scan.

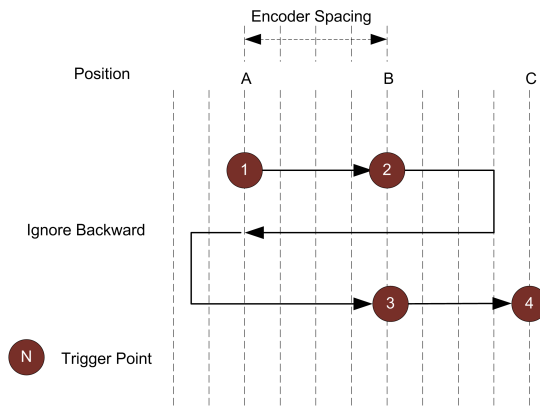

Bi-directional

A scan is triggered when the target object moves forward or backward.


Trigger Source **Description**

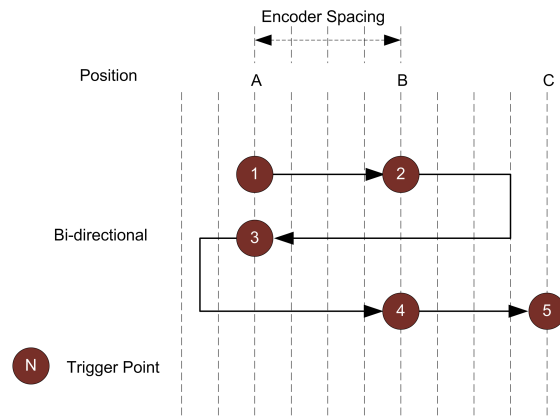

When triggers are received at a frequency higher than the maximum frame rate, some triggers may not be accepted. The **Trigger Drops Indicator** in the **Dashboard** can be used to check for this condition.

The external input can be used to enable or disable the encoder triggers.

For information on the maximum encoder rate, see *Maximum Encoder Rate* on page 69.

 To verify that the sensor is receiving encoder signals, check whether **Encoder Value** is changing in the [Motion and Alignment](#) category on the **Manage** page, or in the [dashboard](#).

External Input A digital input can provide triggers in response to external events (e.g., photocell).

When triggers are received at a frequency higher than the maximum frame rate, some triggers may not be accepted. The **Trigger Drops Indicator** in the **Dashboard** page can be used to check for this condition.

For information on the maximum input trigger rate, see *Maximum Input Trigger Rate* on page 69.

Software A network command can be used to send a software trigger. See *Protocols* on page 228 for more information.


For examples of typical real-world scenarios, see *Trigger Examples* on the next page. For information on the settings used with each trigger source, see *Trigger Settings* on page 67

Trigger Examples

Example: Encoder + Conveyor

Encoder triggering is used to perform profile measurements at a uniform spacing.

The speed of the conveyor can vary while the object is being measured; an encoder ensures that the measurement spacing is consistent, independent of conveyor speed.

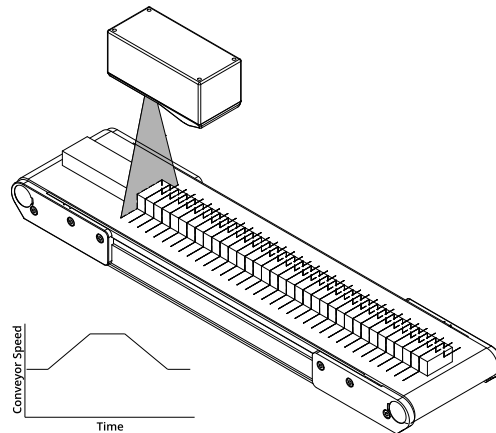


Example: Time + Conveyor

Time triggering can be used instead of encoder triggering to perform profile measurements at a fixed frequency.

Measurement spacing will be non-uniform if the speed of the conveyor varies while the object is being measured.

It is strongly recommended to use an encoder with transport-based systems due to the difficulty in maintaining constant transport velocity.

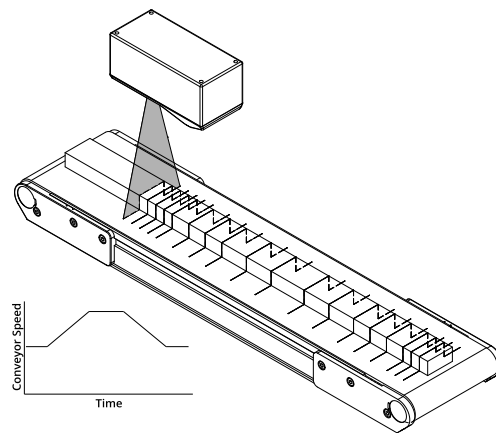


Example: External Input + Conveyor

External input triggering can be used to produce a snapshot for profile measurement.

For example, a photocell can be connected as an external input to generate a trigger pulse when a target object has moved into position.


An external input can also be used to gate the trigger signals when time or encoder triggering is used. For example, a photocell could generate a series of trigger pulses as long as there is a target in position.

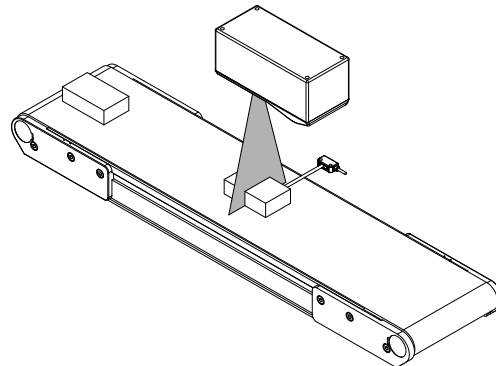

Example: Software Trigger + Robot Arm

Software triggering can be used to produce a snapshot for profile measurement.

A software trigger can be used in systems that use external software to control the activities of system components.

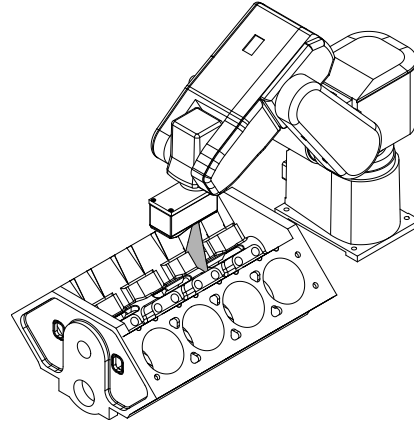

Trigger Settings

The trigger source is selected using the **Trigger** panel in the **Scan** page.

Trigger Max Frame Rate: 199.105

Source: Time

Frame Rate: Max Speed Hz

Gate on External Input

Trigger Max Frame Rate: 199.105

Source: Encoder

Spacing: 1 mm

Behavior: Bi-Directional

Gate on External Input

Trigger Max Frame Rate: 199.105

Source: External Input

Units: μ s (Time)

Trigger Delay: 0 μ s

Trigger Max Frame Rate: 199.105

Source: Software

Units: μ s (Time)

Gate on External Input

After specifying a trigger source, the **Trigger** panel shows the parameters that can be configured.

Parameter	Trigger Source	Description
Source	All	Selects the trigger source (Time , Encoder , External Input , or Software).
Frame Rate	Time	Controls the frame rate. Select Max Speed from the drop-down to lock to the maximum frame rate. Fractional values are supported. For example, 0.1 can be entered to run at 1 frame every 10 seconds.
Gate on External Input	Time, Encoder	External input can be used to enable or disable profiling in a sensor. When this option is enabled, the sensor will respond to time or encoder triggers only when the external input is asserted. This setting is not displayed when Surface Generation is set


Parameter	Trigger Source	Description
		to Fixed Length, Variable Length, or Rotational (<i>Surface Generation</i> on page 84). See <i>Digital Input</i> on page 321 for more information on connecting external input to Gocator sensors.
Behavior	Encoder	Specifies how the Gocator sensor is triggered when the target moves. Can be Track Backward, Ignore Backward, or Bi-Directional. See <i>Triggers</i> on page 63 for more information on these behaviors.
Spacing	Encoder	Specifies the distance between triggers (mm). Internally the Gocator sensor rounds the spacing to a multiple of the encoder resolution.
Reversal Distance	Encoder	When encoder triggering is set to Bi-Directional , use this setting to ignore jitter or vibrations in your transport system by specifying what distance the target must travel before a direction change is triggered. One of the following: Auto: The distance is automatically set by multiplying the value in Spacing by 3. Custom: Set the distance (in millimeters). Various functions in the sensor depend on this value to explicitly determine the point where direction change is triggered. Set this value larger than the maximum vibrations you see in your transport system.
Units	External Input, Software	Specifies whether the trigger delay, output delay, and output scheduled command operate in the time or the encoder domain. The unit is implicitly set to microseconds with Time trigger source, and millimeters with Encoder trigger source.
Trigger Delay	External Input	Controls the amount of time or the distance the sensor waits before producing a frame after the external input is activated. This is used to compensate for the positional difference between the source of the external input trigger (e.g., photocells) and the sensor. Trigger delay is only supported in single exposure mode; for details, see <i>Exposure</i> on page 73.




Depending on the surface generation settings, some trigger options may not be available.

To configure the trigger source:

1. Go to the **Scan** page.
2. Expand the **Trigger** panel by clicking on the panel header.
3. Select the trigger source from the drop-down.

4. Configure the settings.
See the trigger parameters above for more information.
5. Save the job in the **Toolbar** by clicking the **Save** button .

Maximum Input Trigger Rate

 The maximum external input trigger rate in a system including Master 400 or higher is 20 kHz.

When using a standalone sensor or a sensor connected to a Master 100, the maximum trigger rate is 32 kHz. This rate is limited by the fall time of the signal, which depends on the V_{in} and duty cycles. To achieve the maximum trigger rate, the V_{in} and duty cycles must be adjusted as follows:

Maximum Speed	V_{in}	Maximum Duty Cycle
32 kHz	3.3 V	88%
32 kHz	5 V	56%
32 kHz	7 V	44%
32 kHz	10 V	34%

At 50% duty cycle, the maximum trigger rates are as follows:

V_{in}	Maximum Speed
3.3 V	34 kHz
5 V	34 kHz
10 V	22 kHz

Maximum Encoder Rate

On a standalone sensor, with the encoder directly wired into the I/O port or through a Master 100, the maximum encoder rate is about 1 MHz.

For sensors connected through a Master 400 or higher, with the encoder signal supplied to the Master, the maximum rate is about 300 kHz.

Sensor





The following sections describe the settings that are configured in the **Sensor** panel on the **Scan** page.

Active Area

Active area refers to the region within the sensor's maximum field of view that is used for laser profiling.


By default, the active area covers the sensor's entire field of view. By reducing the active area, the sensor can operate at higher speeds.


Active area is specified in sensor coordinates, rather than in system coordinates. As a result, if the sensor is already alignment calibrated, press the **Acquire** button to display uncalibrated data before configuring the active area.

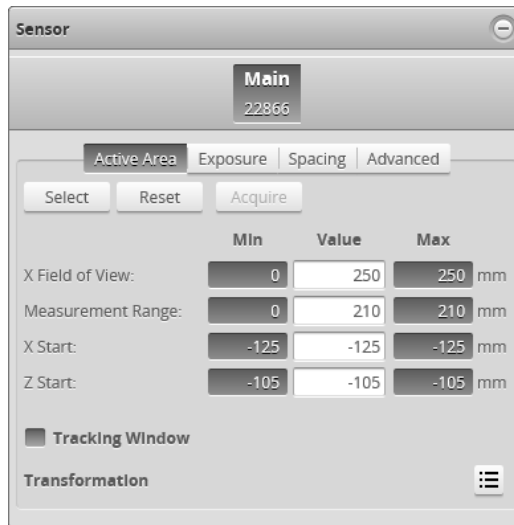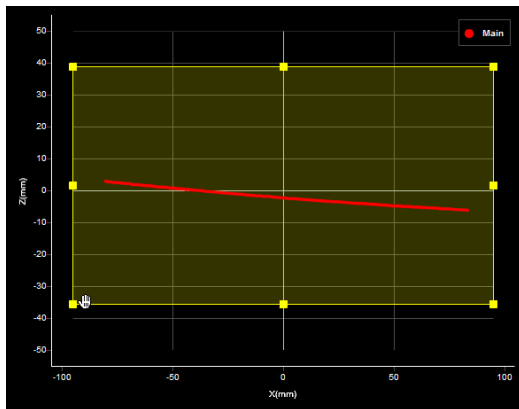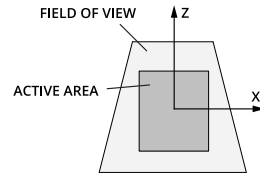

To set the active area:

1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel, depending on the type of measurement whose decision you need to configure.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Expand the **Sensor** panel by clicking on the panel header or the \oplus button.
4. Click the button corresponding to the sensor you want to configure.
The button is labeled **Top**, **Bottom**, **Top-Left**, or **Top-Right**, depending on the system.
Active area is specified separately for each sensor.
5. Click on the **Active Area** tab.
6. Click the **Select** button.
7. Click the **Acquire** button to see a scan while setting the active area.
8. Set the active area.
Enter the active area values in the edit boxes or adjust the active area graphically in the data viewer.



9. Click the **Save** button in the **Sensor** panel.
Click the **Cancel** button to cancel setting the active area.
10. Save the job in the **Toolbar** by clicking the **Save** button .

 Laser profiling devices are usually more accurate at the near end of their measurement range. If your application requires a measurement range that is small compared to the maximum measurement range of the sensor, mount the sensor so that the active area can be defined at the near end of the measurement range.

Tracking Window

The Gocator can track a relatively flat object in real-time to achieve very high scan rates. This feature tracks the object height using a small window that moves dynamically to cover a larger measurement range. You can balance the gain in speed and the tracking ability by configuring the size of the tracking area. This feature is typically used in road or web scanning applications where the target is a continuous flat surface.

A laser line remains tracked as long as the percentage of detected laser points exceeds the user-defined search threshold. When the sensor loses track of the laser line, the sensor will search for the laser line using the full active area.

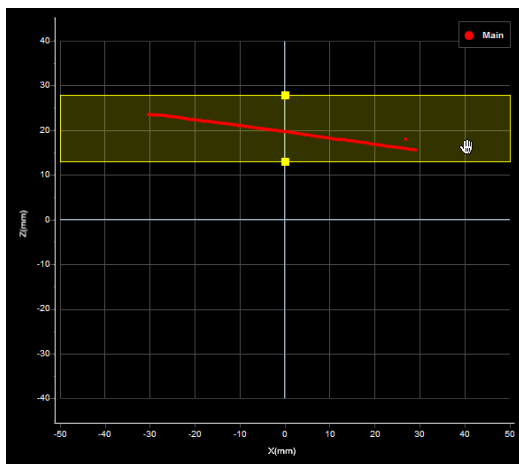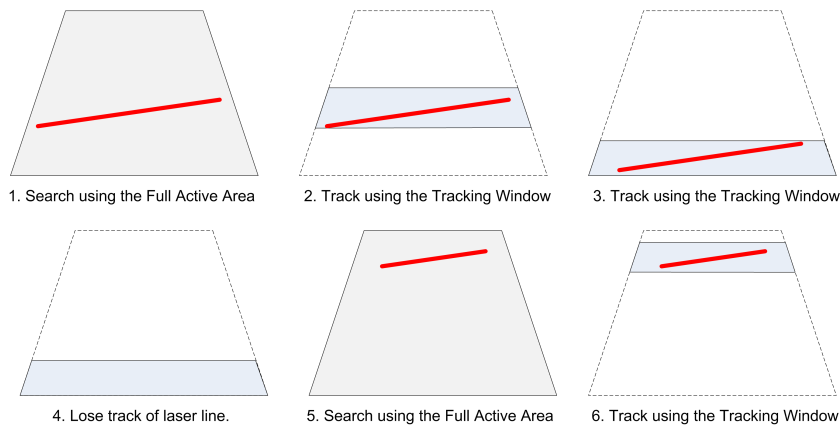


Tracking Window

Select Reset

Height: mm

Search Threshold: 50 %

To enable the tracking window:

1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, you will not be able to set the tracking window.
3. Expand the **Sensor** panel by clicking on the panel header.
4. Click on the **Active Area** tab.
5. Check the **Tracking Window** box.
The panel below the checkbox expands and shows the settings for the window used to track the object height.
6. Click the tracking window's **Select** button.
7. Resize the tracking window shown in the data viewer.
Only the height of the window is required. You can move the position of the tracking window to cover a live profile to help adjust the window height.
8. Edit the **Search Threshold** setting.
The search threshold defines the minimum percentage of the points detected across the profile for the laser to be considered tracked. If tracking is lost, the sensor will search for the laser using the full active area.
9. Click the **Save** button in the **Sensor** panel.
10. Save the job in the **Toolbar** by clicking the **Save** button .

The sensor adjusts the position of the tracking window so that the area is centered around the average height of the entire visible laser profile. You should adjust the lighting and the active area to remove all background objects, such as the conveyor belt surface, ambient lights, etc.

Transformations

The transformation settings determine how profiles are converted from sensor coordinates to system coordinates. Typically, transformations are set when you [align a sensor](#). However, you can also manually set values.





The screenshot shows a panel titled "Transformation" with a hamburger menu icon in the top right corner. It contains three input fields with their respective values and units:

Parameter	Value	Unit
X Offset:	1.638	mm
Z Offset:	54.556	mm
Angle:	-1.72	°

Parameter	Description
X Offset	Specifies the shift along the X axis. With Normal orientation, a positive value shifts the profiles to the right. With Reverse orientation, a positive value shifts the profiles to the left.
Z Offset	Specifies the shift along the Z axis. A positive value shifts the profiles toward the sensor.
Angle	Specifies the tilt (rotation in the X-Z plane). A positive value rotates the profile counter-clockwise.

When applying the transformations, Angle is applied before the X and Z offsets.

To configure transformation settings:

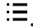1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel, depending on the type of measurement whose decision you need to configure.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Expand the **Sensor** panel by clicking on the panel header.
4. Click the button corresponding to the sensor you want to configure.
The button is labeled **Top**, **Bottom**, **Top-Left**, or **Top-Right**, depending on the system.
Transformations can be configured separately for each sensor.
5. Expand the Transformations area by clicking on the expand button .
See the table above for more information.
6. Set the parameter values.
See the table above for more information.
7. Save the job in the **Toolbar** by clicking the **Save** button .
8. Check that the transformation settings are applied correctly after profiling is restarted.

Exposure

Exposure determines the duration of camera and laser on-time. Longer exposures can be helpful to detect laser signals on dark or distant surfaces, but increasing exposure time decreases the maximum speed. Different target surfaces may require different exposures for optimal results. Gocator sensors provide three exposure modes for the flexibility needed to scan different types of target surfaces.


Exposure Mode	Description
Single	Uses a single exposure for all objects. Used when the surface is uniform and is the same for all targets.
Dynamic	Automatically adjusts the exposure after each frame. Used when the target surface varies between scans.
Multiple	Uses multiple exposures to create a single profile. Used when the target surface has a varying reflectance within a single profile (e.g., white and black).

Video mode lets you see how the laser line appears on the camera and identify any stray light or ambient light problems. When exposure is tuned correctly, the laser should be clearly visible along the

entire length of the viewer. If it is too dim, increase the exposure value; if it is too bright decrease exposure value.




*Under-exposure:
Laser line is not detected.
Increase the exposure value.*

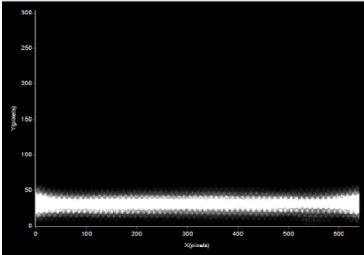

*Over-exposure:
Laser line is too bright.
Decrease the exposure value.*


When the Gocator is in Multiple exposure mode, select which exposure to view using the drop-down box next to "View" in the data viewer. This drop-down is only visible in Video scan mode when the **Multiple** option is selected in the **Exposure** section in the **Sensor** panel.

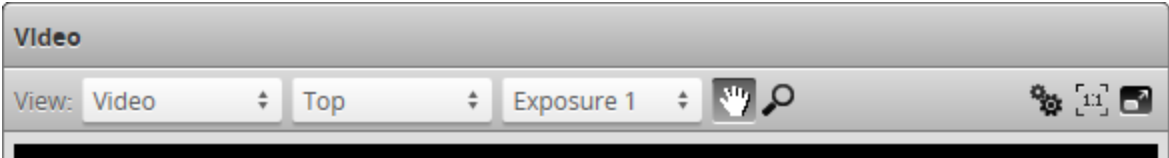

Single Exposure

The sensor uses a fixed exposure in every scan. Single exposure is used when the target surface is uniform and is the same for all parts.

By default, the XLine measurement tool uses the **Multiple** exposure setting. For more information, see *Multiple Exposure* on page 76. For information on the XLine tool, see *XLine* on page 110.

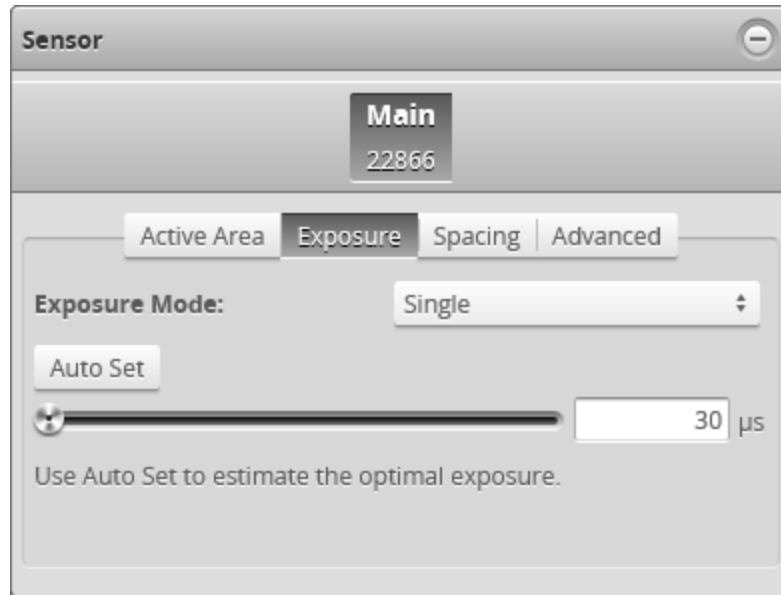



To enable single exposure:


1. Place a representative target in view of the sensor.
The target surface should be similar to the material that will normally be measured.
2. Go to the **Scan** page.
3. Expand the **Sensor** panel by clicking on the panel header or the \oplus button.
4. Click the **Exposure** tab.
5. Select **Single** from the **Exposure Mode** drop-down.
6. Edit the exposure setting by using the slider or by manually entering a value.
You can automatically tune the exposure by pressing the **Auto Set** button, which causes the sensor to turn on and tune the exposure time.
7. Run the sensor and check that laser profiling is satisfactory.
If laser profiling is not satisfactory, adjust the exposure values manually. Switch to **Video** mode to use video to help tune the exposure; see *Exposure* on page 73 for details.

Dynamic Exposure

The sensor automatically uses past profile information to adjust the exposure for subsequent exposures to yield the best profile. This is used when the target surface changes from exposure to exposure (that is, from scan to scan).

 By default, the XLine measurement tool uses the **Multiple** exposure setting. For more information, see *Multiple Exposure* on the next page. For information on the XLine tool, see *XLine* on page 110.

 You can tune settings that control the exposure that is chosen by dynamic exposure in the [Material](#) tab.

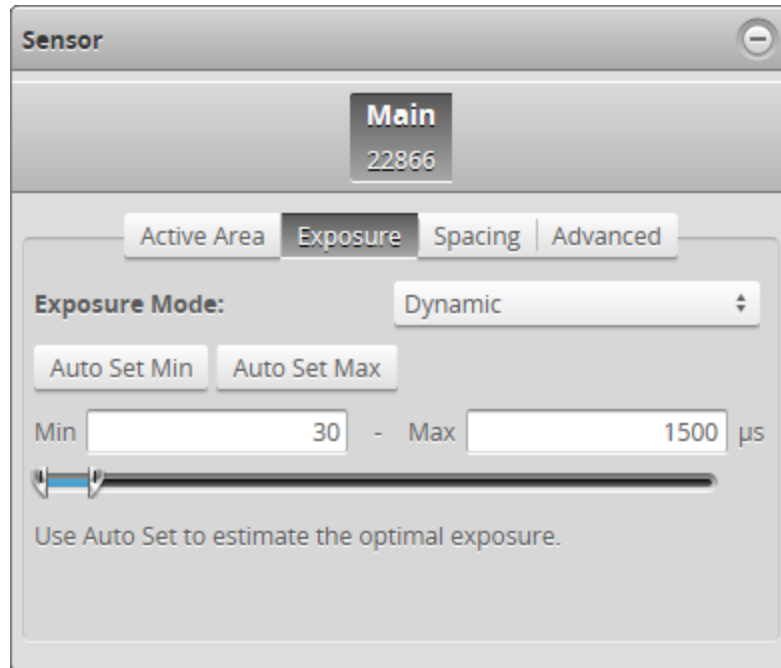

To enable dynamic exposure:


1. Go to the **Scan** page.
2. Expand the **Sensor** panel by clicking on the panel header or the \oplus button.
3. Click the **Exposure** tab.
4. Select **Dynamic** from the **Exposure Mode** drop-down.
5. Set the minimum and maximum exposure.
The auto-set function can be used to automatically set the exposure. First, place the brightest target in the field of view and press the **Auto Set Min** button to set the minimum exposure. Then, place the darkest target in the field of view and press the **Auto Set Max** button to set the maximum exposure.
6. Run the sensor and check that laser profiling is satisfactory.
If laser profiling is not satisfactory, adjust the exposure values manually. Switch to **Video** mode to use video to help tune the exposure; see *Exposure* on page 73 for details.

Multiple Exposure

When you use multiple exposure with the XLine tool, the tool chooses the best exposure.

With other tools, sensor combines data from multiple exposures to create a single laser profile. Multiple exposures can be used to increase the ability to detect light and dark materials that are in the field of view simultaneously.

Up to five exposures can be defined with each set to a different exposure level. For each exposure, the sensor will perform a complete scan at the current frame rate making the effective frame rate slower. For example, if two exposures are selected, then the speed will be half of the single exposure frame rate. The sensor will perform a complete multi-exposure scan for each external input or encoder trigger.

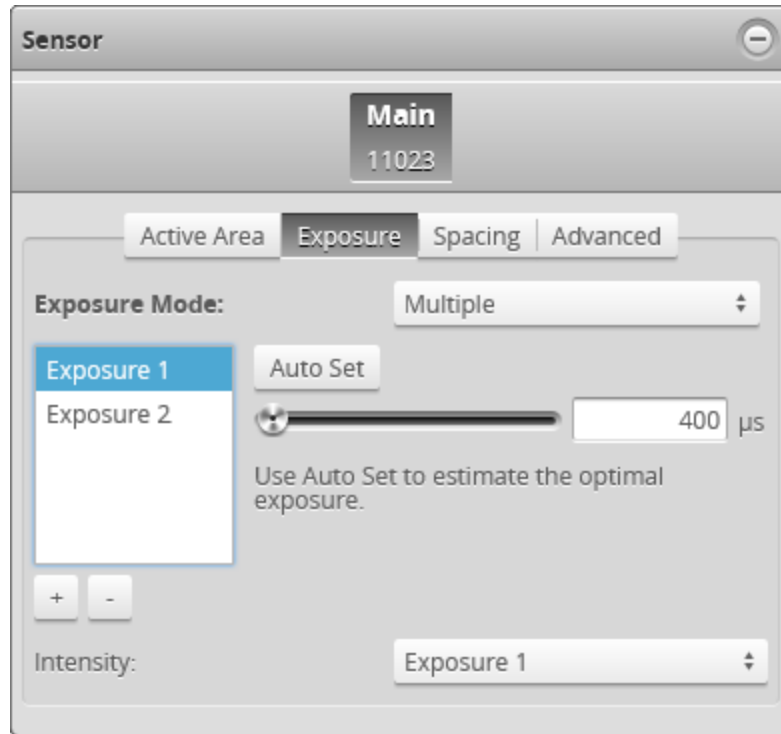

If you have enabled intensity in the **Scan Mode** tab, you can use the **Intensity** setting to choose which of the exposures Gocator uses for acquiring intensity data. This lets you choose the exposure that produces the best image for intensity data.

The following table lists the default exposure settings for the sensors:

Default multiple exposure settings

Model	Exposure 1 (μs)	Exposure 2 (μs)	Exposure 3 (μs)
Gocator 2345, Class 2M	400	3000	12000
Gocator 2345, Class 3R	150	1000	12000
Gocator 2381, Class 2	800	3000	12000
Gocator 2385, Class 2M	1000	4000	10000
Gocator 2385, Class 3R	500	2000	8000


To enable multiple exposure:

1. Go to the **Scan** page.
2. Expand the **Sensor** panel by clicking on the panel header or the button.
3. Click the **Exposure** tab.
4. Select **Multiple** from the **Exposure Mode** drop-down.
5. Click the button to add an exposure step.
Up to a maximum of five exposure settings can be added.
To remove an exposure, select it in the exposure list and click the button
6. Set the exposure level for each exposure to make the Gocator's camera less or more sensitive, as required.

7. If **Acquire Intensity** is enabled in **Scan Mode**, select the exposure that is used to capture the intensity output.
8. Run the sensor and check that laser profiling is satisfactory.
If laser profiling is not satisfactory, adjust the exposure values manually. Switch to **Video** mode to use video to help tune the exposure; see *Exposure* on page 73 for details.

Spacing

The **Spacing** tab lets you configure settings related to spacing (sub-sampling and spacing interval).

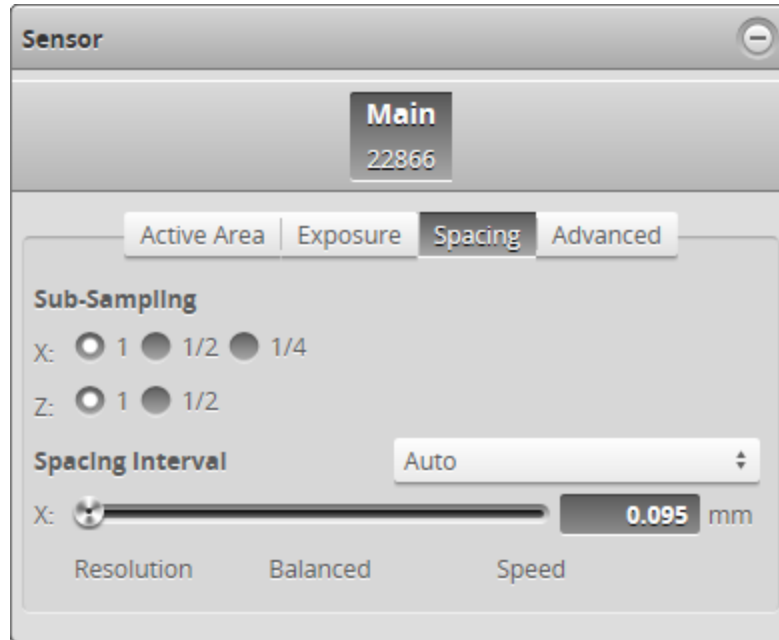

Sub-Sampling

Sub-sampling reduces the number of camera columns or rows that are used for laser profiling, reducing the resolution. Reducing the resolution increases speed or reduces CPU usage while maintaining the sensor's field of view. Sub-sampling can be set independently for the X axis and Z axis.

The **X** sub-sampling setting is used to decrease the profile's X resolution to decrease sensor CPU usage. The **X** setting works by reducing the number of image columns used for laser profiling.

The **Z** sub-sampling setting is used to decrease the profile's Z resolution to increase speed. The **Z** setting works by reducing the number of image rows used for laser profiling.

Sub-sampling values are expressed as fractions in the Web interface. For example, an X sub-sampling value of 1/2 indicates that every second camera column will be used for laser profiling.





The **CPU Load** bar at the top of the interface displays how much the CPU is being used.



Both the X and the Z sub-sampling settings must be decreased to increase speed.

To configure X or Z sub-sampling:

1. Go to the **Scan** page.
2. Expand the **Sensor** panel by clicking on the panel header or the  button.
3. Click the **Spacing** tab.
4. Select an X or Z sub-sampling value.
5. Save the job in the **Toolbar** by clicking the **Save** button .
6. Check that laser profiling is satisfactory.

Spacing Interval


Spacing interval is the spacing between data points in resampled data. (In Profile mode, resampled data is only produced if the **Uniform Spacing** option in the **Scan Mode** panel is checked.) A larger interval creates profiles with lower X resolution, reduces CPU usage, and potentially increases the maximum frame rate. A larger interval also reduces the data output rate.



The **Uniform Spacing** option must be checked in the **Scan Mode** panel for the **Spacing Interval** option to be displayed.

You can set the spacing interval either to one of three presets or set a custom value.

To configure the spacing interval:


1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, you will not be able to configure the spacing interval.
3. Expand the **Sensor** panel by clicking on the panel header or the  button.
4. Click the **Spacing** tab.
5. Do one of the following:

- Choose **Auto** and move the slider to one of the following values:

Speed: Uses the lowest X resolution within the active area as the spacing interval. This setting minimizes CPU usage and data output rate, but the profile has the lowest X resolution (i.e., least detail).


Balanced: Uses the X resolution at the middle of the active area as the spacing interval. This setting balances CPU load, data output rate, and X resolution.

Resolution: Uses the highest X resolution within the active area as the spacing interval. This setting maximizes resolution but has higher CPU load and has the highest data output rate (i.e., greatest detail).



- Choose **Custom** and move the slider to a precise value.
6. Select a spacing interval level.
 7. Save the job in the **Toolbar** by clicking the **Save** button .

Advanced

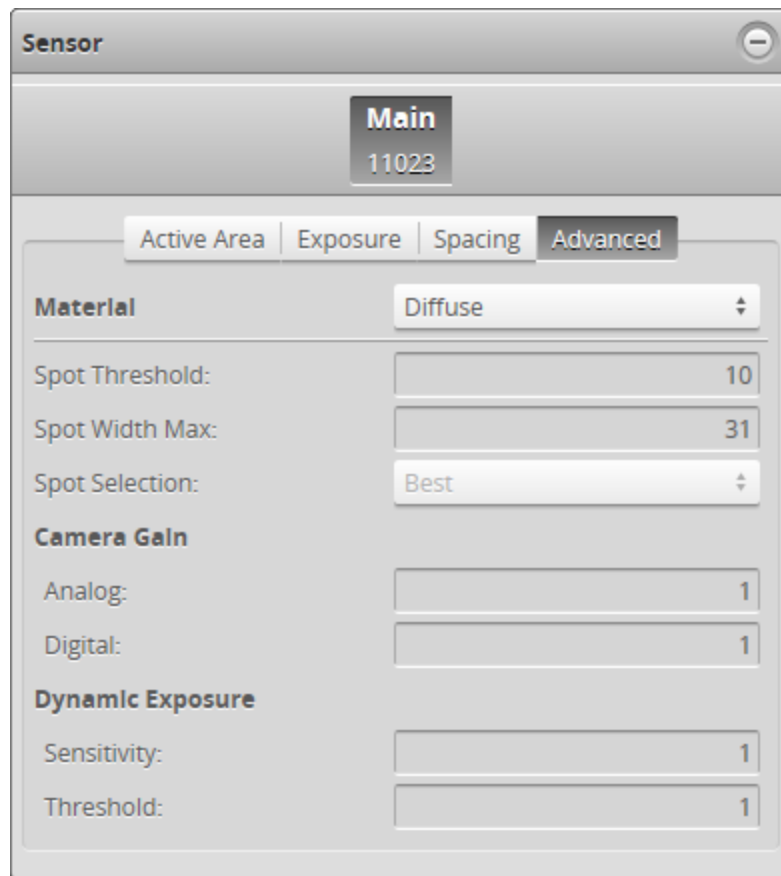The Advanced tab contains settings to configure material characteristics, camera gain, and dynamic exposure.



To configure advanced settings:


1. Go to the **Scan** page.
2. Switch to Video mode.
3. Expand the **Sensor** panel by clicking on the panel header or the  button.
4. If you are configuring a dual- or multi-sensor system, click the button corresponding to the sensor you want to configure.
The button is labeled **Top**, **Bottom**, **Top-Left**, or **Top-Right**, depending on the system.
Settings can be configured separately for each sensor.
5. Click on the **Advanced** tab.
6. Configure material characteristics, camera gain, or dynamic exposure.
See *Material* on the next page and *Camera Gain and Dynamic Exposure* on the next page for more information.
7. Save the job in the **Toolbar** by clicking the **Save** button .
8. Check that scan data is satisfactory.

Material

Data acquisition can be configured to suit different types of target materials. This helps maximize the number of useful profile points produced. For many targets, changing the setting is not necessary, but it can make a great difference with others.

Various settings can affect how the **Material** settings behave. See *Spots and Dropouts* on page 90 for more information.

Preset material types can be selected in the **Materials** setting under the **Advanced** tab.

 For Gocator 2345, 2381, and 2385, the default **Material** setting is **Diffuse**.

When **Materials** is set to **Custom**, the following settings can be configured:

Setting	Description
Spot Threshold	<p>The minimum increase in intensity level between neighbouring pixels for a pixel to be considered the start of a potential spot.</p> <p>This setting is important for filtering false profile spots generated by sunlight reflection.</p>
Spot Width Max	<p>The maximum number of pixels a spot is allowed to span.</p> <p>This setting can be used to filter out data caused by background light if the unwanted light is wider than the laser and does not merge into the laser itself. A lower Spot Width Max setting reduces the chance of false detection, but limits the ability to detect features/surfaces that elongate the spot.</p>
Spot Selection	<p>Determines the spot selection method.</p> <p>Best selects the strongest spot in a given column on the imager.</p> <p>Top selects the topmost spot or the one farthest to the left on the imager, and Bottom selects the bottommost spot or the one farthest to the right on the imager. These options can be useful in applications where there are reflections, flying sparks or smoke that are always on one side of the laser.</p> <p>None performs no spot filtering. If multiple spots are detected in an imager column, they are left as is. This option is only available if Uniform Spacing is disabled in the Scan Mode panel on the Scan page.</p> <p>Continuity considers adjacent horizontal data points on the imager to place spots on pixels, giving preference to more complete profile segments. The setting can improve scans in the presence of reflections and noise.</p>

Camera Gain and Dynamic Exposure

You can set camera gain and dynamic exposure to improve data acquisition.

Setting	Description
Camera Gain	<p>Analog camera gain can be used when the application is severely exposure limited, yet dynamic range is not a critical factor.</p>

Setting	Description
	Digital camera gain can be used when the application is severely exposure limited, yet dynamic range is not a critical factor.
Dynamic Exposure	<p>Sensitivity controls the exposure that dynamic exposure converges to. The lower the value, the lower the exposure Gocator will settle on.</p> <p>The trade-off is between the number of underexposed spots and the possibility of over-exposing.</p> <p>Threshold is the minimum number of spots for dynamic exposure to consider the profile point that make up the spot valid. If the number of spots is below this threshold, the algorithm will walk over the allowed exposure range slowly to find the correct exposure. Because this is slow, the Threshold value typically should be kept as low as possible, so this slow search is not used.</p> <p>These settings let you set tune how dynamic exposure settles on an exposure for a scan. For more information on Dynamic Exposure, see <i>Dynamic Exposure</i> on page 75.</p>

Alignment

Gocator sensors are pre-calibrated and ready to deliver profiles in engineering units (mm) out of the box. However, alignment procedures are required to compensate for sensor mounting inaccuracies. Alignment is performed using the **Alignment** panel on the **Scan** page.

Once alignment has been completed, the derived transformation values are displayed under **Transformations** in the **Sensor** panel; see *Transformations* on page 72 for details.

Alignment States

A Gocator can be in one of two alignment states: Unaligned and Aligned.

Alignment State

State	Explanation
Unaligned	The sensor or sensor system is not aligned. Profiles are reported in sensor coordinates.
Aligned	The sensor is aligned using the alignment procedure (see <i>Aligning Sensors</i> on the next page) or by manually modifying the values under Transformation in the Sensor tab on the Scan page (for more information, see <i>Transformations</i> on page 72).

An indicator on the **Alignment** panel display ALIGNED or UNALIGNED, depending on the Gocator's state.

Alignment Types

	Gocator 2345 and 2385 sensors only support stationary alignment.
---	--


Gocator sensors support two types of alignment: stationary or moving.

Type	Description
Stationary	Stationary is used when the sensor mounting is constant over time and between

Type	Description
	scans, for example, when the sensor is mounted in a permanent position over a conveyor belt.
Moving	Moving is used when the sensor's position relative to the object scanned is always changing, for example, when the sensor is mounted on a robot arm moving to different scanning locations.


Aligning Sensors

Alignment can be used to compensate for mounting inaccuracies by aligning sensor data to a common reference surface.

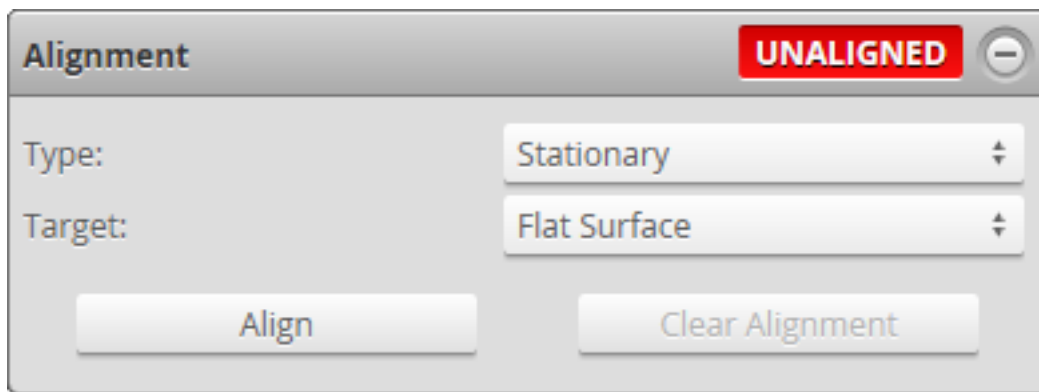

To align the sensor:

1. Make sure **Fixed** is selected in the **Manage** page.
See *Alignment Reference* on page 47 for more information.
2. Go to the **Scan** page.
3. Choose Profile mode in the **Scan Mode** panel.
If this mode is not selected, tools will not be available in the **Measure** panel.
4. Expand the **Alignment** panel by clicking on the panel header or the \oplus button.
5. Place a flat surface parallel to the molten aluminum surface under the sensor.
The laser line must be completely on the surface.
6. Hold *Digital In 2* (alignment trigger) for at least 10 ms to start alignment.
The sensor sets the *Digital Out 2* (alignment status) to low to indicate that the alignment sequence has started.
The sensor detects the laser line and uses this information to determine the angle that the sensor is mounted off of vertical from what the zero offset position is. The angle is used to correct the analog output signal so that a change in range is lineal and scaled as if the sensor were vertical.
If the alignment is successful, the sensor sets *Digital Out 2* to high. If alignment fails, *Digital Out 2* remains low.

 Alignment will be performed using the lowest exposure setting if multiple exposure


mode is selected. If alignment fails, check that target material can be exposed properly at the lowest exposure setting.

For more information on input and output signals, see *Gocator I/O Connector* on page 320.

Gocator 2345 and 2385 sensor are shipped unaligned.

Clearing Alignment

Alignment can be cleared to revert the sensor to sensor coordinates.

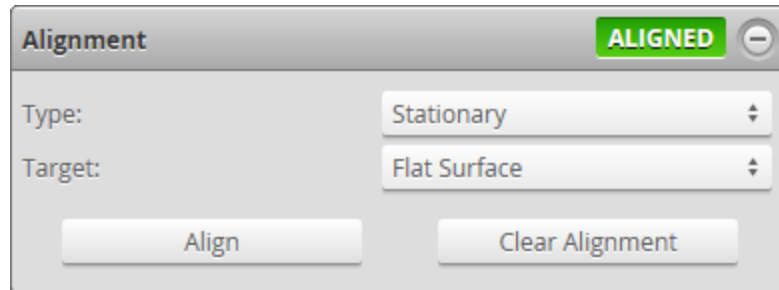

To clear alignment:

1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel, depending on the type of measurement whose decision you need to configure.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Expand the **Alignment** panel by clicking on the panel header or the \oplus button.
4. Click the **Clear Alignment** button.
The alignment will be erased and sensors will revert to using sensor coordinates.

Surface Generation

Gocator 2345 and 2385 sensors do not currently support this feature.

Part Detection

Gocator 2345 and 2385 sensors do not currently support this feature.

Filters

Filters are used to post-process scan data along the X or Y axis to remove noise or clean it up before it is output or is used by measurement tools.

The following types of filters are supported:

Filter	Description
Gap Filling	Fills in missing data caused by occlusions using information from the nearest neighbors.


Filter	Description
	Gap filling also fills gaps where no data is detected, which can be due to the surface reflectivity, for example dark or specular surface areas, or to actual gaps in the surface.
Median	Substitutes the value of a data point with the median within a specified window around the data point.
Smoothing	Applies moving window averaging to reduce random noise.
Decimation	Reduces the number of data points.

Filters are applied in the order displayed in the table above. The filters are configured in the **Filters** panel on the **Scan** page.


Gap Filling

Gap filling works by filling in missing data points using either the lowest values from the nearest neighbors or linear interpolation between neighboring values (depending on the Z difference between neighboring values), in a specified X or Y window. The sensor can fill gaps along both the X axis and the Y axis. X gap filling works by filling in the gaps within the same profile. Y gap filling works by filling in gaps in the direction of travel at each X location.


If both X and Y gap filling are enabled, missing data is filled along the X and Y axes at the same time, using the available neighboring data.

 In Profile mode, Gap Filling is limited to the X axis. (The Y setting is not available.)


 X Gap Filling is enabled by default

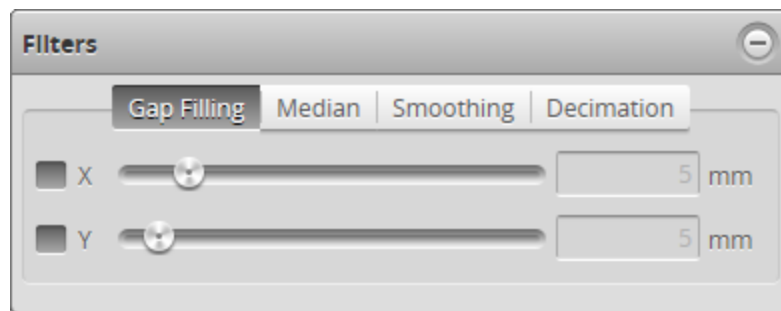

To configure X or Y gap filling:


1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, you will not be able to configure gap filling.
3. Expand the **Filters** panel by clicking on the panel header or the  button.
4. Click on the **Gap Filling** tab.
5. Enable the **X** or **Y** setting and select the maximum width value.
The value represents the maximum gap width that the Gocator will fill. Gaps wider than the maximum


width will not be filled.

6. Save the job in the **Toolbar** by clicking the **Save** button .
7. Check that the laser profiling is satisfactory.



Median

The Median filter substitutes the value of a data point with the median calculated within a specified window around the data point.

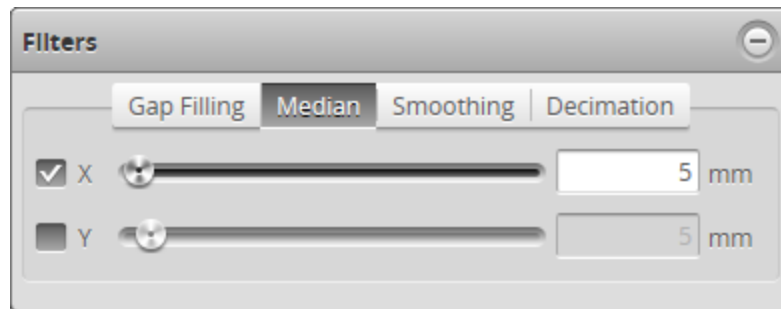 Missing data points will not be filled with the median value calculated from data points in the neighbourhood.




To configure X or Y median:


1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, you will not be able to configure the median filter.
3. Expand the **Filters** panel by clicking on the panel header or the  button.
4. Click on the **Median** tab.
5. Enable the **X** or **Y** setting and select the maximum width value.
6. Save the job in the **Toolbar** by clicking the **Save** button .
7. Check that the laser profiling is satisfactory.

Smoothing

Smoothing works by substituting a data point value with the average value of that data point and its nearest neighbors within a specified window. Smoothing can be applied along the X axis or the Y axis. X smoothing works by calculating a moving average across samples within the same profile. Y smoothing works by calculating a moving average in the direction of travel at each X location.

If both X and Y smoothing are enabled, the data is smoothed along X axis first, then along the Y axis.

 Missing data points will not be filled with the mean value calculated from data points in the neighbourhood.

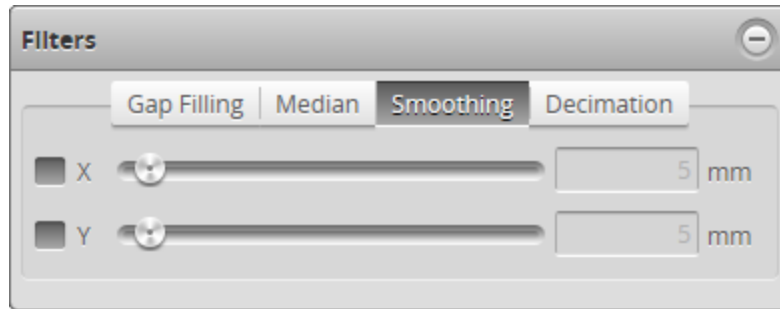


To configure X or Y smoothing:

1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, you will not be able to configure smoothing.
3. Expand the **Filters** panel by clicking on the panel header or the \oplus button.
4. Click on the **Smoothing** tab.
5. Enable the **X** or **Y** setting and select the averaging window value.
6. Save the job in the **Toolbar** by clicking the **Save** button \square .
7. Check that the laser profiling is satisfactory.


Decimation

Decimation reduces the number of data points along the X or Y axis by choosing data points at the end of a specified window around the data point. For example, by setting X to .2, only points every .2 millimeters will be used.

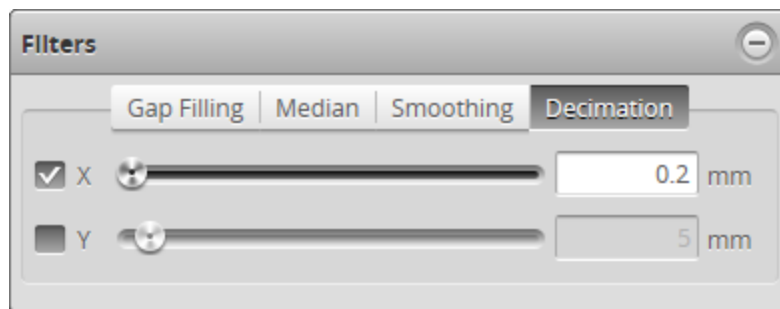

To configure X or Y decimation:

1. Go to the **Scan** page.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, you will not be able to configure the decimation filter.
3. Expand the **Filters** panel by clicking on the panel header or the \oplus button.
4. Click on the **Decimation** tab.

5. Enable the **X** or **Y** setting and select the decimation window value.
6. Save the job in the **Toolbar** by clicking the **Save** button .
7. Check that the laser profiling is satisfactory.

Data Viewer

The data viewer can display video images, profiles, and intensity images. It is also used to configure the active area (*Active Area* on page 69) and measurement tools (see *Measurement* on page 94). The data viewer changes depending on the current operation mode and the panel that has been selected.

Data Viewer Controls

The data viewer is controlled by mouse clicks and by the buttons on the display toolbar. The mouse wheel can also be used for zooming in and out.

Press 'F' when the cursor is in the data viewer to switch to full screen. Press Esc to exit full screen.

Video Mode


In Video mode, the data viewer displays a camera image. In this mode, you can configure the data viewer to display exposure, spot, and dropout information that can be useful in properly setting up the system for scanning.

Exposure Information

In Video mode, you can display exposure-related information.

Exposures

If you have set **Exposure Mode** to **Multiple**, and have set more than one exposure, a drop-down at the top of the data viewer lists the available exposures. Choosing an exposure changes the view of the data viewer to that exposure.

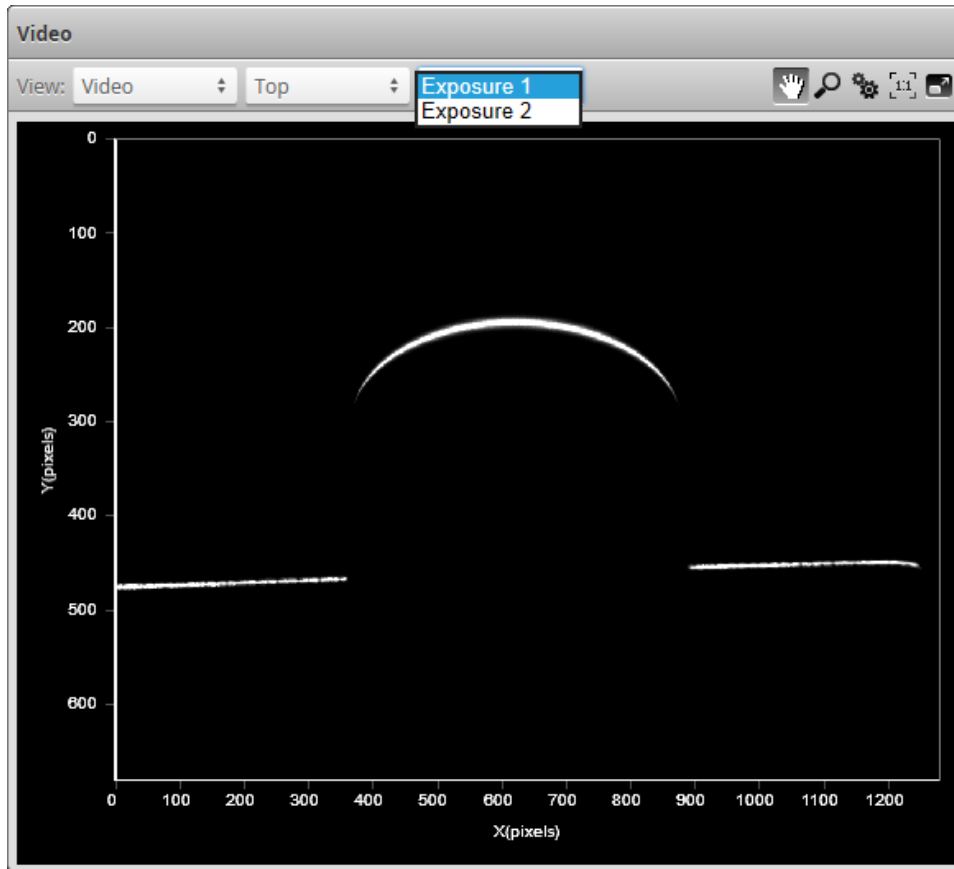


For details on setting exposure in the **Exposure** tab in the **Sensor** panel, see *Exposure* on page 73.

To select the exposure view of the display:

1. Go to the **Scan** page and choose **Video** mode in the **Scan Mode** panel.
2. Select the exposure.
Use the second drop-down list next to **View** at the top of the data viewer to select the exposure.

Overexposure and Underexposure

You can display a color exposure overlay on the video image to help set the correct exposure.

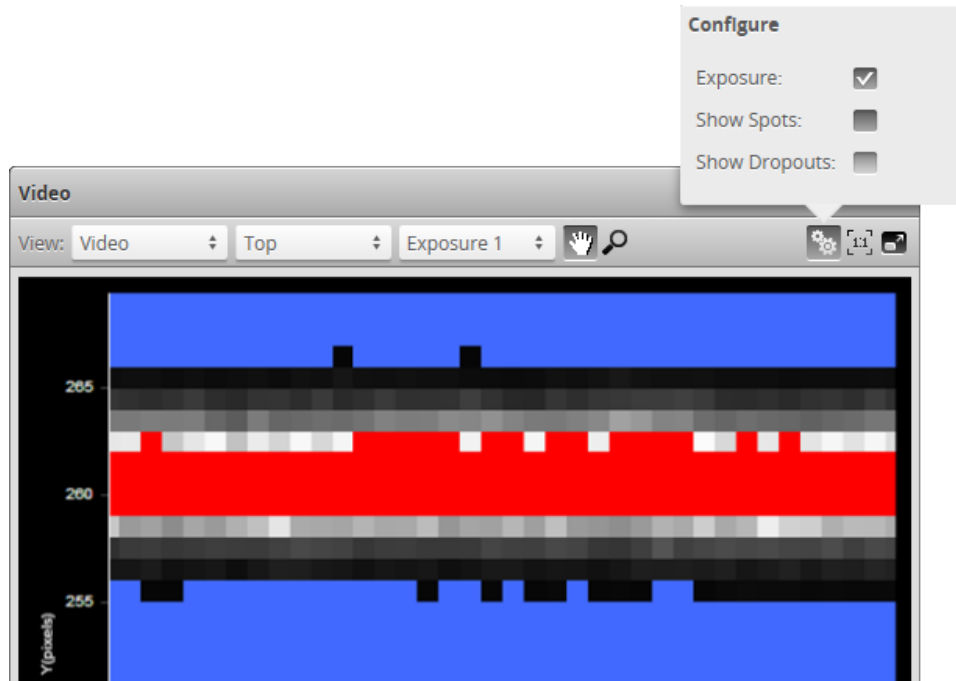

The **Exposure** setting uses the following colors:

- Blue: Indicates background pixels ignored by the sensor.
- Red: Indicates saturated pixels.

Correct tuning of exposure depends on the reflective properties of the target material and on the requirements of the application. Settings should be carefully evaluated for each application, but often a good starting point is to set the exposure so that there are 2 to 3 red pixels in the center of the laser line.


To display an overlay:

1. Go to the **Scan** page and choose **Video** mode in the **Scan Mode** panel.
2. Check **Exposure** at the top of the data viewer.

Spots and Dropouts

Various settings can affect how the **Material** settings behave. In Video mode, you can examine how the **Material** settings are affected. To do this, in Video mode, check the **Show Spots** option at the top of the data viewer to overlay a representation of the spots in the data viewer.

In the image below, the white and gray squares represent the laser line as it appears on the camera sensor. Spots (which represent the center of the laser line on the camera sensor for each column) are displayed as red "x" symbols. Dropouts (where no spot is detected on the camera sensor in a given column) are depicted at the upper edge of the data viewer as yellow dots.

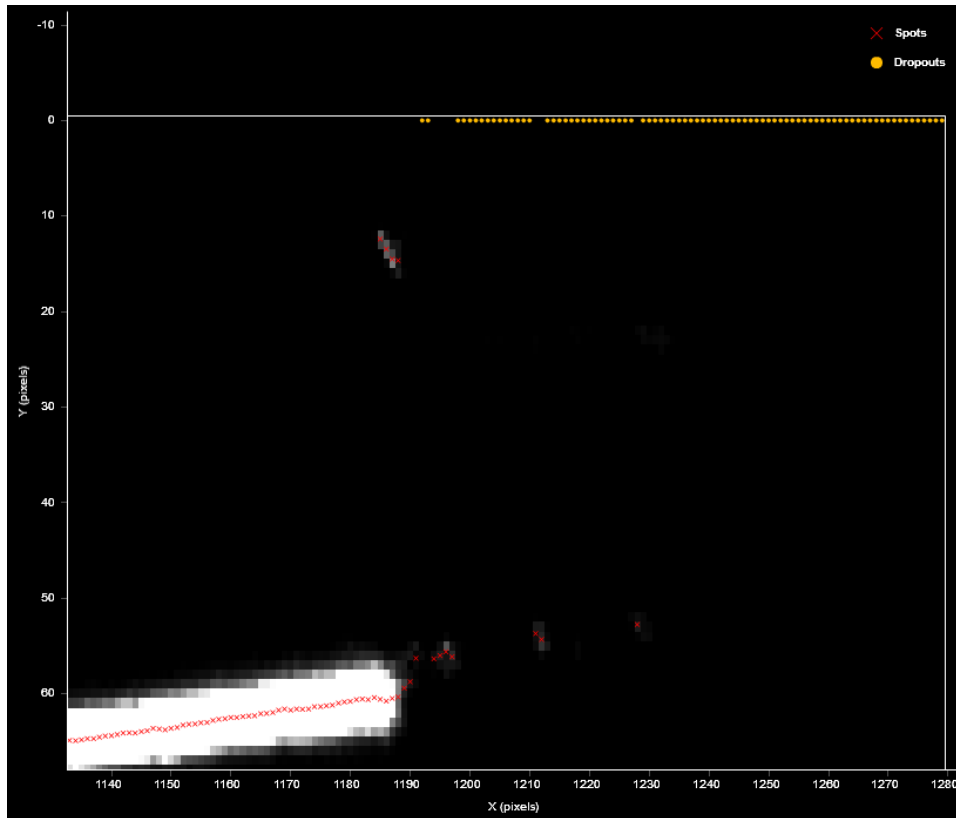


To show data dropouts:

1. Go to the **Scan** page and choose **Video** mode in the **Scan Mode** panel.
2. check the **Show Dropouts** option at the top of the data viewer.

For more information on the material settings, see *Advanced* on page 80.


Profile Mode

When the Gocator is in Profile scan mode, the data viewer displays profile plots.

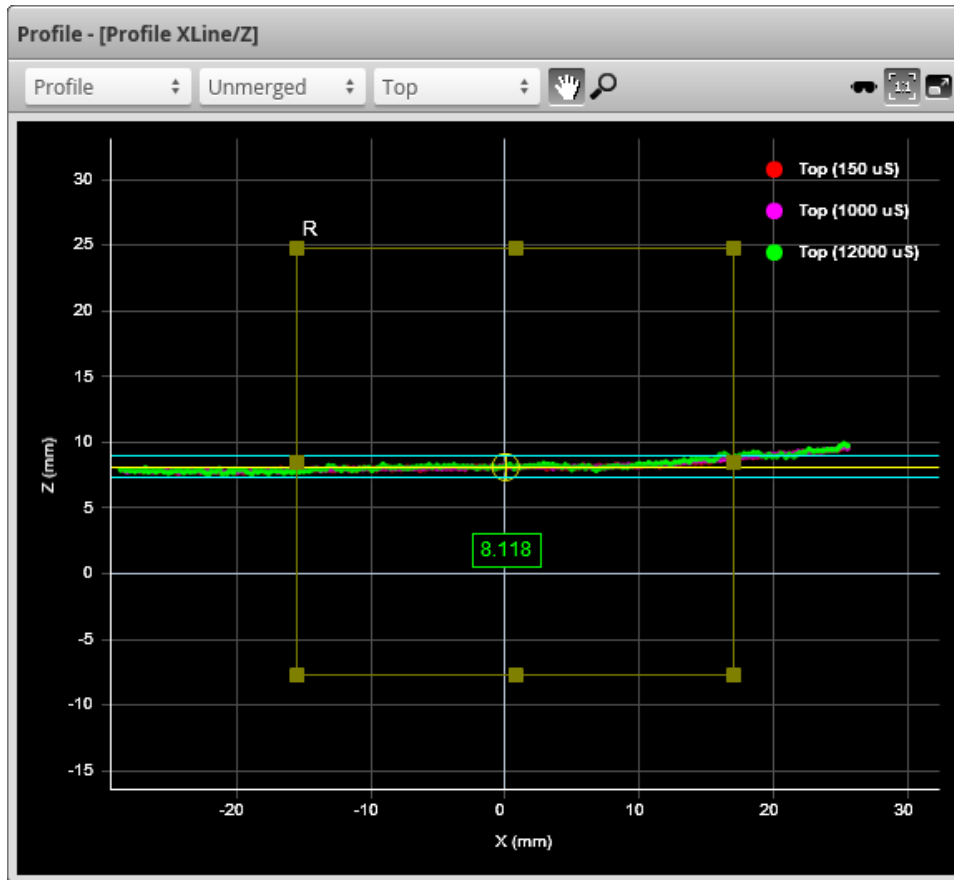

When in the **Scan** page, selecting a panel (e.g., **Sensor** or **Alignment** panel) automatically sets the display to the most appropriate display view.


When [multiple exposures](#) have been configured, a drop-down above the data viewer provides two options: **Merged** and **Unmerged**. The XLine tool is designed to work with unmerged data, so it is recommended to select **Unmerged**. Changing this option in the data viewer does not affect the data the tool runs on. However, to avoid confusion, leave this set to **Unmerged**.

When the sensor is in Profile mode, or in Surface mode when a section is displayed, a safety goggle mode button () is available in the data viewer. Enabling this mode changes some colors to ensure that profiles are visible in the data viewer when wearing laser safety goggles.

Region Definition

Regions, such as an active area or a measurement region, can be graphically set up using the data viewer.

When the **Scan** page is active, the data viewer can be used to graphically configure the active area. The **Active Area** setting can also be configured manually by entering values into its fields and is found in the **Sensor** panel (see *Sensor* on page 69).

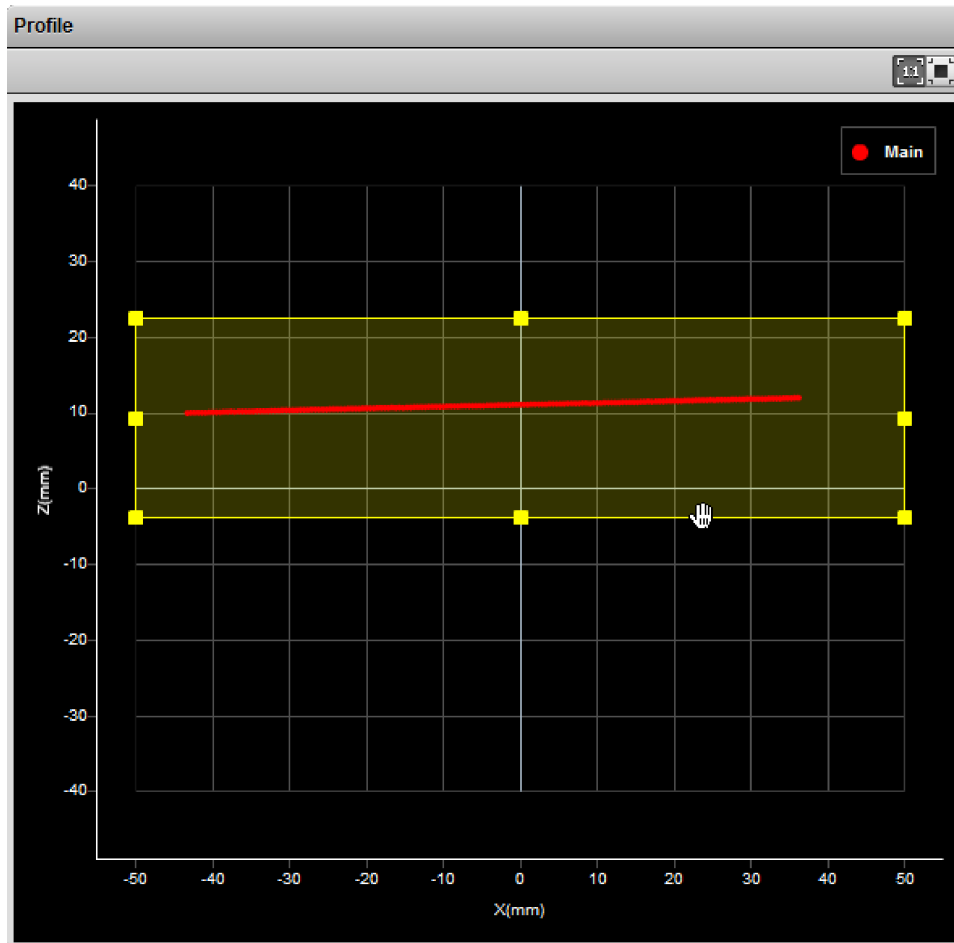

To set up a region of interest:

1. Move the mouse cursor to the rectangle.
The rectangle is automatically displayed when a setup or measurement requires an area to be specified.
2. Drag the rectangle to move it, and use the handles on the rectangle's border to resize it.

Models

Gocator 2345 and 2385 sensors do not currently support this feature.

Measurement


The following sections describe Gocator's tools and measurements.

Measure Page Overview

Measurement tools are added and configured in the **Measure** page.

For Gocator 2345 and 2385 sensors, typically only the XLine tool is used for molten metal level control.

The content of the **Tools** panel in the **Measure** page depends on the current scan mode. In Profile mode, the **Measure** page displays tools for profile measurement. In Video mode, tools are not accessible.

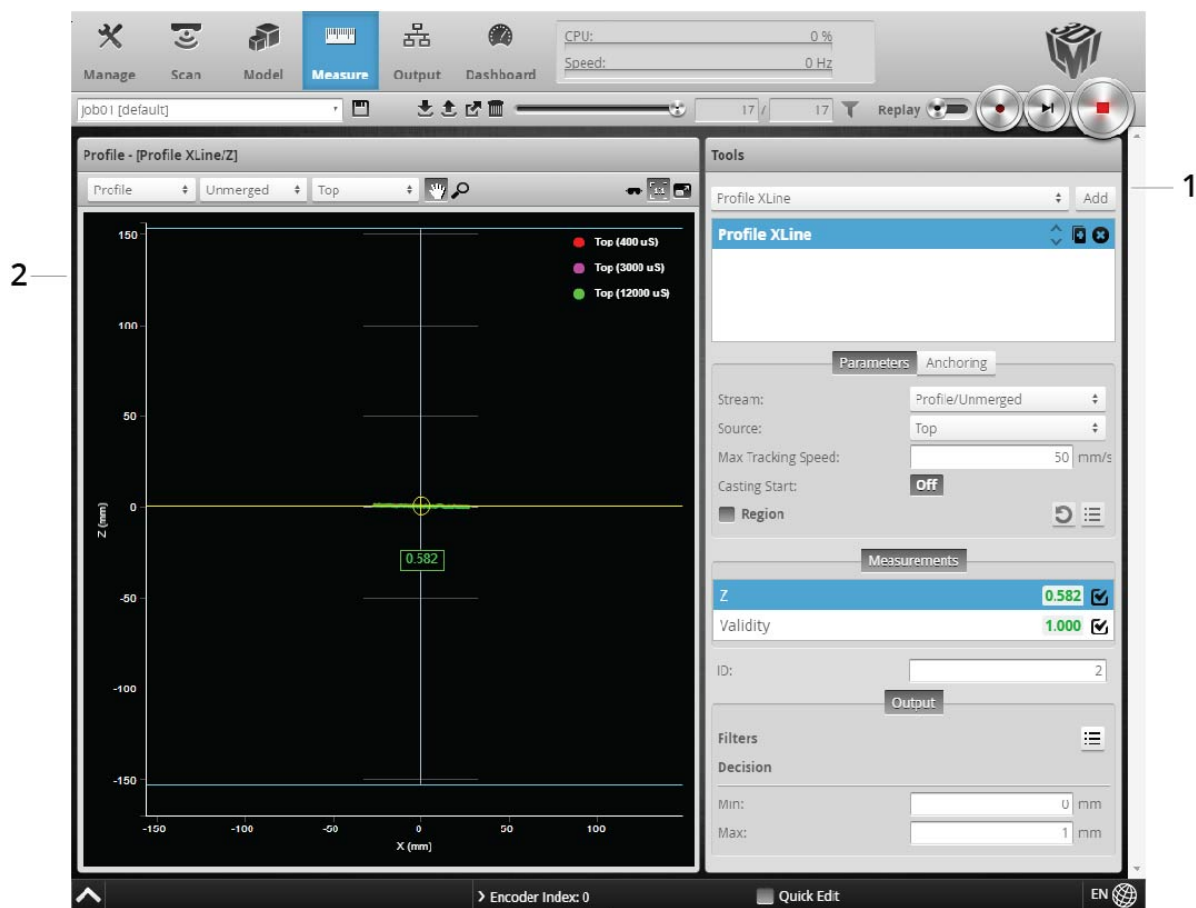

Element	Description
1	Tools panel Used to add, manage, and configure tools and measurements (<i>Tools Panel</i> on the next page).
2	Data Viewer Displays profile data, sets up tools, and displays result calipers related to the selected measurement. <i>See Data Viewer</i> on the next page.

Data Viewer

When the **Measure** page is active, the data viewer can be used to graphically configure measurement regions in the 2D or in the 3D views. Measurement regions can also be configured manually in measurements by entering values into the provided fields (see *Regions* on the next page).

For instructions on how to set up measurement regions graphically, *Region Definition* on page 92.

Tools Panel

The **Tools** panel lets you add, configure, and manage measurement tools. Tools contain related measurements. For example, the Dimension tool provides Height, Width, and other measurements.

Some settings apply to tools, and therefore to all measurements; these settings are found in the **Parameters** tab below the list of tools. Other settings apply to specific measurements, and are found in a **Parameters** tab below the list of measurements; not all measurements have parameters.


See *Profile Measurement* on page 107 for information on the measurement tools and their settings.



Tool names in the user interface include the scan mode, but not in the manual. So for example, you will see "Profile Area" or "Surface Bounding Box" in the user interface, but simply "Area" or "Bounding Box" in the manual.

Adding and Configuring a Tool

Adding a tool adds all of the tool's measurements to the **Tools** panel. You can then enable and configure the measurements selectively.

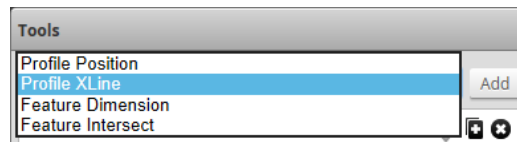


To add and configure a tool:

1. Go to the **Scan** page by clicking on the **Scan** icon.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Go to the **Measure** page by clicking on the **Measure** icon.
4. In the Tools panel, select the tool you want to add from the drop-down list of tools.
5. Click on the **Add** button in the Tools panel.
The tool and its available measurements are added to the tool list. The tool parameters are listed in the area below the tool list.
6. (Optional) If you are running a dual-sensor system, choose the sensor that will provide data to the measurement tool in **Source**.



Sources are not supported on Gocator 2345 and 2385 sensors.


- (Optional) If the measurement is a profile measurement running on a section, and you have created more than one section, choose the section that will provide data to the measurement in **Stream**.

 Streams are not supported on Gocator 2345 and 2385 sensors.

- Select a measurement at the bottom of the tool panel.
- Set any tool- or measurement-specific settings.
For tool- and measurement-specific settings, see the topics for the individual tools.
- Set the **Min** and **Max** decision values.
For more information on decisions, see *Decisions* on page 99.
- (Optional) Set one or more filters.
For more information on filters, see *Filters* on page 100.
- (Optional) Set up anchoring.
For more information on anchoring, see *Measurement Anchoring* on page 102.

Regions


Many measurement tools use user-defined regions to limit the area in which measurements occur. Unlike reducing the [active area](#), reducing the measurement region does not increase the maximum frame rate of the sensor.

 You can disable regions entirely and cause the measurement tool uses the entire [active area](#) by unchecking the checkbox next to the **Regions** setting.

All tools provide region settings under the upper **Parameters** tab. Regions apply to all of a tool's measurements.



Region settings are often found within expandable feature sections in the tool's panel.

 In 2D mode, the tool region defaults to the center of the current data view, not the global field of view. In 3D mode, the region defaults to the global field of view.

To configure regions:


- Go to the **Measure** page by clicking on the **Measure** icon.



The [scan mode](#) must be set to the type of measurement you need to configure. Otherwise, the wrong tools, or no tools, will be listed on the **Measure** page.


2. In the **Tools** panel, click on a tool in the tool list.
3. Expand the region section by clicking on the expand button . Some region settings are found within other settings in this area.
4. Configure the region using the fields or graphically using the mouse in the data viewer.

The measurement region of some tools can be rotated by setting the region's **Z Angle** to better accommodate features that are on an angle on a target. By rotating the measurement region, data not related to the feature can often be excluded, improving accuracy of measurements.

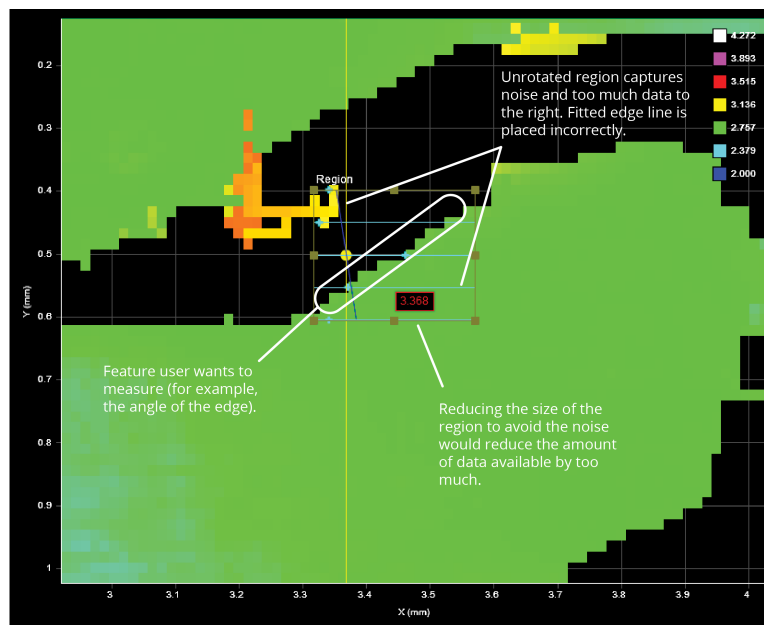

To rotate measurement regions:


1. Determine the length and width of the region that will be required once it is rotated.

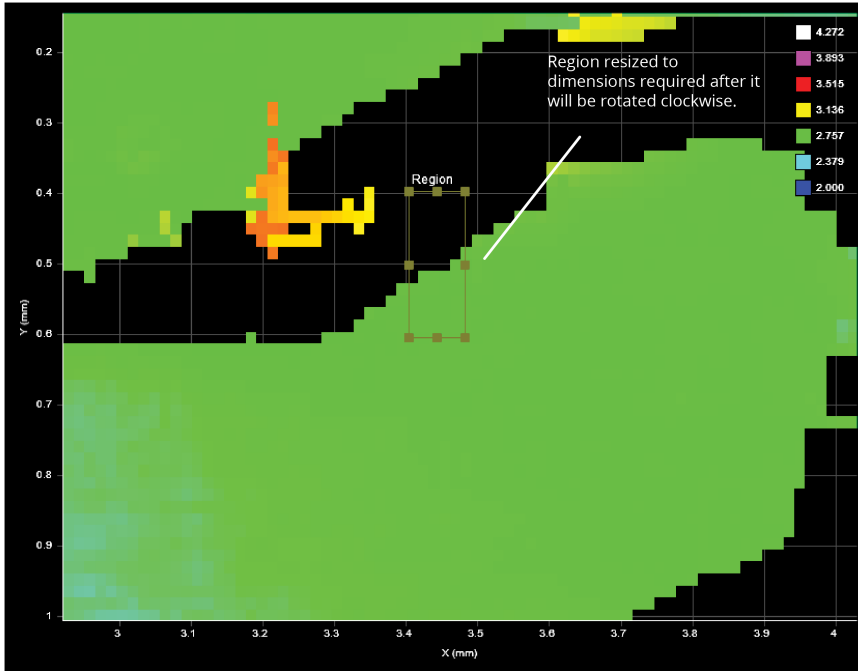

- Expand the **Region** setting and then set a value in **Z Angle**.

Region	
X:	3.404 mm
Y:	0.397 mm
Z:	-16.725 mm
Width:	0.079 mm
Length:	0.207 mm
Height:	28.346 mm
Z angle:	55 °

The region rotates clockwise around the Z axis relative to the X axis.

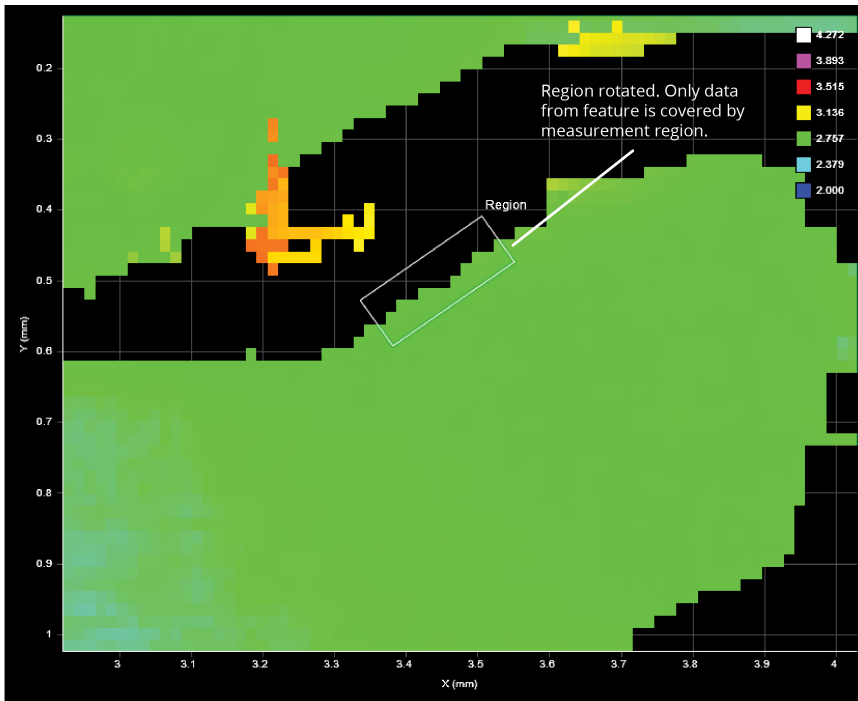


Once the region has been rotated, you cannot modify it in the data viewer using the mouse. You can however modify its dimensions and its location manually by changing the region's values in the **Region** setting.

Decisions

Results from a measurement can be compared against minimum and maximum thresholds to generate *pass / fail* decisions. The decision state is *pass* if a measurement value is between the minimum and maximum threshold. In the data viewer and next to the measurement, these values are displayed in green. Otherwise, the decision state is *fail*. In the user interface, these values are displayed in red.

All measurements provide decision settings under the **Output** tab.

Value (14.786) within decision thresholds (Min: 14, Max: 15). Decision: Pass

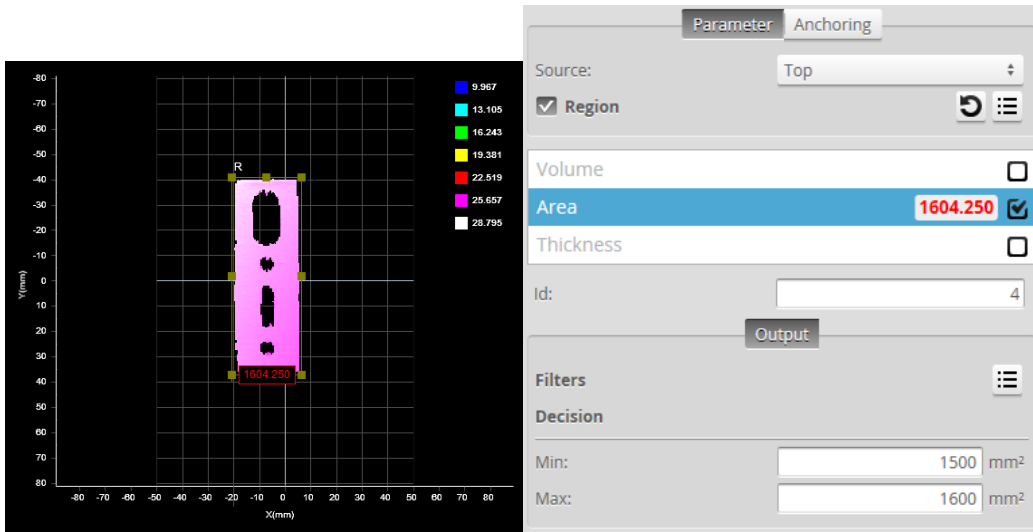


Value (1604.250) outside decision thresholds (Min: 1500, Max: 1600). Decision: Fail

Along with measurement values, decisions can be sent to external programs and devices. In particular, decisions are often used with digital outputs to trigger an external event in response to a measurement. See *Output* on page 118 for more information on transmitting values and decisions.

To configure decisions:


1. Go to the **Measure** page by clicking on the **Measure** icon.

 The [scan mode](#) must be set to the type of measurement you need to configure. Otherwise, the wrong tools, or no tools, will be listed on the **Measure** page.

2. In the **Tools** panel, click on a tool in the tool list.
3. In the measurement list, select a measurement.
To select a measurement, it must be enabled. See *Enabling and Disabling Measurements* on page 104 for instructions on how to enable a measurement.
4. Click on the **Output** tab.
For some measurements, only the **Output** tab is displayed.
5. Enter values in the **Min** and **Max** fields.

Filters

Filters can be applied to measurement values before they are output from the Gocator sensors.

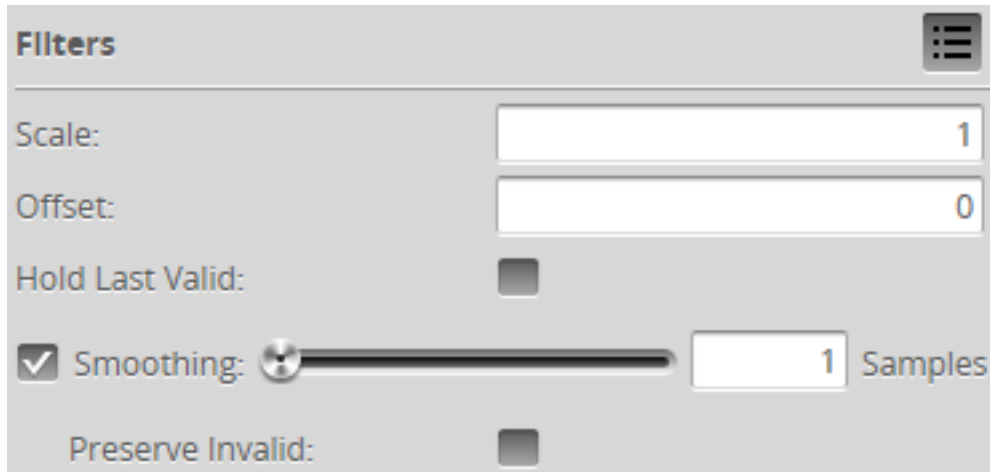


All measurements provide filter settings under the **Output** tab. The following settings are available.

Filter	Description
Scale and Offset	<p>The Scale and Offset settings are applied to the measurement value according to the following formula:</p> $\text{Scale} * \text{Value} + \text{Offset}$ <p>Scale and Offset can be used to transform the output without the need to write a script. For example, to convert the measurement value from millimeters to thousands of an inch, set Scale to 39.37. To convert from radius to diameter, set Scale to 2.</p>
Hold Last Valid	Holds the last valid value when the measurement is invalid. Measurement is invalid if there is no valid value.
Smoothing	<p>Applies moving window averaging to reduce random noise in a measurement output. The averaging window is configured in number of frames.</p> <p>If Hold Last Valid is enabled, smoothing uses the output of the Hold Last Valid filter.</p>
Preserve Invalid	When enabled, smoothing is only applied to valid measurements and not to invalid results. When disabled, smoothing is applied to both valid and invalid results. (This setting is only visible when Smoothing is enabled.)

To configure the filters:

1. Go to the **Measure** page by clicking on the **Measure** icon.


 The [scan mode](#) must be set to the type of measurement you need to configure. Otherwise, the wrong tools, or no tools, will be listed on the **Measure** page.

2. In the **Tools** panel, click on a tool in the tool list.
3. In the measurement list, select a measurement.
To select a measurement, it must be enabled. See *Enabling and Disabling Measurements* on page 104 for instructions on how to enable a measurement.

4. Click on the **Output** tab.
For some measurements, only the **Output** tab is displayed.
5. Expand the **Filters** panel by clicking on the panel header or the \oplus button.
6. Configure the filters.
Refer to the table above for a list of the filters.

Measurement Anchoring

Measurement anchoring is used to track the movement of parts within the field of view of the sensor, compensating for variations in the height and position of parts. The movement is calculated as an offset from the position of a measured feature, where the offset is then used to correct the positions of measurement regions of other measurement tools. This ensures that the regions used to measure features are correctly positioned for every part.

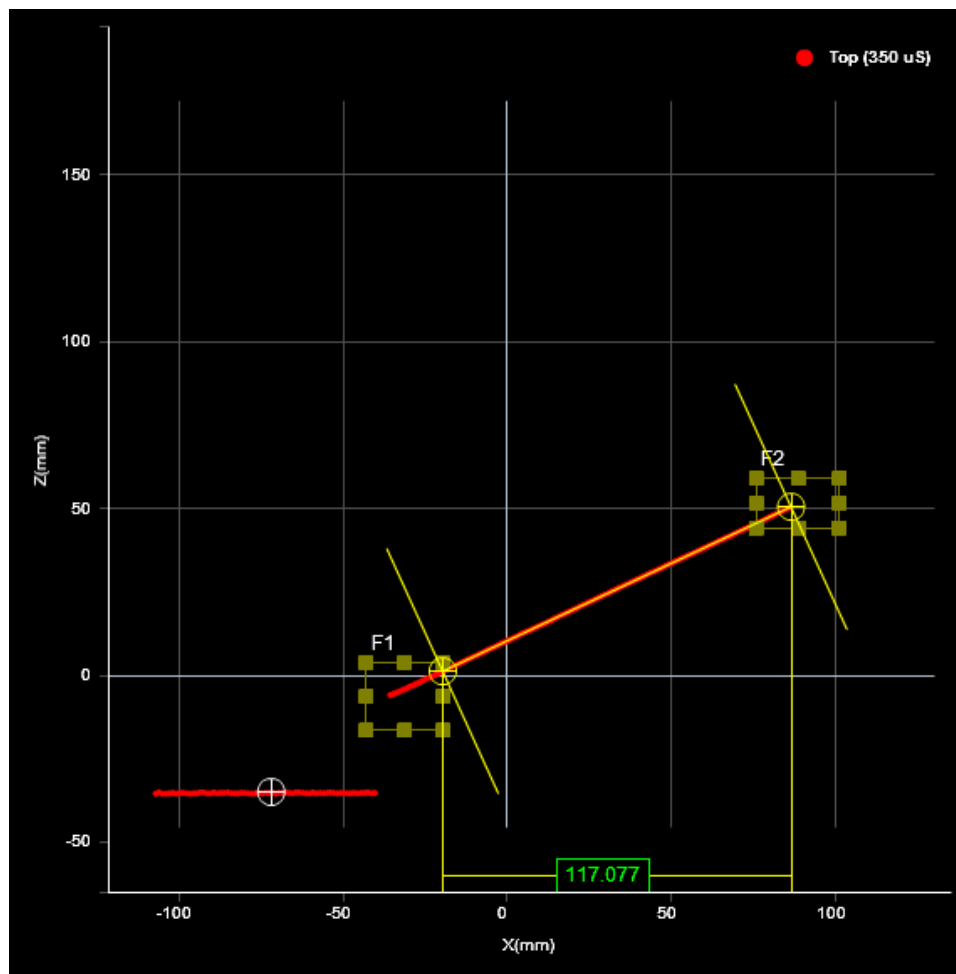

Parameter
Anchoring

X: #3 - Profile Position X ⌵

Z: Disabled ⌵

Width	<input type="checkbox"/>
Height	<input type="checkbox"/>
Distance	117.077 <input checked="" type="checkbox"/>
Center X	<input type="checkbox"/>
Center Z	<input type="checkbox"/>

Id: 2

Output

Filters ☰

Decision

Min: 110 mm

Max: 125 mm

Anchoring is not required in order to use measurement tools. This is an optional feature that helps make measurements more robust when the position and the height of the target varies from target to target.

Any X or Z measurement can be used as an anchor for a tool.

Several anchors can be created to run in parallel. For example, you could anchor some measurements relative to the left edge of a target at the same time as some other measurements are anchored relative to the right edge of a target.

To anchor a profiletool to a measurement:

1. Place a representative target object in the field of view.
 - In Profile mode*
 - a. Use the **Start** or **Snapshot** button to view live profile data to help position the target.
2. On the **Measure** page, add a suitable tool to act as an anchor.

A suitable tool is one that returns an X, Y, or Z position or Z Angle as a measurement value.

3. Adjust the anchoring tool's settings and measurement region, and choose a feature type (if applicable). You can adjust the measurement region graphically in the data viewer or manually by expanding the **Regions** area.

The position and size of the anchoring tool's measurement regions define the zone within which movement will be tracked.

See *Feature Points* on page 107 for more information on feature types.


4. Add the tool that you want to anchor.
Any tool can be anchored.
5. Adjust the tool and measurement settings, as well as the measurement regions, on a scan of the representative target.
6. Click on the tool's **Anchoring** tab.
7. Choose an anchor from one of the drop-down boxes.
If the sensor is running, the anchored tool's measurement regions are shown in white to indicate the regions are locked to the anchor. The measurement regions of anchored tools cannot be adjusted. The anchored tool's measurement regions are now tracked and will move with the target's position under the sensor, as long as the anchoring measurement produces a valid measurement value. If the anchoring measurement is invalid, for example, if part moves outside its measurement region, the anchored tool will not show the measurement regions at all and an "Invalid-Anchor" message will be displayed in the tool panel.
8. Verify that the anchored tool works correctly on other scans of targets in which the part has moved slightly.

To remove an anchor from a tool:

1. Click on the anchored tool's Anchoring tab.
Select **Disabled** in the X, Y, or Z drop-down.

Enabling and Disabling Measurements

All of the measurements available in a tool are listed in the measurement list in the **Tools** panel after a tool has been added. To configure a measurement, you must enable it.

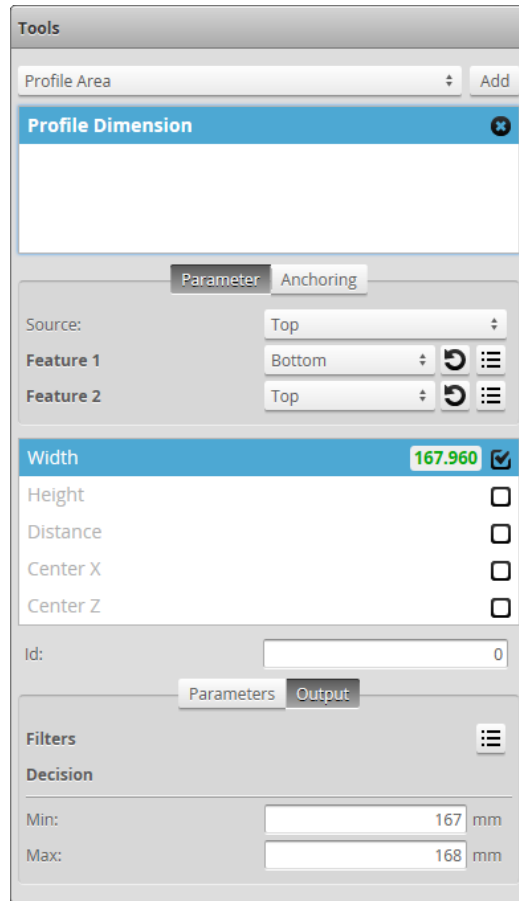

To enable a measurement:

1. Go to the **Scan** page by clicking on the **Scan** icon.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Go to the **Measure** page by clicking on the **Measure** icon.
4. In the measurements list, check the box of the measurement you want to enable.
The measurement will be enabled and selected. The **Output** tab, which contains output settings will be displayed below the measurements list. For some measurements, a **Parameters** tab, which contains measurement-specific parameters, will also be displayed.

To disable a measurement:

1. Go to the **Scan** page by clicking on the **Scan** icon.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
3. Go to the **Measure** page by clicking on the **Measure** icon.
4. In the measurement list, uncheck the box of the measurement you want to disable.
The measurement will be disabled and the **Output** tab (and the **Parameters** tab if it was available) will be hidden.

Editing a Tool or Measurement Name

You can change the names of tools you add in Gocator. You can also change the names of their measurements. This allows multiple instances of tools and measurements of the same type to be more easily distinguished in the Gocator web interface. The measurement name is also referenced by the Script tool.

To change a tool or measurement name:

1. Go to the **Scan** page by clicking on the **Scan** icon.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Go to the **Measure** page by clicking on the **Measure** icon.
4. Do one of the following:
 - **Tool:** In the tool list, double-click the tool name you want to change
 - **Measurement:** In a tool's measurement list, double-click the measurement name you want to change.
5. Type a new name.
6. Press the Tab or Enter key, or click outside the field.
The name will be changed.

Changing a Measurement ID

The measurement ID is used to uniquely identify a measurement in the Gocator protocol or in the SDK. The value **must** be unique among all measurements.

To edit a measurement ID:

1. Go to the **Scan** page by clicking on the **Scan** icon.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If one of these modes is not selected, tools will not be available in the **Measure** panel.
3. Go to the **Measure** page by clicking on the **Measure** icon.
4. In the measurement list, select a measurement.
To select a measurement, it must be enabled. See *Enabling and Disabling Measurements* on page 104 for instructions on how to enable a measurement.
5. Click in the ID field.
6. Type a new ID number.
The value must be unique among all measurements.
7. Press the Tab or Enter key, or click outside the ID field.
The measurement ID will be changed.

Removing a Tool

Removing a tool removes all of its associated measurements.

To remove a tool:

1. Go to the **Scan** page by clicking on the **Scan** icon.
2. Choose Profile or Surface mode in the **Scan Mode** panel.
If is not selected, tools will not be available in the **Measure** panel.
3. Go to the **Measure** page by clicking on the **Measure** icon.
4. In the tool list, click on the Duplicate button (⊗) of the tool you want to duplicate.
A copy of the tool appears below the original.





Profile Measurement

This section describes the profile measurement tools available in Gocator sensors.

Feature Points

Dimensional and positional measurements detect *feature points* found within the defined [measurement region](#) and then compare measurement values taken at the selected point with minimum and maximum thresholds to produce a *decision*. Feature points are selected in one or more **Feature** dropdowns in a tool and are used for all of the tool's measurements.


The following types of points can be identified in a measurement region.

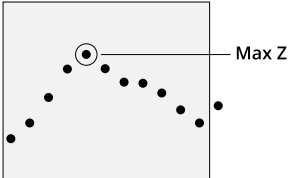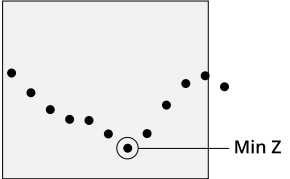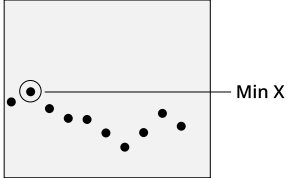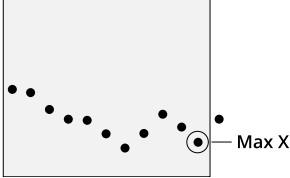Point Type	Examples
Max Z Finds the point with the maximum Z value in the region of interest.	
Min Z Finds the point with the minimum Z value in the region of interest.	
Min X Finds the point with the minimum X value in the region of interest.	
Max X Finds the point with the maximum X value in the region of interest.	


Point Type**Examples**

Average


Determines the average location of points in the region of interest.

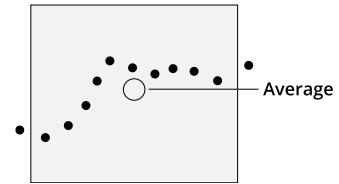**Corner**


Finds a dominant corner in the region of interest, where corner is defined as a change in profile slope.

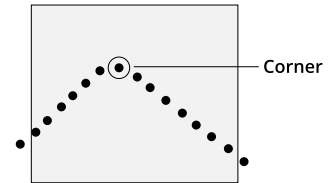**Top Corner**


Finds the top-most corner in the region of interest, where corner is defined as a change in profile shape.

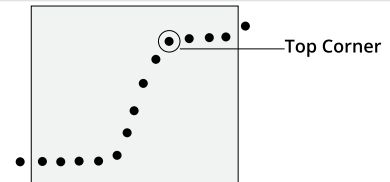**Bottom Corner**


Finds the bottom-most corner in the region of interest, where corner is defined as a change in profile shape.

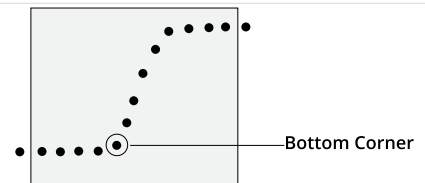**Left Corner**


Finds the left-most corner in the region of interest, where corner is defined as a change in profile shape.

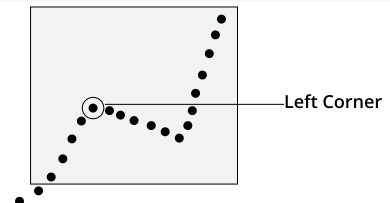**Right Corner**

Finds the right-most corner in the region of interest, where corner is defined as a change in profile shape.

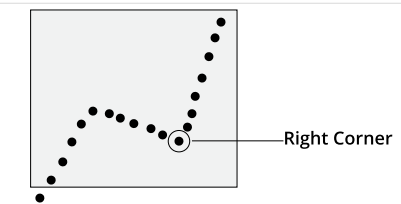**Rising Edge**


Finds a rising edge in the region of interest.

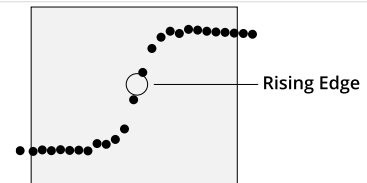



Point Type**Examples**

Falling Edge


Finds a falling edge in the region of interest.

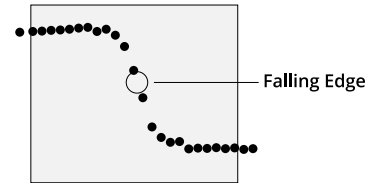**Any Edge**

Finds a rising or falling edge in the region of interest.

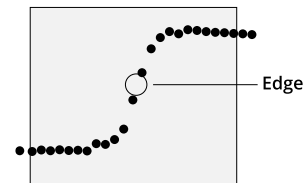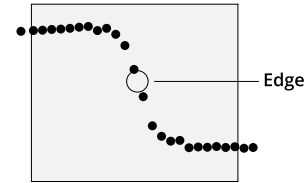**Median**

Determines the median location of points in the region of interest.

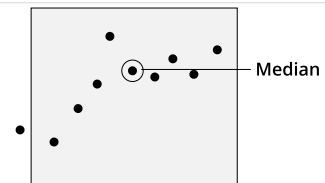


Measurement Tools

Position

The Position tool finds the X or Z axis position of a feature point. The feature type must be specified and is one of the following: Max Z, Min Z, Max X, Min X, Corner, Average (the mean X and Z of the data points), Rising Edge, Falling Edge, Any Edge, Top Corner, Bottom Corner, Left Corner, Right Corner, or Median (median X and Z of the data points). Gocator compares the measurement value with the values in **Min** and **Max** to yield a decision. For more information on decisions, see *Decisions* on page 99.

See *Adding and Configuring a Tool* on page 95 for instructions on how to add measurement tools.

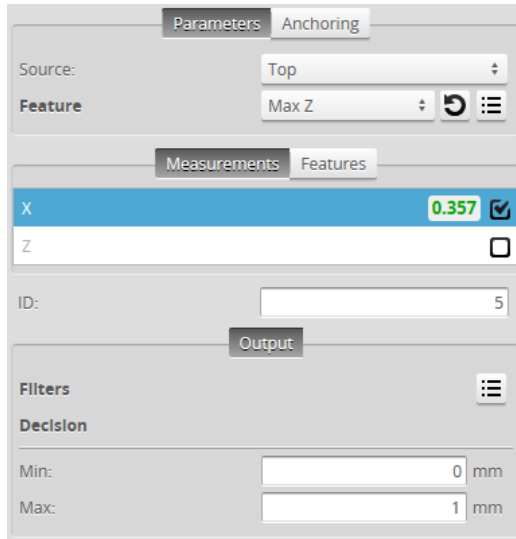

Measurements, Features, and Settings

Measurements

Measurement

X

Finds the position of a feature on the X axis.

Z

Finds the position of a feature on the Z axis.

Parameters

Parameter	Description
Feature Type	Choose Max Z, Min Z, Max X, Min X, Corner, Average, Rising Edge, Falling Edge, Any Edge, Top Corner, Bottom Corner, Left Corner, Right Corner, or Median.
Decision	See <i>Decisions</i> on page 99.
Region	See <i>Regions</i> on page 96.
Output	See <i>Filters</i> on page 100.

XLine

The XLine tool returns a single, averaged range measurement for each profile the sensor captures. The tool can also return whether a measurement is valid.


Casting Start indicates that the cast has begun, but the starting head has not been lowered yet. During this time, reflections of the laser line on the meniscus of the molten metal can result in measurements below the starting head. Measurements are ignored while **Casting Start** is on.

Gocator compares the measurement value with the values in **Min** and **Max** to yield a decision. For more information on decisions, see *Decisions* on page 99.

See *Adding and Configuring a Tool* on page 95 for instructions on how to add measurement tools.

You must disable **Uniform Spacing** (in the **Scan Mode** panel on the **Scan** page) for this measurement to be available in the **Tools** panel. For more information, see *Scan Modes* on page 62.

The XLine tool is designed to work with *unmerged* data. Make sure to set the tool's **Stream** setting to **Unmerged**.
(When a sensor has been configured to use [multiple exposures](#), in unmerged data, individual profiles from each exposure are preserved in the data. In merged data, profiles from each exposure are combined into a single profile.)

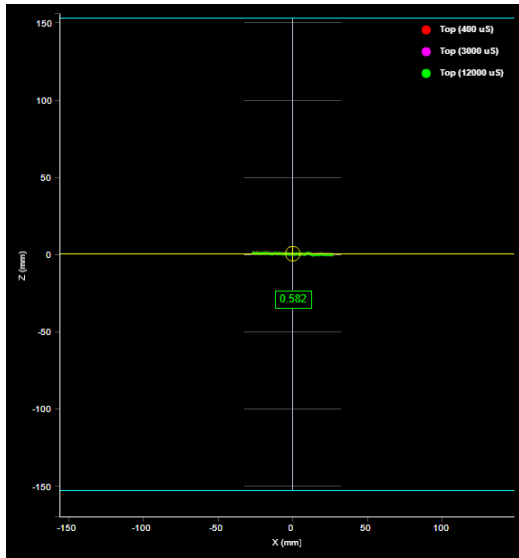

Parameters Anchoring

Stream: Profile/Unmerged

Source: Top

Max Tracking Speed: 50 mm/s

Casting Start: Off

Region

Measurements

Z	0.582	<input checked="" type="checkbox"/>
Validity	1.000	<input checked="" type="checkbox"/>

ID: 2

Output

Filters

Decision

Min: 0 mm

Max: 1 mm

For information on common tool parameters (and defaults), see *Tool Parameters (common to all measurements)* on the next page.

Measurements

Measurement

Z

Finds the height of the target surface on the Z axis.

For information on this measurement's parameters (and default values), see *Z Measurement Parameters* on the next page.

Validity

Returns whether the measurement is valid.

For information on tool parameters, see *Tool Parameters (common to all measurements)* on the next page.

For information on this measurement's parameters (and default values), see *Validity Measurement Parameters* on the next page.

Tool Parameters (common to all measurements)

Parameter	Description
Source	The source sensor. Always Top .
Stream	Leave this set to the default of Profile/Unmerged .
Max Tracking Speed	The maximum allowed rate of change in a range before it is rejected as noise caused by smoke, steam, or reflections. The default is 50 mm/s.
Region	See <i>Regions</i> on page 96.

Z Measurement Parameters

Parameter	Description
Filters	The filters that are applied to measurement values before they are output. The following are the default settings for the Z measurement: Scale: 1 Offset: 0 Hold Last Valid: Yes Smoothing: No Preserve Invalid: n/a For more information, see <i>Filters</i> on page 100.
Decision	The Max and Min settings define the range that determines whether the measurement tool sends a pass or fail decision to the output. For the Z measurement, the following are the defaults: Min: -150 (Gocator 2345); -153 (Gocator 2381); -350 (Gocator 2385) Max: 150 (Gocator 2345); 153 (Gocator 2381); 350 (Gocator 2385) For more information, see <i>Decisions</i> on page 99.

Validity Measurement Parameters


Parameter	Description
Filters	The filters that are applied to measurement values before they are output. The following are the default settings for the Z measurement: Scale: 1 Offset: 0 Hold Last Valid: No Smoothing: Yes, 10 samples Preserve Invalid: No For more information, see <i>Filters</i> on page 100.

Parameter	Description
Decision	<p>The Max and Min settings define the range that determines whether the measurement tool sends a pass or fail decision to the output.</p> <p>For the Z measurement, the following are the defaults:</p> <p>Min: 0.5 (all models)</p> <p>Max: 1.1 (all models)</p> <p>For more information, see <i>Decisions</i> on page 99.</p>

Scripts

Scripts use outputs from other measurement tools to produce custom measurements.

Similar to other measurement tools, a script measurement can output multiple measurement values and decisions. Scripts are added, configured, and removed much like other measurement tools; for more information on this, see *Script* under *Profile Measurement* on page 107.

 Scripts must be less than 27,000 characters long.

Scripts use a simplified C-based syntax. The following elements of the C language are supported:

Supported Elements

Elements	Supported
Control Operators	if, while, do, for, switch and return.
Data Types	char, int, unsigned int, float, double, long long (64-bit integer).
Arithmetic and Logical Operator	Standard C arithmetic operators, except ternary operator (i.e., "condition? trueValue: falseValue"). Explicit casting (e.g., int a = (int) a_float) is not supported.
Function Declarations	Standard C function declarations with argument passed by values. Pointers are not supported.

Built-in Functions

Measurement Functions

Function	Description
int Measurement_Exists(int id)	<p>Determines if a measurement exists by ID.</p> <p>Parameters:</p> <p>id – Measurement ID</p> <p>Returns:</p> <p>0 – measurement does not exist</p> <p>1 – measurement exists</p>
int Measurement_Valid(int id)	<p>Determines if a measurement value is valid by its ID.</p> <p>Parameters:</p> <p>id - Measurement ID</p>

Function	Description
	Returns 0 - Measurement is invalid 1 - Measurement is valid
double Measurement_Value (int id)	Gets the value of a measurement by its ID. Parameters: id - Measurement ID Returns: Value of the measurement 0 - if measurement does not exist 1 - if measurement exists
int Measurement_Decision (int id)	Gets the decision of a measurement by its ID. Parameters: ID - Measurement ID Returns: Decision of the measurement 0 - if measurement decision is false 1 - If measurement decision is true
int Measurement_NameExists(char* toolName, char* measurementName)	Determines if a measurement exist by name. Parameter: toolName - Tool name measurementName - Measurement name Returns: 0 - measurement does not exist 1 - measurement exists
int Measurement_Id (char* toolName, char* measurementName)	Gets the measurement ID by the measurement name. Parameters: toolName - Tool name measurementName - Measurement name Returns: -1 - measurement does not exist Other value - Measurement ID

Output Functions

Function	Description
void Output_Set (double value, int decision)	Sets the output value and decision on Output index 0. Only the last output value / decision in a script run is kept and passed to the Gocator output. To output an invalid value, the constant INVALID_VALUE can be used (e.g., Output_SetAt(0, INVALID_VALUE, 0))

Function	Description
	Parameters: value - value output by the script decision - decision value output by the script. Can only be 0 or 1
void Output_SetAt(unsigned int index, double value, int decision)	Sets the output value and decision at the specified output index. To output an invalid value, the constant INVALID_VALUE can be used (e.g., Output_SetAt(0, INVALID_VALUE, 0)) Parameters: index – Script output index value – value output by the script decision – decision value output by the script. Can only be 0 or 1
void Output_SetId(int id, double value, int decision)	Sets the output value and decision at the specified script output ID. To output an invalid value, the constant INVALID_VALUE can be used (e.g., Output_SetId(0, INVALID_VALUE, 0)) Parameters: id – Script output ID

Memory Functions

Function	Description
void Memory_Set64s (int id, long long value)	Stores a 64-bit signed integer in persistent memory. Parameters: id - ID of the value value - Value to store
long long Memory_Get64s (int id)	Loads a 64-bit signed integer from persistent memory. Parameters: id - ID of the value Returns: value - Value stored in persistent memory
void Memory_Set64u (int id, unsigned long long value)	Stores a 64-bit unsigned integer in the persistent memory Parameters: id - ID of the value value - Value to store
unsigned long long Memory_Get64u (int id)	Loads a 64-bit unsigned integer from persistent memory. Parameters: id - ID of the value Returns: value - Value stored in persistent memory
void Memory_Set64f (int id, double value)	Stores a 64-bit double into persistent memory. Parameters:

Function	Description
	id - ID of the value value - Value to store
double Memory_Get64f (int id)	Loads a 64-bit double from persistent memory. All persistent memory values are set to 0 when the sensor starts. Parameters: id - ID of the value Returns: value - Value stored in persistent memory
int Memory_Exists (int id)	Tests for the existence of a value by ID. Parameters: id - Value ID Returns: 0 - value does not exist 1 - value exists
void Memory_Clear (int id)	Erases a value associated with an ID. Parameters: id - Value ID
void Memory_ClearAll()	Erases all values from persistent memory

Runtime Variable Functions

Function	Description
int RuntimeVariable_Count()	Returns the number of runtime variables that can be accessed. Returns: The count of runtime variables.
int RuntimeVariable_Get32s(int id)	Returns the value of the runtime variable at the given index. Parameters: Id - ID of the runtime variable Returns: Runtime variable value

Stamp Functions

Function	Description
long long Stamp_Frame()	Gets the frame index of the current frame.
long long Stamp_Time()	Gets the time stamp of the current frame.
long long Stamp_Encoder()	Gets the encoder position of the current frame.

Function	Description
long long Stamp_EncoderZ()	Gets the encoder index position of the current frame.
unsigned int Stamp_Inputs()	Gets the digital input state of the current frame.

Math Functions

Function	Description
float sqrt(float x)	Calculates square root of x
float sin(float x)	Calculates sin(x) (x in radians)
float cos(float x)	Calculates cos(x) (x in radians)
float tan(float x)	Calculates tan(x) (x in radians)
float asin(float x)	Calculates asin(x) (x in radians)
float acos(float x)	Calculates acos(x) (x in radians)
float atan(float x)	Calculates atan(x) (x in radians)
float pow (float x, float y)	Calculates the exponential value. x is the base, y is the exponent
float fabs(float x)	Calculates the absolute value of x

Example: Accumulated Volume

The following example shows how to create a custom measurement that is based on the values from other measurements and persistent values. The example calculates the volume of the target using a series of box area measurement values.

```

/* Calculate the volume of an object by accumulating the boxArea measurements*/
/* Encoder Resolution is 0.5mm. */
/* BoxArea Measurement ID is set to 1*/

long long encoder_res = 500;
long long Volume = Memory_Get64s(0);

Memory_Set64s(0, Volume);
if (Volume > 1000000)
{
    Output_Set(Volume, 1);
}
else
{
    Output_Set(Volume, 0);
}

```


Output

The following sections describe the **Output** page.

Output Page Overview

Output configuration tasks are performed using the **Output** page. Gocator sensors can transmit laser profiles and measurement results to various external devices using several output interface options.

Up to two outputs can have scheduling enabled with ASCII as the Serial output protocol. When Selcom is the current Serial output protocol, only one other output can have scheduling enabled.

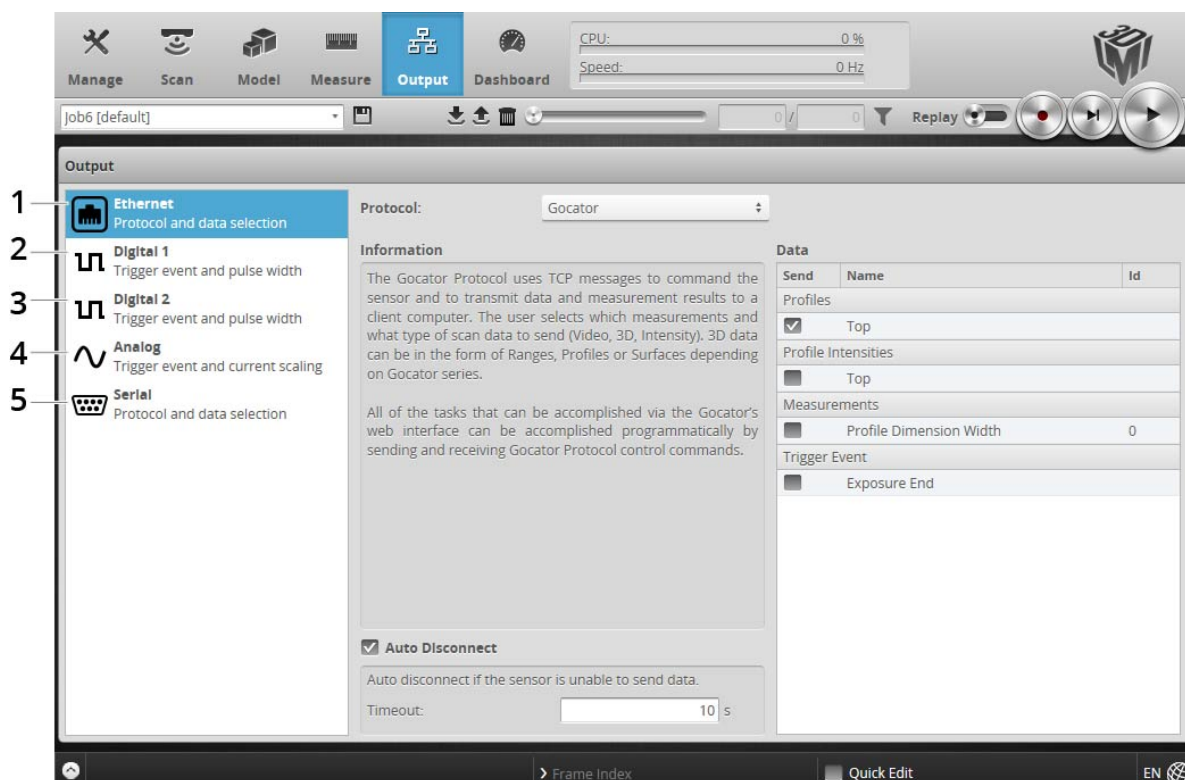


Category	Description
1 Ethernet	Used to select the data sources that will transmit data via Ethernet. See <i>Ethernet Output</i> on the next page.
2 Digital Output 1	Used to select the data sources that will be combined to produce a digital output pulse on Output 1. See <i>Digital Output</i> on page 122.
3 Digital Output 2	Used to select the data sources that will be combined to produce a digital output pulse on Output 2. See <i>Digital Output</i> on page 122.
4 Analog Panel	Used to convert a measurement value or decision into an analog output signal. See <i>Analog Output</i> on page 125.
5 Serial Panel	Used to select the measurements that will be transmitted via RS-485 serial output. See <i>Serial Output</i> on page 127.

Ethernet Output


A sensor uses TCP messages (Gocator protocol) to receive commands from client computers, and to send video, laser profile, intensity, and measurement results to client computers. The sensor can also receive commands from and send measurement results to a PLC using ASCII, Modbus TCP, or EtherNet/IP protocol. See *Protocols* on page 228 for the specification of these protocols.

The specific protocols used with Ethernet output are selected and configured within the panel.

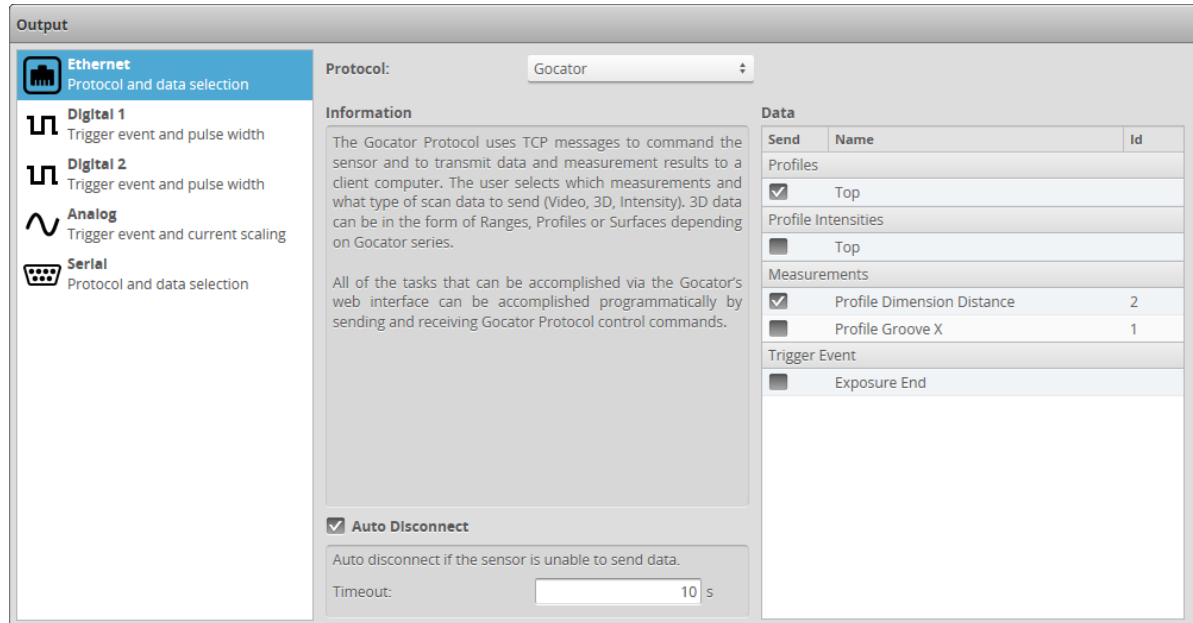


To receive commands and send results using Gocator Protocol messages:

1. Go to the **Output** page.
2. Click on the **Ethernet** category in the **Output** panel.
3. Select **Gocator** as the protocol in the **Protocol** drop-down.
4. Check the video, profile, intensity, or measurement items to send.
5. (Optional) Uncheck the Auto Disconnect setting.
By default, this setting is checked, and the timeout is set to 10 seconds.


 Measurements shown here correspond to measurements that have been added using the **Measure** page (see *Measure Page Overview* on page 94).

All of the tasks that can be accomplished with the Gocator's web interface (creating jobs, performing alignment, sending data and health information, and software triggering, etc.) can be accomplished programmatically by sending Gocator protocol control commands.

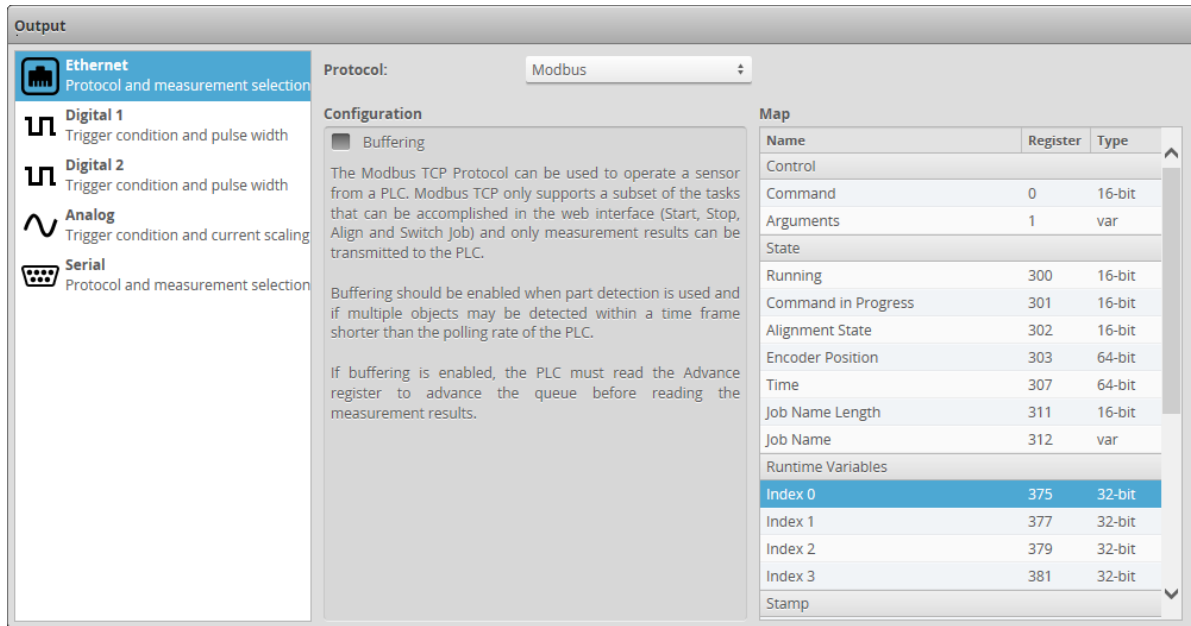


To receive commands and send results using Modbus TCP messages:

1. Go to the **Output** page.
2. Click on **Ethernet** in the **Output** panel.
3. Select **Modbus** as the protocol in the **Protocol** drop-down.
 Unlike the Gocator Protocol, you do not select which measurement items to output. The Ethernet panel will list the register addresses that are used for Modbus TCP communication.
 The Modbus TCP protocol can be used to operate a sensor. Modbus TCP only supports a subset of the tasks that can be performed in the web interface. A sensor can only process Modbus TCP commands when Modbus is selected in the **Protocol** drop-down.
4. Check the **Buffering** checkbox, if needed.
 Buffering is needed, for example, in Surface mode if multiple objects are detected within a time frame shorter than the polling rate of the PLC.
 If buffering is enabled with the Modbus protocol, the PLC must read the Advance register to advance the queue before reading the measurement results.

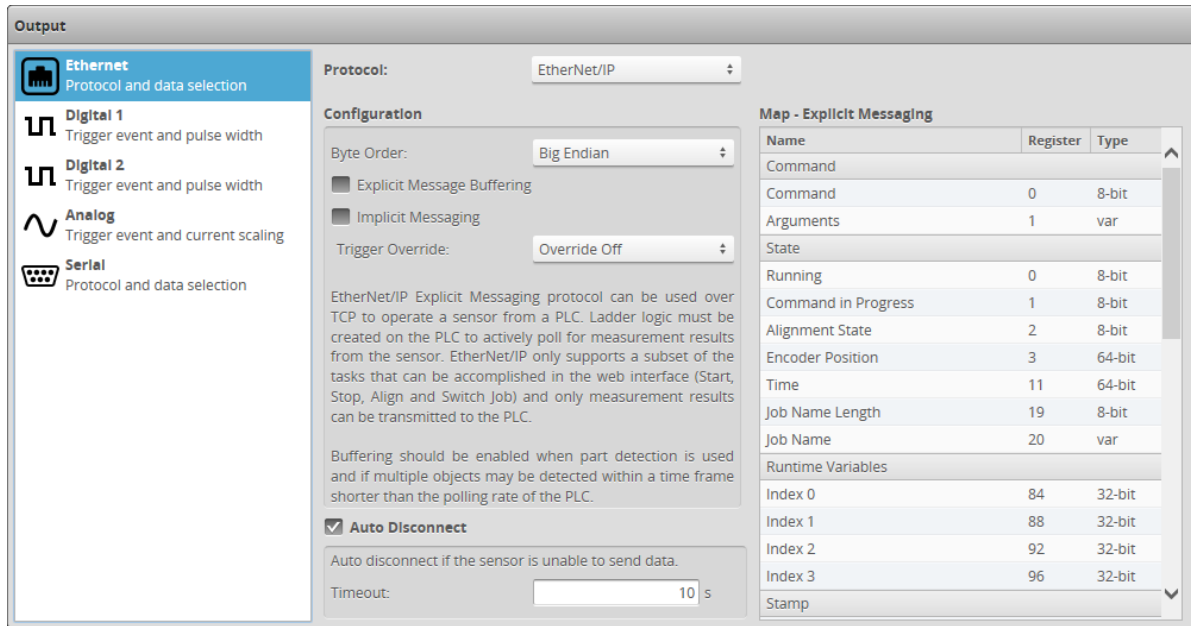

To receive commands and send results using EtherNet/IP messages:

1. Go to the **Output** page.
2. Click on **Ethernet** in the **Output** panel.
3. Select **EtherNet/IP** in the **Protocol** option.
 Unlike using the Gocator Protocol, you don't select which measurement items to output. The **Ethernet** panel will list the register addresses that are used for EtherNet/IP messages communication. The EtherNet/IP protocol can be used to operate a sensor. EtherNet/IP only supports a subset of the tasks that can be accomplished in the web interface. A sensor can only process EtherNet/IP commands when the EtherNet/IP is selected in the **Protocol** option.
4. Check the **Explicit Message Buffering** option, if needed.
 Buffering is needed, for example, in Surface mode if multiple objects are detected within a time frame shorter than the polling rate of the PLC. If buffering is enabled with the EtherNet/IP protocol, the buffer is automatically advanced when the Sample State Assembly Object (*Sample State Assembly* on page 291) is read.
5. Check the **Implicit Messaging** option, if needed.
 Implicit messaging uses UDP and is faster than explicit messaging, so it is intended for time-critical applications. However, implicit messaging is layered on top of UDP. UDP is connectionless and data delivery is not guaranteed. For this reason, implicit messaging is only suitable for applications where occasional data loss is acceptable.
 For more information on setting up implicit messaging, see http://lmi3d.com/sites/default/files/APPNOTE_Implicit_Messaging_with_Allen-Bradley_PLCs.pdf.
6. Choose the byte order in the **Byte Order** dropdown.

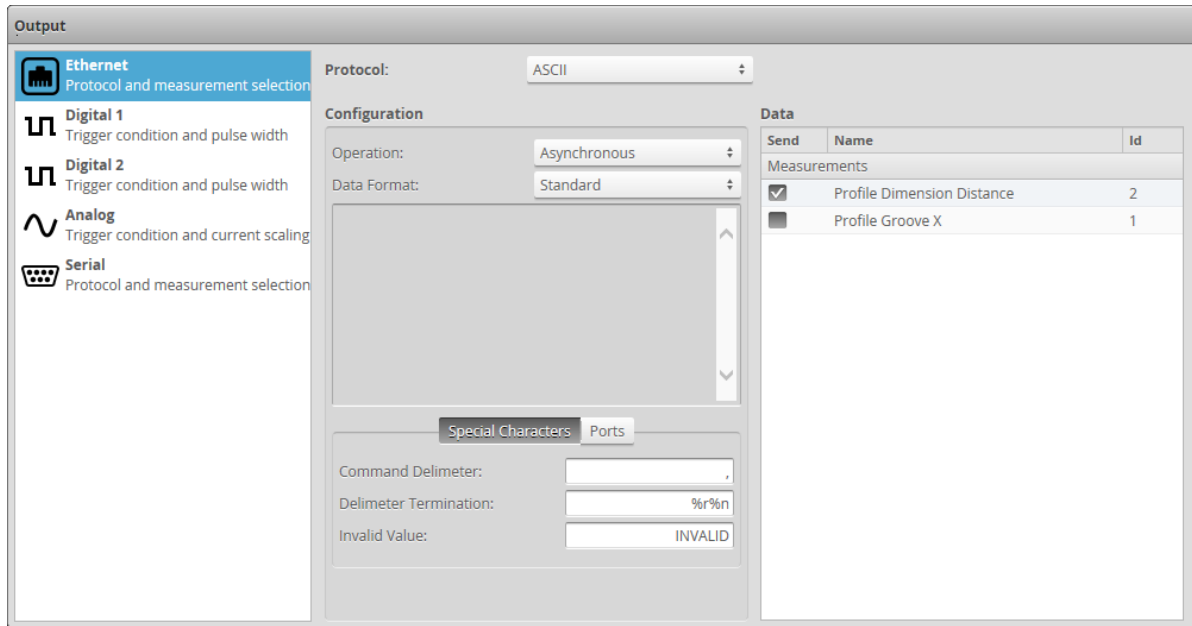

To receive commands and send results using ASCII messages:

1. Go to the **Output** page.
2. Click on **Ethernet** in the **Output** panel.
3. Select **ASCII** as the protocol in the **Protocol** drop-down.
4. Set the operation mode in the **Operation** drop-down.
In asynchronous mode, the data results are transmitted when they are available. In polling mode, users send commands on the data channel to request the latest result.
5. Select the data format from the **Data Format** drop-down.
Standard: The default result format of the ASCII protocol. Select the measurement to send by placing a check in the corresponding checkbox.
Standard with Stamp: Select the measurement to send by placing a check in the corresponding checkbox.
Custom: Enables the custom format editor. Use the replacement patterns listed in **Replacement Patterns** to create a custom format in the editor.
6. Set the special characters in the **Special Characters** tab.
Set the command delimiter, delimiter termination, and invalid value characters. Special characters are used in commands and standard-format data results.
7. Set the TCP ports in the **Ports** tab.
Select the TCP ports for the control, data, and health channels. If the port numbers of two channels are the same, the messages for both channels are transmitted on the same port.

Digital Output

Gocator sensors can convert measurement decisions or software commands to digital output pulses, which can then be used to output to a PLC or to control external devices, such as indicator lights or air


ejectors.

A digital output can act as a measurement valid signal to allow external devices to synchronize to the timing at which measurement results are output. In this mode, the sensor outputs a digital pulse when a measurement result is ready.

A digital output can also act as a strobe signal to allow external devices to synchronize to the timing at which the sensor exposes. In this mode, the sensor outputs a digital pulse when the sensor exposes.

Each sensor supports two digital output channels. See *Gocator Power/LAN Connector* on page 317 for information on wiring digital outputs to external devices.

Trigger conditions and pulse width are then configured within the panel.

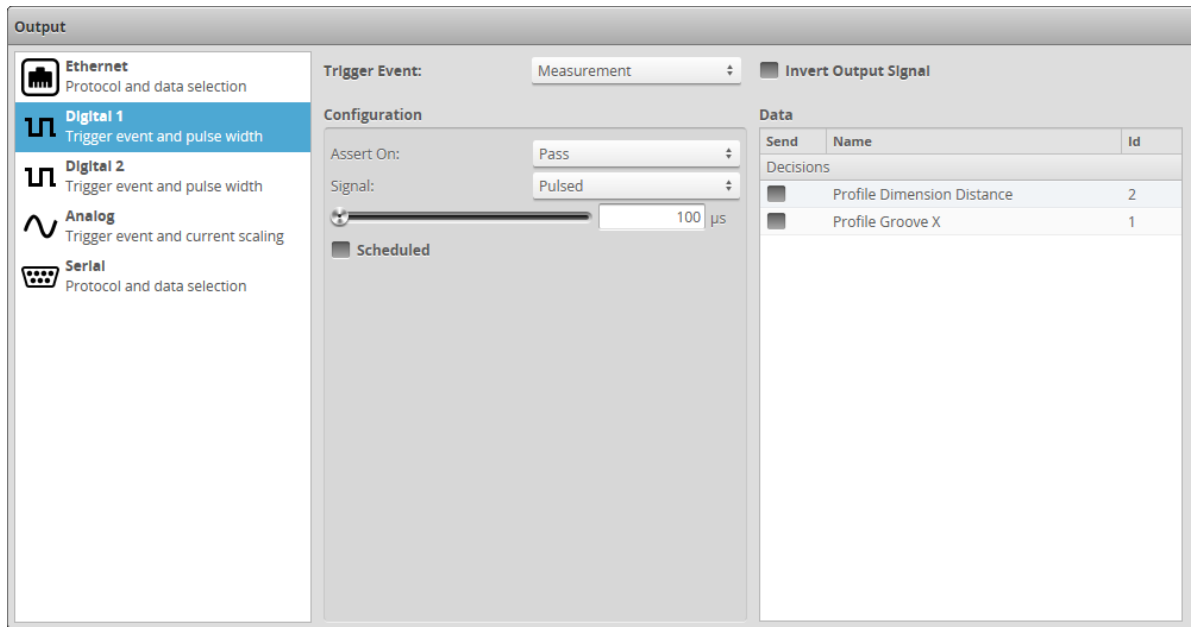

To output measurement decisions:

1. Go to the **Output** page.
2. Click **Digital 1** or **Digital 2** in the **Output** panel.
3. Set **Trigger Event** to **Measurement**.
4. In **Configuration**, set **Assert On** and select the measurements that should be combined to determine the output.
If multiple measurement decisions are selected and **Assert On** is set to **Pass**, the output is activated when all selected measurements pass.
If **Assert On** is set to **Fail**, the output is activated when any one of the selected measurements fails.
5. Set the **Signal** option.
The signal type specifies whether the digital output is a continuous signal or a pulsed signal. If **Signal** is set to **Continuous**, the signal state is maintained until the next transition occurs. If **Signal** is set to **Pulsed**, you must specify the pulse width and how it is scheduled.

6. Specify a pulse width using the slider.
The pulse width is the duration of the digital output pulse, in microseconds.
7. Check the **Scheduled** option if the output needs to be scheduled; otherwise, leave it unchecked for immediate output.
A scheduled output becomes active after the delay from the start of Gocator exposure. A scheduled output can be used to track the decisions for multiple objects as these objects travel from the sensor to the eject gates.
The **Delay** setting specifies the distance from the sensor to the eject gates.
An immediate output becomes active as soon as measurement results are available. The output activates after the sensor finishes processing the data. As a result, the time between the start of sensor exposure and output activates can vary and is dependent on the processing latency. The latency is reported in the dashboard and in the health messages.
8. If you checked **Scheduled**, specify a delay and a delay domain.
The **Delay** specifies the time or encoder distance between the start of sensor exposure and when the output becomes active. The delay should be larger than the time needed to process the data inside the sensor. It should be set to a value that is larger than the processing latency reported in the dashboard or in the health messages.
The unit of the delay is configured with the **Delay Domain** setting.
9. If you want to invert the output signal, check **Invert Output Signal**.

To output a measurement valid signal:

1. Go to the **Output** page.
2. Click on **Digital 1** or **Digital 2** in the **Output** panel.
3. Set **Trigger Event** to **Measurement**.
4. In **Configuration**, set **Assert On** to **Always**.
5. Select the measurements.
The output activates when the selected decisions produce results. The output activates only once for each frame even if multiple decision sources are selected.
6. Specify a pulse width using the slider.
The pulse width determines the duration of the digital output pulse, in microseconds.

To respond to software scheduled commands:

1. Go to the **Output** page.
2. Click **Digital 1** or **Digital 2** in the **Output** panel.
3. Set **Trigger Event** to **Software**.
4. Specify a **Signal** type.
The signal type specifies whether the digital output is a continuous signal or a pulsed signal. If the signal is continuous, its state is maintained until the next transition occurs. If the signal is pulsed, user

specifies the pulse width and the delay.

5. Specify a **Pulse Width**.

The pulse width determines the duration of the digital output pulse, in microseconds.

6. Specify if the output is immediate or scheduled.

A pulsed signal can become active immediately or be scheduled. A continuous signal always becomes active immediately.

Immediate output becomes active as soon as a scheduled digital output (*Schedule Digital Output* on page 250) is received.

Scheduled output becomes active at a specific target time or position, given by the Scheduled Digital Output command. Commands that schedule an event in the past will be ignored. An encoder value is in the future if the value will be reached by moving in the forward direction (the direction that encoder calibration was performed in).

To output an exposure signal:

1. Go to the **Output** page.

2. Click **Digital 1** or **Digital 2** in the **Output** panel.

3. Set **Trigger Event** to **Exposure Begin** or **Exposure End**.

4. Set the **Pulse Width** option.

The pulse width determines the duration of the digital output pulse, in microseconds.

To output an alignment signal:

1. Go to the **Output** page.

2. Click **Digital 1** or **Digital 2** in the **Output** panel.

3. Set **Trigger Event** to **Alignment**.

The digital output state is High if the sensor is aligned, and Low if not aligned. Whether the sensor is running does not affect the output.

To respond to exposure begin/end:

1. Go to the **Output** page.


2. Click **Digital 1** or **Digital 2** in the **Output** panel.

3. Set **Trigger Event** to **Exposure Begin** or **Exposure End**.

Analog Output

Gocator sensors can convert a measurement result or software request to an analog output.

See *Analog Output* on page 323 for information on wiring analog output to an external device.

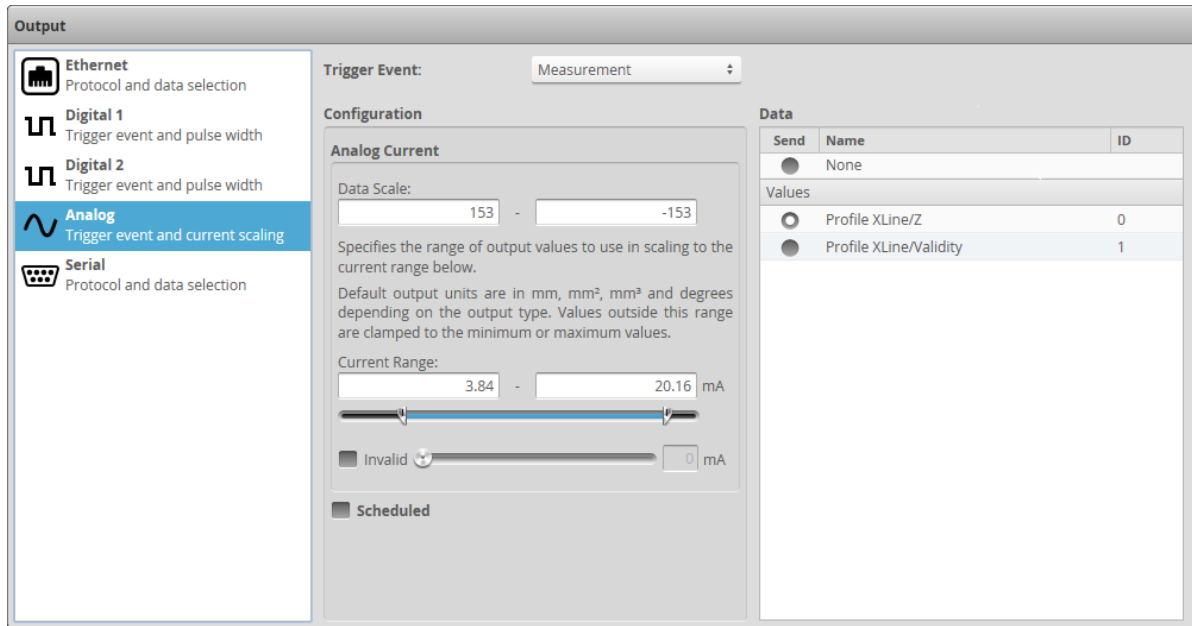

To output measurement value or decision:

1. Go to the **Output** page.
2. Click on **Analog** in the **Output** panel.
3. Set **Trigger Event** to **Measurement**.
4. Select the measurement that should be used for output.
Only one measurement can be used for analog output. Measurements shown here correspond to measurements that have been programmed using the **Measurements** page.
5. Specify **Data Scale** values.
The values specified here determine how measurement values are scaled to the minimum and maximum current output. The **Data Scale** values are specified in millimeters for dimensional measurements such as distance, square millimeters for areas, cubic millimeters for volumes, and degrees for angle results.
6. Specify **Current Range** and **Invalid** current values.
The values specified here determine the minimum and maximum current values in milliamperes. If **Invalid** is checked, the current value specified with the slider is used when a measurement value is not valid. If **Invalid** is not checked, the output holds the last value when a measurement value is not valid.
7. Specify if the output is immediate or scheduled.
An analog output can become active immediately or scheduled. Check the **Scheduled** option if the output needs to be scheduled.
A scheduled output becomes active after a specified delay from the start of Gocator exposure. A scheduled output can be used to track the decisions for multiple objects as these objects travel from the sensor to the eject gates. The delay specifies the distance from the sensor to the eject gates.
An Immediate output becomes active as soon as the measurement results are available. The output activates after the Gocator finishes processing the data. As a result, the time between the start of

Gocator exposure and output activates depends on the processing latency. The latency is reported in the dashboard and in the health messages.

8. Specify a delay.

The delay specifies the time or spatial location between the start of Gocator exposure and the output becomes active. The delay should be larger than the time needed to process the data inside the Gocator. It should be set to a value that is larger than the processing latency reported in the dashboard and in the health messages.

The unit of the delay is configured in the trigger panel. See *Triggers* on page 63 for details.



The analog output takes about 75 us to reach 90% of the target value for a maximum change, then another ~40 us to settle completely.

To respond to software scheduled commands:

1. Go to the **Output** page.
2. Click on **Analog** in the **Output** panel.
3. Set **Trigger Event** to **Software**.
4. Specify if the output is immediate or scheduled.

An analog output value becomes active immediately or scheduled. Immediate output becomes active as soon as a Scheduled Analog Output command (*Schedule Analog Output* on page 251) is received. Software scheduled command can schedule an analog value to output at a specified future time or encoder value, or changes its state immediately. The Delay setting in the panel is ignored. Commands that schedule event in the past will be ignored. An encoder value is in future if the value will be reached by moving in the forward direction (the direction that encoder calibration was performed in).

Serial Output


Gocator 2345 and 2385 sensors do not currently support this feature.

Dashboard

The following sections describe the **Dashboard** page.

Dashboard Page Overview

The **Dashboard** page summarizes sensor health information and provides measurement statistics.

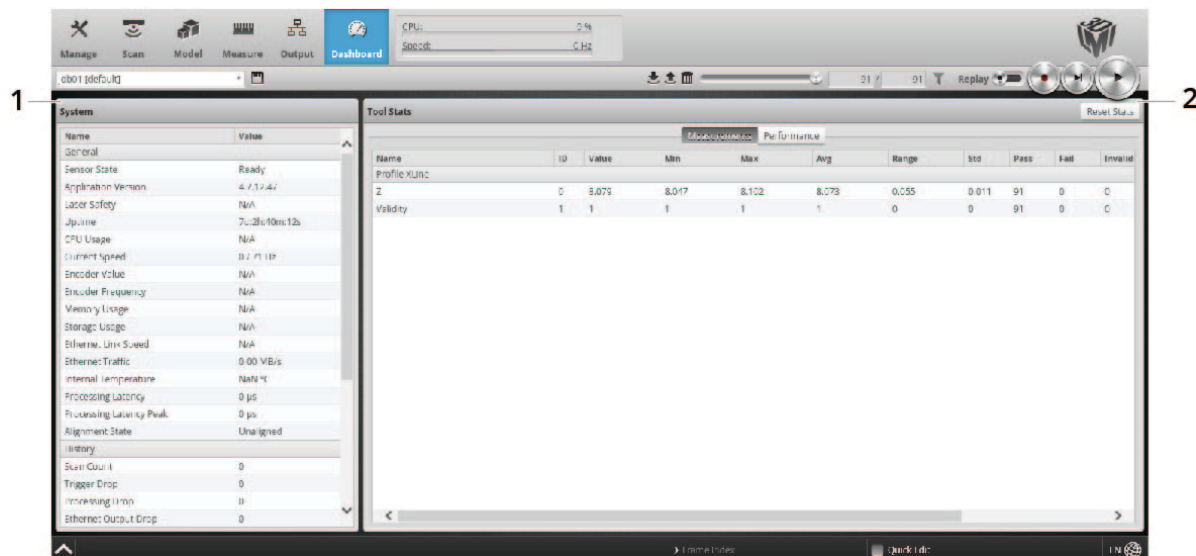

	Element	Description
1	System	Displays sensor state and health information. See <i>State and Health Information</i> below.
2	Tool Stats	Displays measurement tool statistics. See <i>Statistics</i> on the next page.

State and Health Information

The following state and health information is available in the **System** panel on the **Dashboard** page:

Dashboard General System Values

Name	Description
Sensor State	Current sensor state (Conflict, Ready, or Running).
Application Version	Gocator firmware version.
Laser Safety	Whether Laser Safety is enabled.
Uptime	Length of time since the sensor was power-cycled or reset.
CPU Usage	Sensor CPU utilization (%).
Current Speed	Current speed of the sensor.
Encoder Value	Current encoder value (ticks).
Encoder Frequency	Current encoder frequency (Hz).
Memory Usage	Sensor memory utilization (MB used / MB total available).

Name	Description
Storage Usage	Sensor flash storage utilization (MB used / MB total available).
Ethernet Link Speed	Speed of the Ethernet link (Mbps).
Ethernet Traffic	Network output utilization (MB/sec).
Internal Temperature	Internal sensor temperature.
Processing Latency	Last delay from camera exposure to when results can be scheduled to.
Processing Latency Peak	Peak latency delay from camera exposure to when results can be scheduled to rich I/O. Reset on start.
Alignment State	Whether the sensor or sensor system has been aligned.
Over Temperature State	Whether the internal temperature of the sensor is over a predetermined level.
Over Temperature Duration	The amount of time that the internal temperature of the sensor has been over a predetermined level. (Some models only.)

Dashboard History Values

Name	Description
Scan Count	Number of scans performed since sensor state last changed to Running.
Trigger Drop	Count of camera frames dropped due to excessive trigger speed.
Processing Drop	Count of frame drops due to excessive CPU utilization.
Ethernet Output Drop	Count of frame drops due to slow Ethernet link.
Analog Output Drop	Count of analog output drops because last output has not been completed.
Serial Output Drop	Count of serial output drops because last output has not been completed.
Digital Output 1 Drop	Count of digital output drops because last output has not been completed.
Digital Output 2 Drop	Count of digital output drops because last output has not been completed.
Digital Output 1 High Count	Count of high states on digital output.
Digital Output 2 High Count	Count of high states on digital output.
Digital Output 1 Low Count	Count of low states on digital output.
Digital Output 2 Low Count	Count of low states on digital output.
Anchor Invalid Count	Count of invalid anchors.
Valid Spot Count	Count of valid spots detected in the last frame.
Max Spot Count	Maximum number of spots detected since sensor was started.
Camera Search Count	Count of camera frame where laser has lost tracked. Only applicable when tracking window is enabled.


Statistics

In the **Tool Stats** pane, you can examine measurement and tool statistics in two tabs: **Measurements** and **Performance**.

To reset statistics in both tabs, use the **Reset Stats** button.

Measurements

The **Measurements** tab displays statistics for each measurement enabled in the **Measure** page, grouped by the tool that contains the measurement.

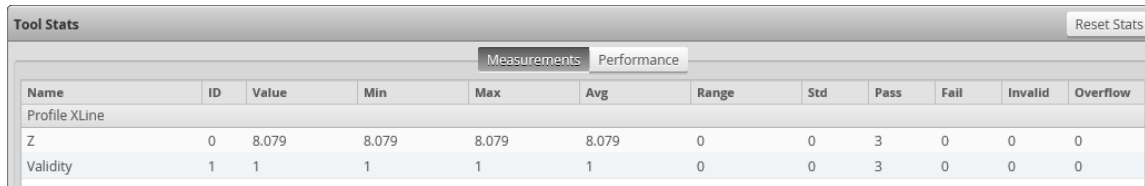

Name	ID	Value	Min	Max	Avg	Range	Std	Pass	Fail	Invalid	Overflow
Profile XLine											
Z	0	8.079	8.079	8.079	8.079	0	0	3	0	0	0
Validity	1	1	1	1	1	0	0	3	0	0	0


For each measurement, Gocator displays the following information:

Measurement Statistics

Name	Description
ID	The measurement ID as set in the measurement's ID field on the Measure page .
Value	The most recent measurement value.
Min	The minimum measurement value that has been observed.
Max	The maximum measurement value that has been observed.
Avg	The average of all measurement values collected since the sensor was started.
Range	The difference between Max and Min.
Std	The standard deviation of all measurement values collected since the sensor was started.
Pass	The number of pass decisions the measurement has generated.
Fail	The number of fail decisions the measurement has generated.
Invalid	The number of frames that returned no valid measurement value.
Overflow	The number of frames that returned an overflow.

Performance

The **Performance** tab displays performance statistics (execution time) for each tool added in the **Measure** page.

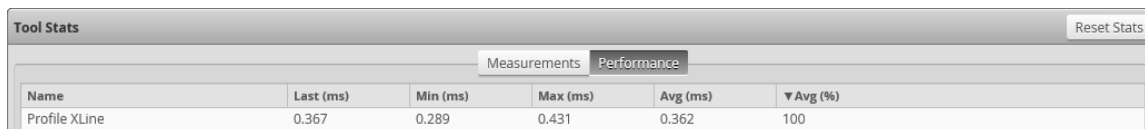


Name	Last (ms)	Min (ms)	Max (ms)	Avg (ms)	▼ Avg (%)
Profile XLine	0.367	0.289	0.431	0.362	100

For each tool, Gocator displays the following information:

Performance Statistics

Name	Description
Last (ms)	The last execution time of the tool.
Min (ms)	The minimum execution time of the tool.
Max (ms)	The maximum execution time of the tool.


Name	Description
Avg (ms)	The average execution time of the tool.
Avg (%)	The average percentage the CPU the tool uses.

 Tools are sorted by the *Avg (%)* column in descending order.

Gocator Emulator

The Gocator emulator is a stand-alone application that lets you run a "virtual" sensor. In a virtual sensor, you can test jobs, evaluate data, and even learn more about new features, rather than take a physical device off the production line to do this. You can also use a virtual sensor to familiarize yourself with the overall interface if you are new to Gocator.

The Gocator emulator is only supported on 64-bit versions of Windows 7, 8, and 10.

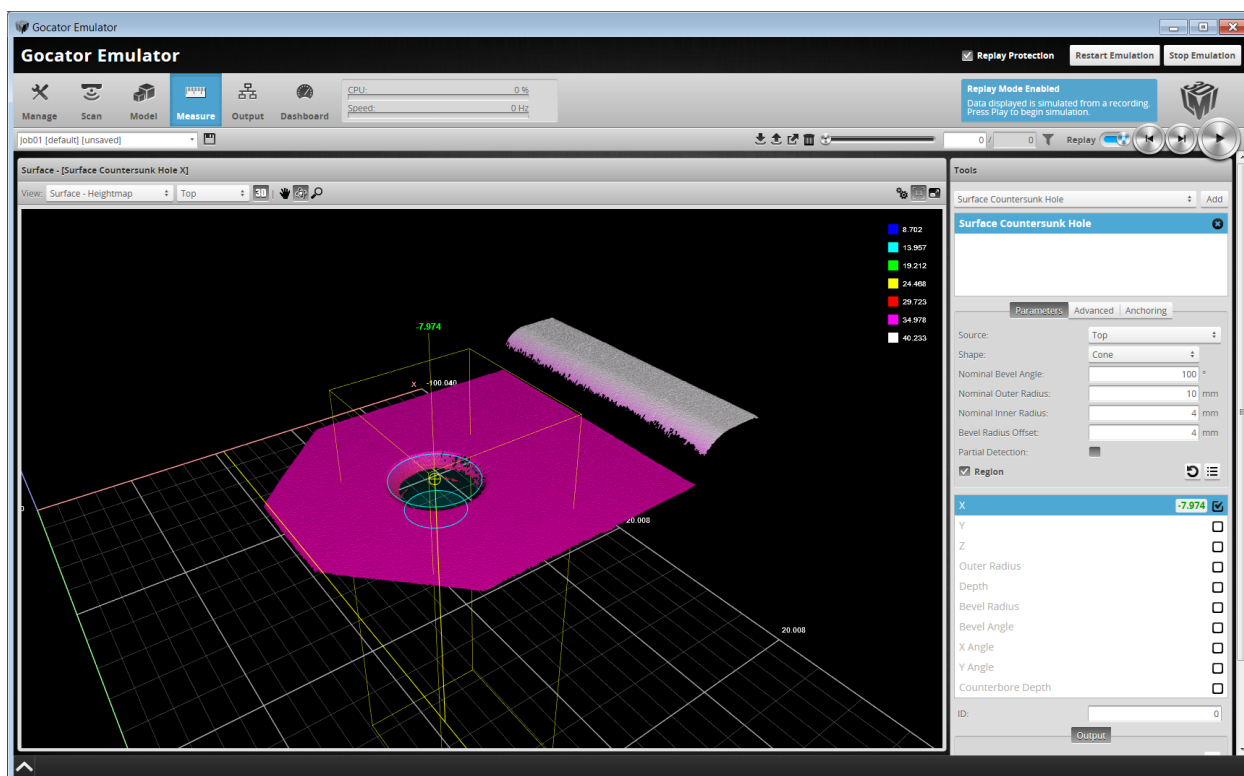

*Emulator showing a part in recorded data.
A measurement is applied to the recorded data.*

Limitations

In most ways, the emulator behaves like a real sensor, especially when visualizing data, setting up models and part matching, and adding and configuring measurement tools. The following are some of the limitations of the emulator:

- Changes to job files in the emulator are *not* persistent (they are lost when you close or restart the emulator). However, you can keep a modified job by first [saving](#) it and then [downloading](#) it from the

Jobs list on the **Manage** page to a client computer. The job file can then be loaded into the emulator at a later time or even onto a physical sensor for final testing.

- Performing alignment in the emulator has no effect and will never complete.
- Only one instance can be run at a time.

For information on saving and loading jobs in the emulator, see *Creating, Saving, and Loading Jobs* on page 137 .


For information on uploading and downloading jobs between the emulator and a computer, and performing other job file management tasks, see *Downloading and Uploading Jobs* on page 142.

Downloading a Support File

The emulator is provided with several virtual sensors preinstalled.

You can also create virtual sensors yourself by downloading a support file from a physical Gocator and then adding it to the emulator.

Support files can contain jobs, letting you configure systems and add measurements in an emulated sensor. Support files can also contain replay data, letting you test measurements and some configurations on real data.

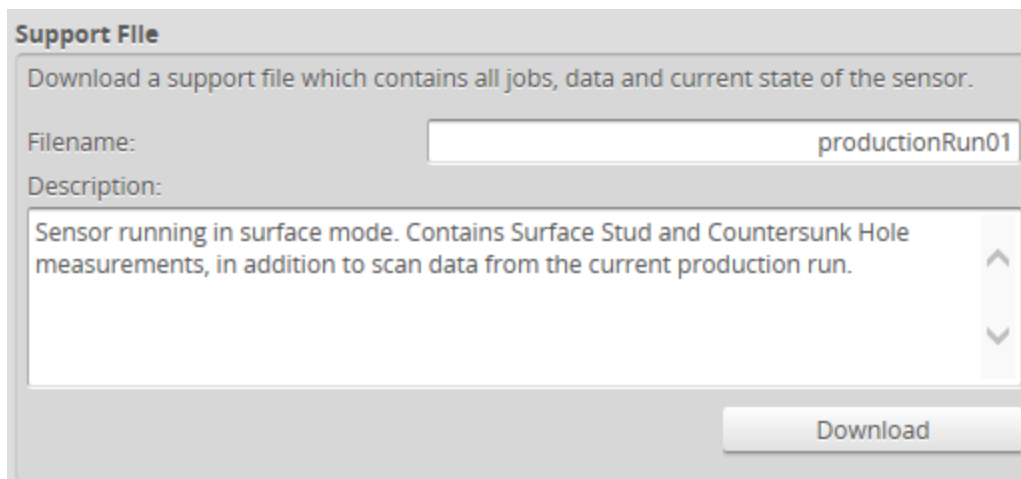

Support File

Download a support file which contains all jobs, data and current state of the sensor.

Filename:

Description:

Download

To download a support file:

1. Go to the **Manage** page and click on the **Support** category.
2. In **Filename**, type the name you want to use for the support file.
When you create a scenario from a support file in the emulator, the filename you provide here is displayed in the emulator's scenario list.
Support files end with the .gs extension, but you do not need to type the extension in **Filename**.
3. (Optional) In **Description**, type a description of the support file.
When you create a scenario from a support file in the emulator, the description is displayed below the emulator's scenario list.
4. Click **Download**, and then when prompted, click **Save**.




Downloading a support file stops the sensor.

Running the Emulator

The emulator is contained in the Gocator tools package (14405-x.x.x.x_SOFTWARE_GO_Tools.zip). To get the package, go to <http://lmi3d.com/support>, choose your product from the Product Downloads section, and download the package from the Download Center.

To run the emulator, unzip the package and double-click the *GoEmulator* link in the unzipped emulator folder.

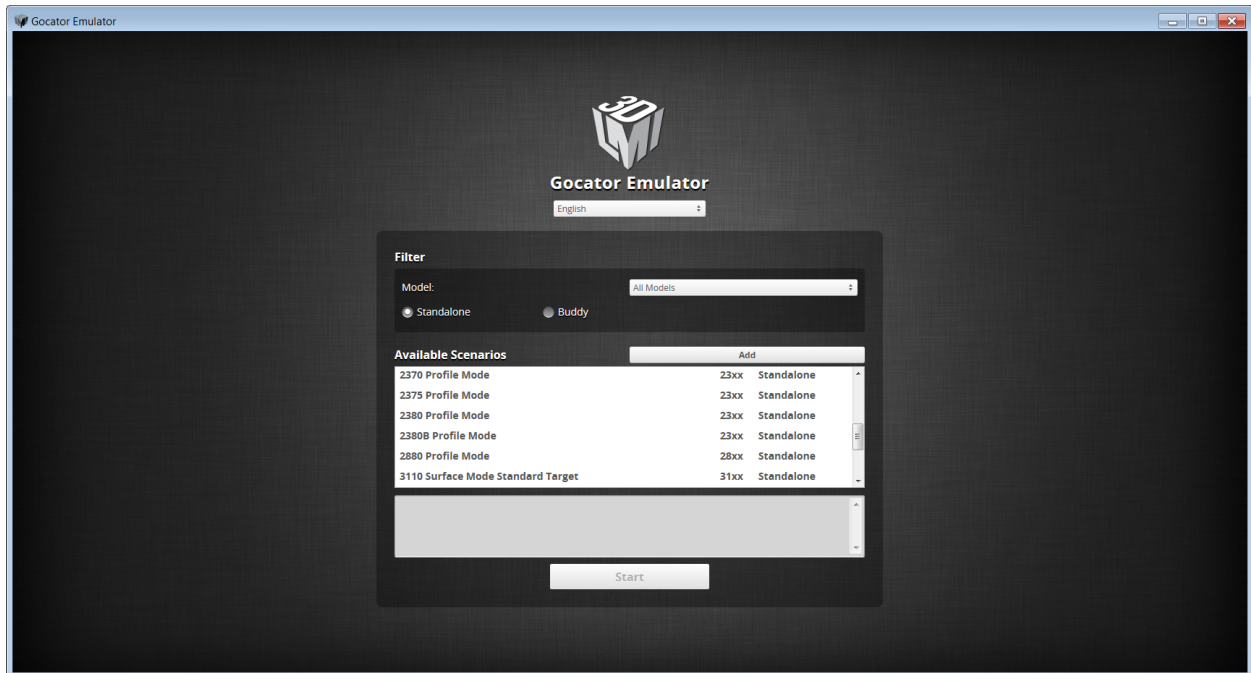

Emulator launch screen


You can change the language of the emulator's interface from the launch screen. To change the language, choose a language option from the top drop-down:



Selecting the emulator interface language

Adding a Scenario to the Emulator

To simulate a physical sensor using a support file downloaded from a sensor, you must add it as a scenario in the emulator.


 You can add support files downloaded from any series of Gocator sensors to the emulator.

To add a scenario:

1. Launch the emulator if it isn't running already.
2. Click the **Add** button and choose a previously saved support file (.gs extension) in the **Choose File to Upload** dialog.




3. (Optional) In **Description**, type a description.

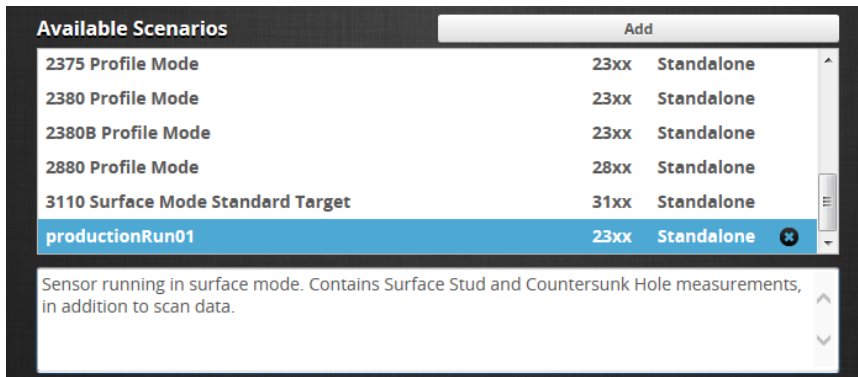

 You can only add descriptions for user-added scenarios.

Running a Scenario

After you have added a virtual sensor by uploading a support file to the emulator, you can run it from the **Available Scenarios** list on the emulator launch screen. You can also run any of the scenarios included in the installation.

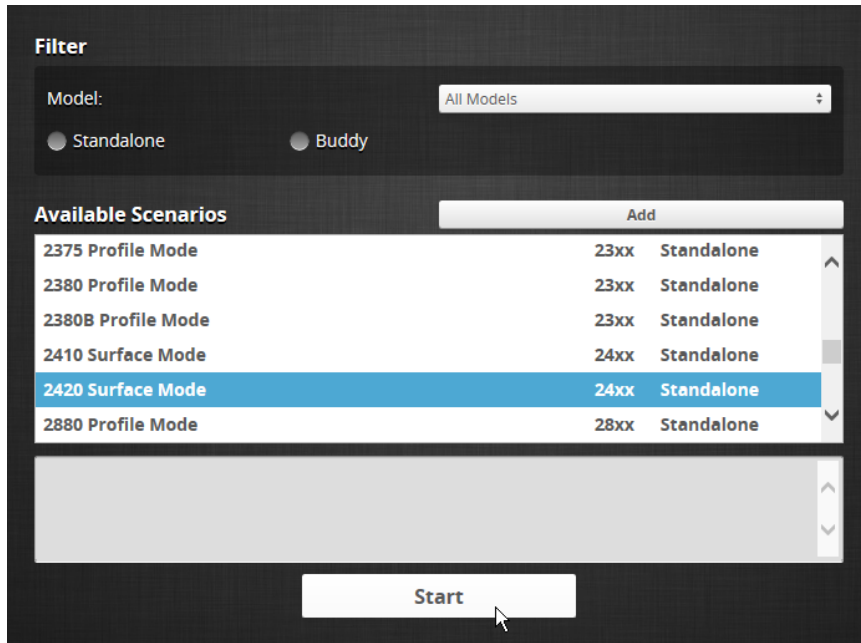


To run a scenario:

1. If you want to filter the scenarios listed in **Available Scenarios**, do one or both of the following:
 - Choose a model family in the **Model** drop-down.
 - Choose **Standalone** or **Buddy** to limit the scenarios to single-sensor or dual-/multi-sensor scenarios, respectively.
2. Select a scenario in the **Available Scenarios** list and click **Start**.


Removing a Scenario from the Emulator


You can easily remove a scenario from the emulator.



To remove a scenario:

1. If the emulator is running a scenario, click **Stop Emulation** to stop it.
2. In the **Available Scenarios** list, scroll to the scenario you want to remove.

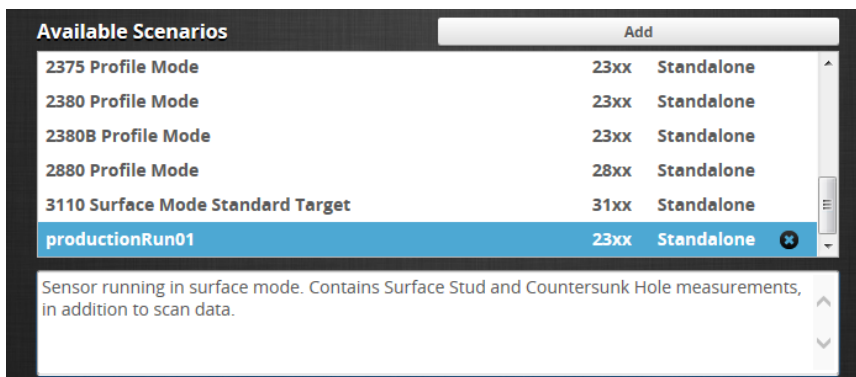


3. Click the  button next to the scenario you want to remove.

The scenario is removed from the emulator.

Using Replay Protection

Making changes to certain settings on the **Scan** page causes the emulator to flush replay data. The **Replay Protection** option protects replay data by preventing changes to settings that affect replay data. Settings that do not affect replay data can be changed.

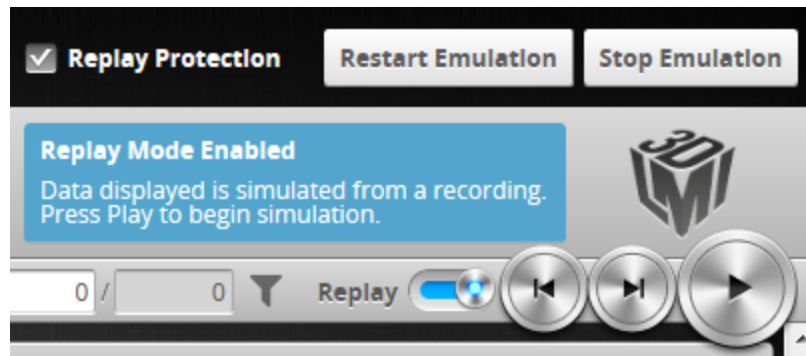


If you try to uncheck **Replay Protection**, you must confirm that you want to disable it.

Replay Protection is on by default.

Stopping and Restarting the Emulator

To stop the emulator:

- Click **Stop Emulation**.



Stopping the emulator returns you to the launch screen.

To restart the emulator when it is running:

- Click **Restart Emulation**.

Restarting the emulator restarts the currently running simulation.

Working with Jobs and Data

The following topics describe how to work with jobs and replay data (data recorded from a physical sensor) in the emulator.

Creating, Saving, and Loading Jobs


Changes saved to job files in the emulator are *not* persistent (they are lost when you close or restart the emulator). To keep jobs permanently, you must first save the job in the emulator and then download the job file to a client computer. See below for more information on creating, saving, and switching jobs. For

information on downloading and uploading jobs between the emulator and a computer, see *Downloading and Uploading Jobs* on page 142.


The job drop-down list in the toolbar shows the jobs available in the emulator. The job that is currently active is listed at the top. The job name will be marked with "[unsaved]" to indicate any unsaved changes.



To create a job:

1. Choose **[New]** in the job drop-down list and type a name for the job.
2. Click the **Save** button  or press **Enter** to save the job.
The job is saved to the emulator using the name you provided.

To save a job:

- Click the **Save** button .
- The job is saved to the emulator.


To load (switch) jobs:


- Select an existing file name in the job drop-down list.
- The job is activated. If there are any unsaved changes in the current job, you will be asked whether you want to discard those changes.

Playback and Measurement Simulation

The emulator can replay scan data previously recorded by a physical sensor, and also simulate measurement tools on recorded data. This feature is most often used for troubleshooting and fine-tuning measurements, but can also be helpful during setup.

Playback is controlled using the toolbar controls.




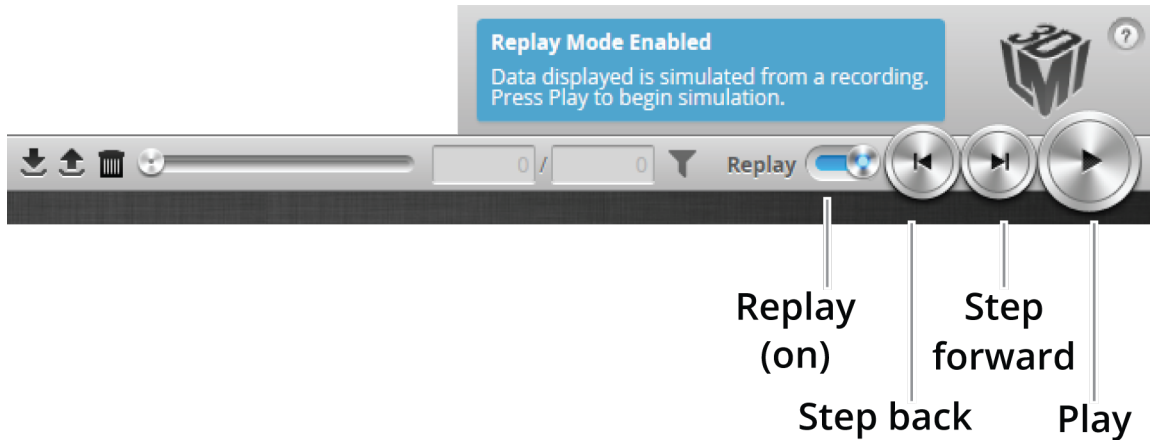

Playback controls when replay is on

To replay data:

1. Toggle **Replay** mode on by setting the slider to the right in the **Toolbar**.
The slider's background turns blue.
To change the mode, you must uncheck **Replay Protection**.



2. Use the **Replay** slider or the **Step Forward**, **Step Back**, or **Play** buttons to review data.
The **Step Forward** and **Step Back** buttons move and the current replay location backward and forward by a single frame, respectively.
The **Play** button advances the replay location continuously, animating the playback until the end of the replay data.
The **Stop** button (replaces the **Play** button while playing) can be used to pause the replay at a particular location.
The **Replay** slider (or **Replay Position** box) can be used to go to a specific replay frame.

To simulate measurements on replay data:

1. Toggle **Replay** mode on by setting the slider to the right in the **Toolbar**.
The slider's background turns blue.
To change the mode, **Replay Protection** must be unchecked.
2. Go to the **Measure** page.
Modify settings for existing measurements, add new measurement tools, or delete measurement tools as desired. For information on adding and configuring measurements, see *Measurement* on page 94.
3. Use the **Replay Slider**, **Step Forward**, **Step Back**, or **Play** button to simulate measurements.
Step or play through recorded data to execute the measurement tools on the recording.
Individual measurement values can be viewed directly in the data viewer. Statistics on the measurements that have been simulated can be viewed in the **Dashboard** page; for more information on the dashboard, see *Dashboard* on page 128.

To clear replay data:


- Click the **Clear Replay Data** button .

Downloading, Uploading, and Exporting Replay Data

Replay data (recorded scan data) can be downloaded from the emulator to a client computer, or uploaded from a client computer to the emulator.


Data can also be exported from the emulator to a client computer in order to process the data using third-party tools.

You can only upload replay data to the same sensor model that was used to create the data.

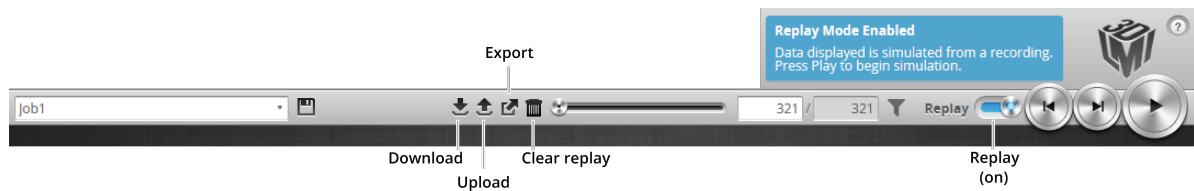


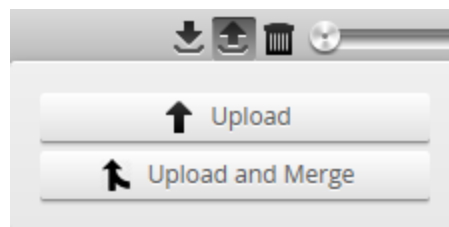
Replay data is not loaded or saved when you load or save jobs.

To download replay data:

1. Click the Download button .
2. In the **File Download** dialog, click **Save**.
3. In the **Save As...** dialog, choose a location, optionally change the name (keeping the .rec extension), and click **Save**.


To upload replay data:

1. Click the Upload button .
The Upload menu appears.




2. In the Upload menu, choose one of the following:
 - **Upload:** Unloads the current job and creates a new unsaved and untitled job from the content of the replay data file.
 - **Upload and merge:** Uploads the replay data and merges the data's associated job with the current job. Specifically, the settings on the **Scan** page are overwritten, but all other settings of the current job are preserved, including any measurements or models.


If you have unsaved changes in the current job, the firmware asks whether you want to discard the changes.

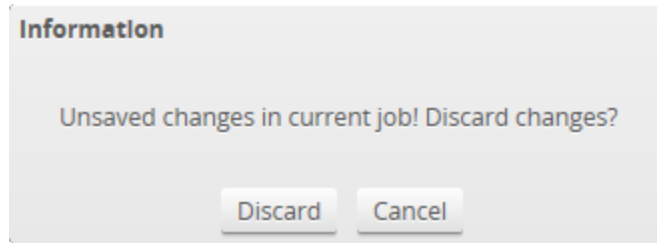


3. Do one of the following:
 - Click **Discard** to discard any unsaved changes.
 - Click **Cancel** to return to the main window to save your changes.
4. If you clicked **Discard**, navigate to the replay data to upload from the client computer and click **OK**. The replay data is loaded, and a new unsaved, untitled job is created.

Replay data can be exported using the CSV format. If you have enabled **Acquire Intensity** in the **Scan Mode** panel on the **Scan** page, the exported CSV file includes intensity data.

 *Surface* intensity data cannot be exported to the CSV format. It can only be [exported separately as a bitmap](#).

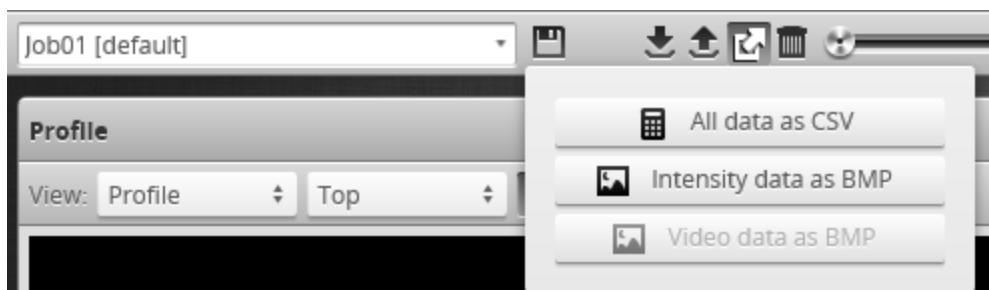


To export replay data in the CSV format:

1. In the **Scan Mode** panel, switch to Profile or Surface.
2. Click the Export button  and select **All Data as CSV**.


In Profile mode, all data in the record buffer is exported. In Surface mode, only data at the current replay location is exported.

Use the playback control buttons to move to a different replay location; for information on playback, see *To replay data in Playback and Measurement Simulation* on page 138.

 The decision values in the exported data depend on the *current* state of the job, not the state during recording. For example, if you record data when a measurement returns a *pass* decision, change the measurement's settings so that a *fail* decision is returned, and then export to CSV, you will see a *fail* decision in the exported data.

Recorded intensity data can be exported to a bitmap (.BMP format). **Acquire Intensity** must be checked in the **Scan Mode** panel while data was being recorded in order to export intensity data.

To export recorded intensity data to the BMP format:


- Click the **Export** button  and select **Intensity data as BMP**.

Only the intensity data in the current replay location is exported.

Use the playback control buttons to move to a different replay location; for information on playback, see *To replay data in Playback and Measurement Simulation* on page 138.




To export video data to a BMP file:

1. In the **Scan Mode** panel, switch to Video mode.
Use the playback control buttons to move to a different replay location; for information on playback, see *To replay data in Playback and Measurement Simulation* on page 138.
2. Click the Export button  and select **Video data as BMP**.


Downloading and Uploading Jobs


The **Jobs** category on the **Manage** page lets you manage the jobs in the emulator.

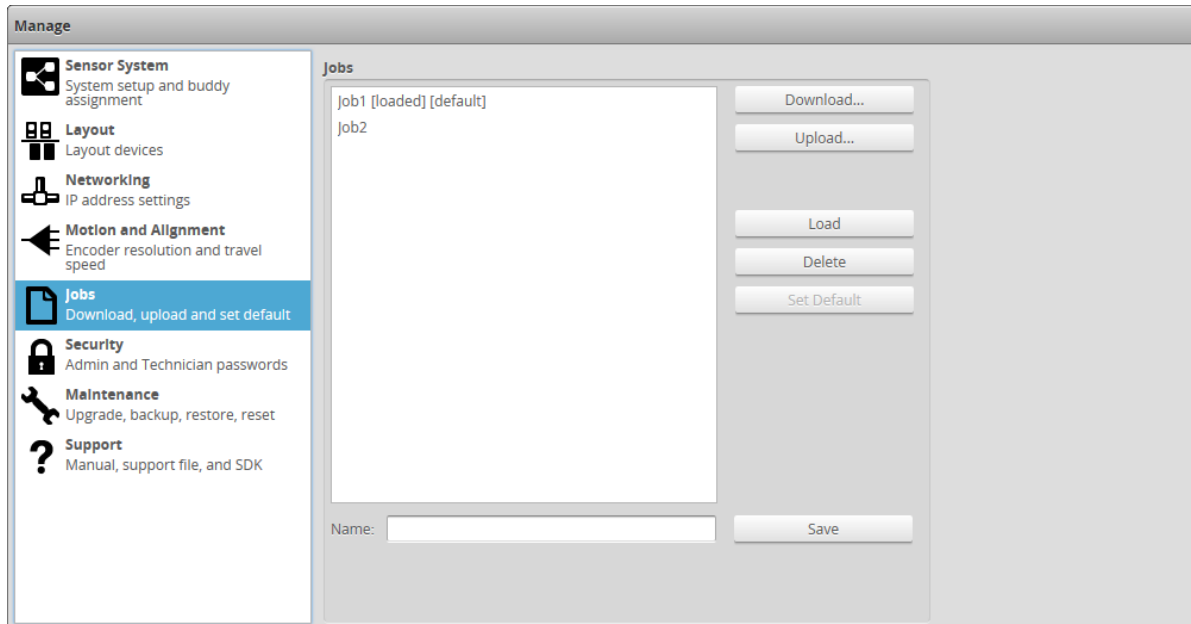

Element	Description
Name field	Used to provide a job name when saving files.
Jobs list	Displays the jobs that are currently saved in the emulator.
Save button	Saves current settings to the job using the name in the Name field. Changes to job files are not persistent in the emulator. To keep changes, first save changes in the job file, and then download the job file to a client computer. See the procedures below for instructions.
Load button	Loads the job that is selected in the job list. Reloading the current job discards any unsaved changes.
Delete button	Deletes the job that is selected in the job list.
Set as Default button	Setting a different job as the default is not persistent in the emulator. The job set as default when the support file (used to create a virtual sensor) was downloaded is used as the default whenever the emulator is started.
Download... button	Downloads the selected job to the client computer.
Upload... button	Uploads a job from the client computer.

Unsaved jobs are indicated by "[unsaved]".

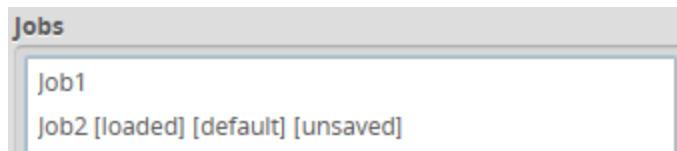

 Changes to job files in the emulator are *not* persistent (they are lost when you close or restart the emulator). However, you can keep modified jobs by first saving them and then downloading them to a client computer.

To save a job:

1. Go to the **Manage** page and click on the **Jobs** category.
2. Provide a name in the **Name** field.
To save an existing job under a different name, click on it in the **Jobs** list and then modify it in the **Name** field.
3. Click on the **Save** button or press **Enter**.

To download, load, or delete a job, or to set one as a default, or clear a default:

1. Go to the **Manage** page and click on the **Jobs** category.
2. Select a job in the **Jobs** list.
3. Click on the appropriate button for the operation.

Scan, Model, and Measurement Settings

The settings on the **Scan** page related to actual scanning will clear the buffer of any scan data that is uploaded from a client computer, or is part of a support file used to create a virtual sensor. If **Replay Protection** is checked, the emulator will indicate in the log that the setting can't be changed because the change would clear the buffer. For more information on Replay Protection, see *Using Replay Protection* on page 137.

Other settings on the **Scan** page related to the post-processing of data can be modified to test their influence on scan data, without modifying or clearing the data for example filters on the X axis (page 84). Note that modifying the Y filters causes the buffer to be cleared.


For information on creating models and setting up part matching, see *Models* on page 93. For information on adding and configuring measurement tools, see *Measurement* on page 94.


Calculating Potential Maximum Frame Rate

You can use the emulator to calculate the potential maximum frame rate you can achieve with different settings.

For example, when you reduce the active area, in the **Active Area** tab on the **Sensor** panel, the maximum frame rate displayed on the **Trigger** panel is updated to reflect the increased speed that would be available in a physical Gocator sensor. (See *Active Area* on page 69 for more information on active area.)

Similarly, you can adjust exposure on the **Exposure** tab on the **Sensor** panel to see how this affects the maximum frame rate. (See *Exposure* on page 73 for more information on exposure.)

 To adjust active area in the emulator, **Replay Protection** must be turned off. See *Using Replay Protection* on page 137 for more information.

 Saving changes to active area causes replay data to be flushed.

Protocol Output

The emulator simulates output for all of Gocator's Ethernet-based protocols.

- [Gocator](#)
- [ASCII](#)
- [Modbus](#)
- [EtherNet/IP](#)

Clients (such as PLCs) can connect to the emulator to access the simulated output and use the protocols as they would with a physical sensor.

The emulator allows connections to emulated sensors on localhost (127.0.0.1). You can also allow connections to emulated sensors on your computer's network card; for more information, see *Remote Operation* on the next page.

Remote Operation


You can specify the IP address of one of your computer's network cards to allow clients to connect remotely to an emulated sensor using the `/ip` command line parameter. When the `/ip` parameter is not used, emulated sensors are only available on the local machine (that is, 127.0.0.1 or localhost).

📄 Clients can only connect to emulated sensors, not to the emulator's launch page.

📄 You may need to contact your network administrator to allow connections to the computer running the emulated sensor.

To allow remote connections to an emulated sensor:

1. In Windows Explorer (Windows 7) or File Explorer (Windows 8 or 10), browse to the location of the emulator. The emulator is under `bin\win64`, in the location in which you installed the emulator.
2. Press and hold `Shift`, right-click the `win64` folder containing the emulator, and choose **Open command window here**.

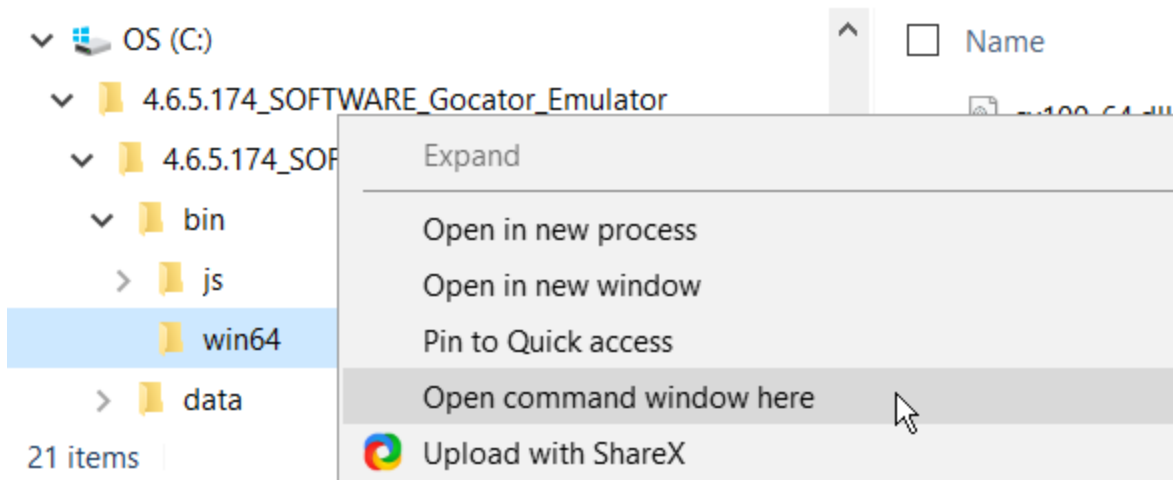

3. In the command prompt, type `GoEmulator.exe /ip`, followed by an IPV4 address, for example:

```
C:\WINDOWS\system32\cmd.exe
c:\4.6.5.174_SOFTWARE_Gocator_Emulator\4.6.5.174_SOFTWARE_Gocator_Emulator\bin\win64>GoEmulator.exe /ip 192.168.1.42
```

The emulator application starts.

📄 The emulator does not check that the IP address is valid.

4. From the emulator launch page, start a scenario.
For more information, see *Running a Scenario* on page 135.
5. Provide the IP address you used with the `/ip` parameter, followed by port number 3191, to users who want to connect to the emulated sensor, for example:

```
192.168.1.42:3191
```

Gocator Device Files

This section describes the user-accessible device files stored on a Gocator.

Live Files

Various "live" files stored on a Gocator sensor represent the sensor's active settings and transformations (represented together as "job" files), the active replay data (if any), and the sensor log.

By changing the live job file, you can change how the sensor behaves. For example, to make settings and transformations active, [write to](#) or [copy to](#) the `_live.job` file. You can also save active settings or transformations to a client computer, or to a file on the sensor, by [reading from](#) or [copying](#) these files, respectively.



The live files are stored in volatile storage. Only user-created job files are stored in non-volatile storage.

The following table lists the live files:

Live Files

Name	Read/Write	Description
<code>_live.job</code>	Read/Write	The active job. This file contains a Configuration component containing the current settings. If Alignment Reference in the active job is set to Dynamic, it also contains a Transform component containing transformations. For more information on job files (live and user-created), accessing their components, and their structure, see <i>Job Files</i> on the next page.
<code>_live.cfg</code>	Read/Write	A standalone representation of the Configuration component contained in <code>_live.job</code> . Used primarily for backwards compatibility.
<code>_live.tfm</code>	Read/Write	If Alignment Reference of the active job is set to Dynamic: A copy of the Transform component in <code>_live.job</code> . Used primarily for backwards compatibility. If Alignment Reference of the active job is set to Fixed: The transformations that are used for <i>all</i> jobs whose Alignment Reference setting is set to Fixed.
<code>_live.log</code>	Read	A sensor log containing various messages. For more information on the log file, see <i>Log File</i> below.
<code>_live.rec</code>	Read/Write	The active replay simulation data.
<code>ExtendedId.xml</code>	Read	Sensor identification.

Log File

The log file contains log messages generated by the sensor. The root element is *Log*.

To access the log file, use the [Read File](#) command, passing "_live.log" to the command. The log file is read-only.

Log Child Elements

Element	Type	Description
@idStart	64s	Identifier of the first log.
@idEnd	64s	Identifier of the final log.
List of (Info Warning Error)	List	An ordered list of log entries. This list is empty if idEnd < idStart.

Log/Info | Log/Warning | Log/Error Elements

Element	Type	Description
@time	64u	Log time, in uptime (μs).
@source	32u	The serial number of the sensor the log was produced by.
@id	32u	The Identifier, or index, of the log
@value	String	Log content; may contain printf-style format specifiers (e.g. %u).
List of (IntArg FloatArg Arg)	List	An ordered list of arguments: IntArg – Integer argument FloatArg – Floating-point argument Arg – Generic argument

The arguments are all sent as strings and should be applied in order to the format specifiers found in the content.

Job Files

The following sections describe the structure of job files.

Job files, which are stored in a Gocator's internal storage, control system behavior when a sensor is running. Job files contain the settings and potentially the transformations and models associated with the job (if [Alignment Reference](#) is set to Dynamic).

There are two kinds of job files:

- A special job file called "_live.job." This job file contains the *active* settings and potentially the transformations and models associated with the job. It is stored in volatile storage.
- Other job files that are stored in non-volatile storage.

Job File Components

A job file contains components that can be loaded and saved as independent files. The following table lists the components of a job file:

Job File Components

Component	Path	Description
Configuration	config.xml	The job's configurations. This component is always present.
Transform	transform.xml	Transformation values. Present only if Alignment Reference is set to Dynamic.
Part model	<name>.mdl	One or more part model files. Part models are created using models and part matching .

Elements in the components contain three types of values: settings, constraints, and properties. Settings are input values that can be edited. Constraints are read-only limits that define the valid values for settings. Properties are read-only values that provide supplemental information related to sensor setup.


When a job file is received from a sensor, it will contain settings, constraints, and properties. When a job file is sent to a sensor, any constraints or properties in the file will be ignored.


Changing the value of a setting can affect multiple constraints and properties. After you upload a job file, you can download the job file again to access the updated values of the constraints and properties.

All Gocator sensors share a common job file structure.

Accessing Files and Components

Job file components can be accessed individually as XML files using path notation. For example, the configurations in a user-created job file called *productionRun01.job* can be read by passing "productionRun01.job/config.xml" to the [Read File](#) command. In the same way, the configurations in the active job could be read using "_live.job/config.xml".

 If [Alignment Reference](#) is set to Fixed, the active job file (_live.job) will not contain transformations. To access transformations in this case, you must access them via _live.tfm.

 The following sections correspond to the XML structure used in job file components.

Configuration

The Configuration component of a job file contains settings that control how a Gocator sensor behaves.

You can access the Configuration component of the active job as an XML file, either using path notation, via "_live.job/config.xml", or directly via "_live.cfg".

You can access the Configuration component in user-created job files in non-volatile storage, for example, "productionRun01.job/config.xml". You can only access configurations in user-created job files using path notation.

See the following sections for the elements contained in this component.

Configuration Child Elements

Element	Type	Description
@version	32u	Configuration version (101).

Element	Type	Description
@versionMinor	32u	Configuration minor version (5).
Setup	Section	For a description of the Setup elements, see <i>Setup</i> below.
Replay	Section	Contains settings related to recording filtering (see <i>Replay</i> on page 167).
Streams	Section	Read-only collection of available data streams (see <i>Streams/Stream (Read-only)</i> on page 169).
ToolOptions	Section	List of available tool types and their information. See <i>ToolOptions</i> on page 169 for details.
Tools	Collection	Collection of sections. Each section is an instance of a tool and is named by the type of the tool it describes. For more information, see the sections for each tool under <i>Tools</i> on page 171.
Tools.options	String (CSV)	Deprecated. Replaced by ToolOptions .
Outputs	Section	For a description of the Output elements, see <i>Output</i> on page 218.

Setup

The Setup element contains settings related to system and sensor setup.

Setup Child Elements

Element	Type	Description
TemperatureSafetyEnabled	Bool	Enables laser temperature safety control.
TemperatureSafetyEnabled.used	Bool	Whether or not this property is used.
ScanMode	32s	The default scan mode.
ScanMode options	String (CSV)	List of available scan modes.
OcclusionReductionEnabled	Bool	Enables occlusion reduction.
OcclusionReductionEnabled.used	Bool	Whether or not property is used.
OcclusionReductionEnabled.value	Bool	Actual value used if not configurable.
OcclusionReductionAlg	32s	The Algorithm to use for occlusion reduction: 0 – Standard 1 – High Quality
OcclusionReductionAlg.used	Bool	Whether or not property is used
OcclusionReductionAlg.value	Bool	Actual value used if not configurable
UniformSpacingEnabled	Bool	Enables uniform spacing.
UniformSpacingEnabled.used	Bool	Whether or not property is used.
UniformSpacingEnabled.value	Bool	Actual value used if not configurable.
IntensityEnabled	Bool	Enables intensity data collection.
IntensityEnabled.used	Bool	Whether or not property is used.
IntensityEnabled.value	Bool	Actual value used if not configurable.
FlickerFreeModeEnabled	Bool	Enables flicker-free operation.
FlickerFreeModeEnabled.used	Bool	Whether flicker-free operation can be used on this sensor.

Element	Type	Description
ExternalInputZPulseEnabled	Bool	Enables the External Input based encoder Z Pulse feature.
Filters	Section	See <i>Filters</i> below.
Trigger	Section	See <i>Trigger</i> on page 153.
Layout	Section	See <i>Layout</i> on page 154.
Alignment	Section	See <i>Alignment</i> on page 155.
Devices	Collection	A collection of two Device sections (with roles main and buddy). See <i>Devices / Device</i> on page 156.
SurfaceGeneration	Section	See <i>SurfaceGeneration</i> on page 162.
SurfaceSections	Section	See <i>SurfaceSections</i> on page 163.
ProfileGeneration	Section	See <i>ProfileGeneration</i> on page 163. Used by Gocator displacement sensors.
PartDetection	Section	See <i>PartDetection</i> on page 165.
PartMatching	Section	See <i>PartMatching</i> on page 166.
Custom	Custom	Used by specialized sensors.

Filters

The Filters element contains settings related to post-processing profiles before they are output or used by measurement tools.

XSmoothing

XSmoothing Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

YSmoothing

YSmoothing Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

XGapFilling

XGapFilling Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

YGapFilling

YGapFilling Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

XMedian

XMedian Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

YMedian

YMedian Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

XDecimation

XDecimation Child Elements


Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

YDecimation

YDecimation Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).


XSlope

 This filter is only available on displacement sensors.

XSlope Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

YSlope

 This filter is only available on displacement sensors.

YSlope Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
Enabled	Bool	Enables filtering.
Window	64f	Window size (mm).
Window.min	64f	Minimum window size (mm).
Window.max	64f	Maximum window size (mm).

Trigger

The Trigger element contains settings related to trigger source, speed, and encoder resolution.

Trigger Child Elements

Element	Type	Description
Source	32s	Trigger source: 0 – Time 1 – Encoder 2 – Digital Input 3 – Software
Source.options	32s (CSV)	List of available source options.
Units	32s	Sensor triggering units when source is not clock or encoder: 0 – Time 1 – Encoder
FrameRate	64f	Frame rate for time trigger (Hz).
FrameRate.min	64f	Minimum frame rate (Hz).
FrameRate.max	64f	Maximum frame rate (Hz).
FrameRate.maxSource	32s	Source of maximum frame rate limit: 0 – Imager 1 – Surface generation
MaxFrameRateEnabled	Bool	Enables maximum frame rate (ignores FrameRate).
EncoderSpacing	64f	Encoder spacing for encoder trigger (mm).
EncoderSpacing.min	64f	Minimum encoder spacing (mm).
EncoderSpacing.max	64f	Maximum encoder spacing (mm).
EncoderSpacing.minSource	32s	Source of minimum encoder spacing: 0 – Resolution 1 – Surface generation
EncoderSpacing.used	Bool	Whether or not this parameter is configurable.
EncoderTriggerMode	32s	Encoder triggering mode: 0 – Tracking backward 1 – Bidirectional 2 – Ignore backward
Delay	64f	Trigger delay (μ s or mm).
Delay.min	64f	Minimum trigger delay (μ s or mm).
Delay.max	64f	Maximum trigger delay (μ s or mm).
GateEnabled	Bool	Enables digital input gating.
GateEnabled.used	Bool	True if this parameter can be configured.
GateEnabled.value	Bool	Actual value if the parameter cannot be configured.

Element	Type	Description
BurstEnabled	Bool	Enables burst triggering.
BurstEnabled.Used	Bool	Whether or not this parameter is configurable.
BurstCount	32u	Number of scans to take during burst triggering.
BurstCount.used	Bool	Whether or not this parameter is configurable.
BurstCount.max	32u	Maximum burst count.

Layout

Layout Child Elements

Element	Type	Description
DataSource	32s	Data source of the layout output (read-only): 0 – Top 1 – Bottom 2 – Top left 3 – Top right 4 – Top Bottom 5 – Left Right
XSpacingCount	32u	Number of points along X when data is resampled.
YSpacingCount	32u	Number of points along Y when data is resampled.
TransformedDataRegion	Region3D	Transformed data region of the layout output.
Orientation	32s	Sensor orientation: 0 – Wide 1 – Opposite 2 – Reverse 3 – Grid
Grid	Grid	Grid representation of the multi-sensor layout.
Orientation.options	32s (CSV)	List of available orientation options.
Orientation.value	32s	Actual value used if not configurable.
MultiplexBuddyEnabled	Bool	Enables multiplexing for buddies.
MultiplexSingleEnabled	Bool	Enables multiplexing for a single sensor configuration.
MultiplexSingleExposureDuration	64f	Exposure duration in μs (currently rounded to integer when read by the sensor)
MultiplexSingleDelay	64f	Delay in μs . (Currently gets rounded up when read by the sensor.)
MultiplexSinglePeriod	64f	Period in μs . (Currently gets rounded up when read by the sensor.)
MultiplexSinglePeriod.min	64f	Minimum period in μs .

Region3D Child Elements

Element	Type	Description
X	64f	X start (mm).
Y	64f	Y start (mm).

Element	Type	Description
Z	64f	Z start (mm).
Width	64f	X extent (mm).
Length	64f	Y extent (mm).
Height	64f	Z extent (mm).
ZAngle	64f	Z Angle start (degrees).
ZAngle.used	Bool	Whether or not this property is used.

Grid Elements

Element	Type	Description
ColumnCount	32u	Column count.
ColumnCount.value	32u	Column count value.

Alignment

The Alignment element contains settings related to alignment and encoder calibration.

Alignment Child Elements

Element	Type	Description
@used	Bool	Whether or not this field is used
InputTriggerEnabled	Bool	Enables digital input-triggered alignment operation.
InputTriggerEnabled.used	Bool	Whether or not this feature can be enabled. This feature is available only on some sensor models.
InputTriggerEnabled.value	Bool	Actual feature status.
Type	32s	Type of alignment operation: 0 – Stationary 1 – Moving
Type.options	32s (CSV)	List of available alignment types.
StationaryTarget	32s	Stationary alignment target: 0 – None 1 – Disk 2 – Bar 3 – Plate
StationaryTarget.options	32s (CSV)	List of available stationary alignment targets.
MovingTarget	32s	Moving alignment target: 0 – None 1 – Disk 2 – Bar 3 – Plate
MovingTarget.options	32s (CSV)	List of available moving alignment targets.

Element	Type	Description
EncoderCalibrateEnabled	Bool	Enables encoder resolution calibration.
Disk	Section	See <i>Disk</i> below.
Bar	Section	See <i>Bar</i> below.
Plate	Section	See <i>Plate</i> below.

Disk

Disk Child Elements

Element	Type	Description
Diameter	64f	Disk diameter (mm).
Height	64f	Disk height (mm).

Bar

Bar Child Elements

Element	Type	Description
Width	64f	Bar width (mm).
Height	64f	Bar height (mm).
HoleCount	32u	Number of holes.
HoleCount.value	32u	Actual number of holes expected by system.
HoleCount.used	Bool	Whether the hole count will be used in the bar alignment procedure.
HoleDistance	64f	Distance between holes (mm).
HoleDistance.used	Bool	Whether the hole distance will be used in the bar alignment procedure.
HoleDiameter	64f	Diameter of holes (mm).
HoleDiameter.used	Bool	Whether the hole diameter will be used in the bar alignment procedure.

Plate

Plate Child Elements

Element	Type	Description
Height	64f	Plate height (mm).
HoleCount	32u	Number of holes.
RefHoleDiameter	64f	Diameter of reference hole (mm).
SecHoleDiameter	64f	Diameter of secondary hole(s) (mm).

Devices / Device

Devices / Device Child Elements

Element	Type	Description
@role	32s	Sensor role: 0 – Main

Element	Type	Description
		1 – Buddy
Layout	Layout	Multiplexing bank settings.
DataSource	32s	Data source of device output (read-only): 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
XSpacingCount	32u	Number of resampled points along X (read-only).
YSpacingCount	32u	Number of resampled points along Y (read-only).
ActiveArea	Region3D	Active area. (Contains min and max attributes for each element.)
TransformedDataRegion	Region3D	Active area after transformation (read-only).
FrontCamera	Window	Front camera window (read-only).
BackCamera	Window	Back camera window (read-only).
BackCamera.used	Bool	Whether or not this field is used.
PatternSequenceType	32s	The projector pattern sequence to display when a projector equipped device is running. The following types are possible: -1 – None 0 – Default 100 – Nine Lines
PatternSequenceType.options	32s	List of available pattern sequence types.
PatternSequenceType.used	Bool	Whether or not this field is used.
PatternSequenceCount	32u	Number of frames in the active sequence (read-only).
ExposureMode	32s	Exposure mode: 0 – Single exposure 1 – Multiple exposures 2 – Dynamic exposure
ExposureMode.options	32s (CSV)	List of available exposure modes.
Exposure	64f	Single exposure (μ s).
Exposure.min	64f	Minimum exposure (μ s).
Exposure.max	64f	Maximum exposure (μ s).
Exposure.used	Bool	Whether or not this field is used.
DynamicExposureMin	64f	Dynamic exposure range minimum (μ s).
DynamicExposureMax	64f	Dynamic exposure range maximum (μ s).
ExposureSteps	64f (CSV)	Multiple exposure list (μ s).
ExposureSteps.countMin	32u	Minimum number of exposure steps.

Element	Type	Description
ExposureSteps.countMax	32u	Maximum number of exposure steps.
IntensitySource	32s	Intensity source: 0 – Both cameras 1 – Front camera 2 – Back camera
IntensitySource.options	32s (CSV)	List of available intensity sources.
ZSubsampling	32u	Subsampling factor in Z.
ZSubsampling.options	32u (CSV)	List of available subsampling factors in Z.
SpacingInterval	64f	Uniform spacing interval (mm).
SpacingInterval.min	64f	Minimum spacing interval (mm).
SpacingInterval.max	64f	Maximum spacing interval (mm).
SpacingInterval.used	Bool	Whether or not field is used.
SpacingInterval value	64f	Actual value used.
SpacingIntervalType	32s	Spacing interval type: 0 – Maximum resolution 1 – Balanced 2 – Maximum speed 3 – Custom
SpacingIntervalType.used	Bool	Whether or not this field is used.
Tracking	Section	See <i>Tracking</i> on the next page.
Material	Section	See <i>Material</i> on page 160.
IndependentExposures	Section	See <i>IndependentExposures</i> on page 162
Custom	Custom	Used by specialized sensors.

Region3D Child Elements

Element	Type	Description
X	64f	X start (mm).
Y	64f	Y start (mm).
Z	64f	Z start (mm).
Width	64f	X extent (mm).
Length	64f	Y extent (mm).
Height	64f	Z extent (mm).
ZAngle	64f	Z Angle start (degrees).
ZAngle.used	Bool	Whether or not this property is used.

Window Child Elements

Element	Type	Description
X	32u	X start (pixels).
Y	32u	Y start (pixels).
Width	32u	X extent (pixels).
Height	32u	Y extent (pixels).


Layout Child Elements

Element	Type	Description
Grid	Grid	Layout grid information.
MultiplexingBank	32u	Multiplexing bank ID
MultiplexingBank.used	32u	Whether or not this field can be specified
MultiplexingBank.value	32u	Actual value used by system

Grid Child Elements

Element	Type	Description
@used	Bool	Whether or not this section is used.
Row	32s	Device row position in grid layout.
Row.value	32s	Value in use by the sensor, useful for determining value when used is false.
Column	32s	Device column position in grid layout.
Column.value	32s	Value in use by the sensor, useful for determining value when used is false.
Direction	32s	Sensor orientation direction.
Direction.value	32s	Value in use by the sensor, useful for determining value when used is false.

Tracking

 Tracking is only available on Gocator 2300 and 2400 series sensors.

Tracking Child Elements

Element	Type	Description
Enabled	Bool	Enables tracking.
Enabled.used	Bool	Whether or not this field is used.
SearchThreshold	64f	Percentage of spots that must be found to remain in track.
Height	64f	Tracking window height (mm).
Height.min	64f	Minimum tracking window height (mm).
Height.max	64f	Maximum tracking window height (mm).

Material

Material Child Elements

Element	Type	Description
Type	32s	Type of Material settings to use. 0 – Custom 1 – Diffuse
Type.used	Bool	Determines if the setting's value is currently used.
Type.value	32s	Value in use by the sensor, useful for determining value when used is false.
SpotThreshold	32s	Spot detection threshold.
SpotThreshold.used	Bool	Determines if the setting's value is currently used.
SpotThreshold.value	32s	Value in use by the sensor, useful for determining value when used is false.
SpotWidthMax	32s	Spot detection maximum width.
SpotWidthMax.used	Bool	Determines if the setting's value is currently used.
SpotWidthMax.value	32s	Value in use by the sensor, useful for determining value when used is false.
SpotWidthMax.min	32s	Minimum allowed spot detection maximum value.
SpotWidthMax.max	32s	Maximum allowed spot detection maximum value.
SpotSelectionType	32s	Spot selection type 0 – Best. Picks the strongest spot in a given column. 1 – Top. Picks the spot which is most Top/Left on the imager 2 – Bottom. Picks the spot which is most Bottom/Right on the imager 3 – None. All spots are available. This option may not be available in some configurations. 4 – Continuity. Picks the most continuous spot.
SpotSelectionType.used	Bool	Determines if the setting's value is currently used.
SpotSelectionType.value	32s	Value in use by the sensor, useful for determining value when used is false.
SpotSelectionType.options	32s (CSV)	List of available spot selection types.
CameraGainAnalog	64f	Analog camera gain factor.
CameraGainAnalog.used	Bool	Determines if the setting's value is currently used.
CameraGainAnalog.value	64f	Value in use by the sensor, useful for determining value when used is false.
CameraGainAnalog.min	64f	Minimum value.
CameraGainAnalog.max	64f	Maximum value.
CameraGainDigital	64f	Digital camera gain factor.

Element	Type	Description
CameraGainDigital.used	Bool	Determines if the setting's value is currently used.
CameraGainDigital.value	64f	Value in use by the sensor, useful for determining value when used is false.
CameraGainDigital.min	64f	Minimum value.
CameraGainDigital.max	64f	Maximum value.
DynamicSensitivity	64f	Dynamic exposure control sensitivity factor. This can be used to scale the control setpoint.
DynamicSensitivity.used	Bool	Determines if the setting's value is currently used.
DynamicSensitivity.value	64f	Value in use by the sensor, useful for determining value when used is false.
DynamicSensitivity.min	64f	Minimum value.
DynamicSensitivity.max	64f	Maximum value.
DynamicThreshold	32s	Dynamic exposure control threshold. If the detected number of spots is fewer than this number, the exposure will be increased.
DynamicThreshold.used	Bool	Determines if the setting's value is currently used.
DynamicThreshold.value	32s	Value in use by the sensor, useful for determining value when used is false.
DynamicThreshold.min	32s	Minimum value.
DynamicThreshold.max	32s	Maximum value.
SensitivityCompensationEnabled	Bool	Sensitivity compensation toggle. Used in determining analog and digital gain, along with exposure scale.
SensitivityCompensationEnabled.used	Bool	Determines if the setting's value is currently used.
SensitivityCompensationEnabled.value	Bool	Value in use by the sensor, useful for determining value when used is false.
GammaType	32s	Gamma type.
GammaType used	Bool	Determines if the setting's value is currently used.
GammaType value	32s	Value in use by the sensor. Useful for determining value when used is false.
SpotContinuitySorting	Section	See <i>SpotContinuitySorting Child Elements</i> below.

SpotContinuitySorting Child Elements

Element	Type	Description
MinimumSegmentSize	32u	Smallest continuous segment considered in continuity sorting.
SearchWindow/X	32u	X component of continuity sorting search window size.
SearchWindow/Y	32u	Y component of continuity sorting search window size.

IndependentExposures

IndependentExposures Child Elements

Element	Type	Description
@used	Bool	Whether this field is used
Enabled	Bool	Whether to allow using separate exposure values for each camera
FrontCameraExposure	64f	The exposure value to use for the front camera
FrontCameraExposure.min	64f	The minimum exposure value possible for front camera
FrontCameraExposure.max	64f	The maximum exposure value possible for back camera
BackCameraExposure	64f	The exposure value to use for the front camera
BackCameraExposure.min	64f	The minimum exposure value possible for front camera
BackCameraExposure.max	64f	The maximum exposure value possible for back camera

SurfaceGeneration

The SurfaceGeneration element contains settings related to surface generation.

SurfaceGeneration Child Elements

Element	Type	Description
Type	32s	Surface generation type: 0 – Continuous 1 – Fixed length 2 – Variable length 3 – Rotational
FixedLength	Section	See <i>FixedLength</i> below.
VariableLength	Section	See <i>VariableLength</i> on the next page.
Rotational	Section	See <i>Rotational</i> on the next page.

FixedLength

FixedLength Child Elements

Element	Type	Description
StartTrigger	32s	Start trigger condition: 0 – Sequential 1 – Digital input
Length	64f	Surface length (mm).
Length.min	64f	Minimum surface length (mm).
Length.max	64f	Maximum surface length (mm).

VariableLength

VariableLength Child Elements

Element	Type	Description
MaxLength	64f	Maximum surface length (mm).
MaxLength.min	64f	Minimum value for maximum surface length (mm).
MaxLength.max	64f	Maximum value for maximum surface length (mm).

Rotational

Rotational Child Elements

Element	Type	Description
Circumference	64f	Circumference (mm).
Circumference.min	64f	Minimum circumference (mm).
Circumference.max	64f	Maximum circumference (mm).

SurfaceSections

SurfaceSections Child Elements

Element	Type	Description
@xMin	64f	The minimum valid X value to be used for section definition.
@xMax	64f	The maximum valid X value to be used for section definition.
@yMin	64f	The minimum valid Y value to be used for section definition.
@yMax	64f	The maximum valid Y value to be used for section definition.
Section	Collection	A series of Section elements.

Section Child Elements

Element	Type	Description
@id	32s	The ID assigned to the surface section.
@name	String	The name associated with the surface section.
StartPoint	Point64f	The beginning point of the surface section.
EndPoint	Point64f	The end point of the surface section.
CustomSpacingIntervalEnabled	Bool	Indicates whether a user specified custom spacing interval is to be used for the resulting section.
SpacingInterval	64f	The user specified spacing interval.
SpacingInterval.min	64f	The spacing interval limit minimum.
SpacingInterval.max	64f	The spacing interval limit maximum.
SpacingInterval.value	64f	The current spacing interval used by the system.

ProfileGeneration

The ProfileGeneration element contains settings related to profile generation.

This element is used by Gocator laser displacement sensors.

ProfileGeneration Child Elements

Element	Type	Description
Type	32s	Profile generation type: 0 – Continuous 1 – Fixed length 2 – Variable length 3 – Rotational
FixedLength	Section	See <i>FixedLength</i> below.
VariableLength	Section	See <i>VariableLength</i> below.
Rotational	Section	See <i>Rotational</i> below.

FixedLength

FixedLength Child Elements

Element	Type	Description
StartTrigger	32s	Start trigger condition: 0 – Sequential 1 – Digital input
Length	64f	Profile length (mm).
Length.min	64f	Minimum profile length (mm).
Length.max	64f	Maximum profile length (mm).

VariableLength

VariableLength Child Elements

Element	Type	Description
MaxLength	64f	Maximum surface length (mm).
MaxLength.min	64f	Minimum value for maximum profile length (mm).
MaxLength.max	64f	Maximum value for maximum profile length (mm).

Rotational

Rotational Child Elements

Element	Type	Description
Circumference	64f	Circumference (mm).
Circumference.min	64f	Minimum circumference (mm).
Circumference.max	64f	Maximum circumference (mm).

PartDetection

PartDetection Child Elements

Element	Type	Description
Enabled	Bool	Enables part detection.
Enabled.used	Bool	Whether or not this field is used.
Enabled value	Bool	Actual value used if not configurable.
Threshold	64f	Height threshold (mm).
Threshold.min	64f	Minimum height threshold (mm).
Threshold.max	64f	Maximum height threshold (mm).
ThresholdDirection	32u	Threshold direction: 0 - Above 1 - Below
MinArea	64f	Minimum area (mm ²).
MinArea.min	64f	Minimum value of minimum area.
MinArea.max	64f	Maximum value of minimum area.
MinArea.used	Bool	Whether or not this field is used.
GapWidth	64f	Gap width (mm).
GapWidth.min	64f	Minimum gap width (mm).
GapWidth.max	64f	Maximum gap width (mm).
GapWidth.used	Bool	Whether or not this field is used.
GapLength	64f	Gap length (mm).
GapLength.min	64f	Minimum gap length (mm).
GapLength.max	64f	Maximum gap length (mm).
GapLength.used	Bool	Whether or not this field is used.
PaddingWidth	64f	Padding width (mm).
PaddingWidth.min	64f	Minimum padding width (mm).
PaddingWidth.max	64f	Maximum padding width (mm).
PaddingWidth.used	Bool	Whether or not this field is used.
PaddingLength	64f	Padding length (mm).
PaddingLength.min	64f	Minimum padding length (mm).
PaddingLength.max	64f	Maximum padding length (mm).
PaddingLength.used	Bool	Whether or not this field is used.
MinLength	64f	Minimum length (mm).
MinLength.min	64f	Minimum value of minimum length (mm).
MinLength.max	64f	Maximum value of minimum length (mm).
MinLength.used	Bool	Whether or not this field is used.
MaxLength	64f	Maximum length (mm).

Element	Type	Description
MaxLength.min	64f	Minimum value of maximum length (mm).
MaxLength.max	64f	Maximum value of maximum length (mm).
MaxLength.used	Bool	Whether or not this field is used.
FrameOfReference	32s	Part frame of reference: 0 – Sensor 1 – Scan 2 – Part
FrameOfReference.used	Bool	Whether or not this field is used.
FrameOfReference.value	32s	Actual value.
EdgeFiltering	Section	See <i>EdgeFiltering</i> below.

EdgeFiltering

EdgeFiltering Child Elements

Element	Type	Description
@used	Bool	Whether or not this section is used.
Enabled	Bool	Enables edge filtering.
PreserveInteriorEnabled	Bool	Enables preservation of interior.
ElementWidth	64f	Element width (mm).
ElementWidth.min	64f	Minimum element width (mm).
ElementWidth.max	64f	Maximum element width (mm).
ElementLength	64f	Element length (mm).
ElementLength.min	64f	Minimum element length (mm).
ElementLength.max	64f	Maximum element length (mm).

PartMatching

The PartMatching element contains settings related to part matching.

PartMatching Child Elements

Element	Type	Description
Enabled	Bool	Enables part matching.
Enabled.used	Bool	Whether or not this field is used.
MatchAlgo	32s	Match algorithm. 0 – Edge points 1 – Bounding Box 2 – Ellipse
Edge	Section	See <i>Edge</i> on the next page.
BoundingBox	Section	See <i>BoundingBox</i> on the next page.
Ellipse	Section	See <i>Ellipse</i> on the next page.

Edge

Edge Child Elements

Element	Type	Description
ModelName	String	Name of the part model to use. Does not include the .mdl extension.
Acceptance/Quality/Min	64f	Minimum quality value for a match.

BoundingBox

BoundingBox Child Elements

Element	Type	Description
ZAngle	64f	Z rotation to apply to bounding box (degrees).
AsymmetryDetectionType	32s	Determine whether to use asymmetry detection and, if enabled, which dimension is the basis of detection. The possible values are: 0 - None 1 - Length 2 - Width
Acceptance/Width/Min	64f	Minimum width (mm).
Acceptance/Width/Max	64f	Maximum width (mm).
Acceptance/Length/Min	64f	Minimum length (mm).
Acceptance/Length/Max	64f	Maximum length (mm).

Ellipse

Ellipse Child Elements

Element	Type	Description
ZAngle	64f	Z rotation to apply to ellipse (degrees).
AsymmetryDetectionType	32s	Determine whether to use asymmetry detection and, if enabled, which dimension is the basis of detection. The possible values are: 0 - None 1 - Major 2 - Minor
Acceptance/Major/Min	64f	Minimum major length (mm).
Acceptance/Major/Max	64f	Maximum major length (mm).
Acceptance/Minor/Min	64f	Minimum minor length (mm).
Acceptance/Minor/Max	64f	Maximum minor length (mm).

Replay

Contains settings related to recording filtering.

RecordingFiltering

RecordingFiltering Child Elements

Element	Type	Description
ConditionCombineType	32s	0 – Any: If any enabled condition is satisfied, the current frame is recorded. 1 – All: All enabled conditions must be satisfied for the current frame to be recorded.
Conditions	Collection	A collection of AnyMeasurement , AnyData , or Measurement conditions.

Conditions/AnyMeasurement

Conditions/AnyMeasurement Elements

Element	Type	Description
Enabled	Bool	Indicates whether the condition is enabled.
Result	32s	The measurement decision criteria to be included in the filter. Possible values are: 0 – Pass 1 – Fail 2 – Valid 3 – Invalid

Conditions/AnyData

Conditions/AnyData Elements

Element	Type	Description
Enabled	Bool	Indicates whether the condition is enabled.
RangeCountCase	32s	The case under which to record data: 0 – Range count at or above threshold of valid data points. 1 – Range count below threshold.
RangeCountThreshold	32u	The threshold for the number of range points that are valid.

Conditions/Measurement

Conditions/Measurement Elements

Element	Type	Description
Enabled	Bool	Indicates whether the condition is enabled.
Ids	32s	The ID of the measurement to filter.
Result	32s	The measurement decision criteria for the selected ID to be included in the filter. Possible values are: 0 – Pass 1 – Fail

Element	Type	Description
		2 – Valid
		3 – Invalid

Streams/Stream (Read-only)

Streams/Stream Child Elements

Element	Type	Description
Step	32s	The data step of the stream being described. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Id	32u	The stream ID.
TempoGroup	32u	Represents a stage in the data processing pipeline. The greater the number, the farther removed from the initial acquisition stage.
Sources	Collection	A collection of Source elements as described below.

Source Child Elements

Element	Type	Description
Id	32s	The ID of the data source. Possible values are: 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right 4 – Top Bottom 5 – Left Right
Capability	32s	The capability of the data stream source. Possible values are: 0 – Full 1 – Diagnostic only 2 – Virtual
Region	Region3d	The region of the given stream source.
AdditionalRegions	Collection	Collection of additional regions (for example, for the second camera).
AdditionalRegions/Region	Region3d	Additional regions.

ToolOptions

The ToolOptions element contains a list of available tool types, their measurements, and settings for related information.

ToolOptions Child Elements

Element	Type	Description
<Tool Names>	Collection	A collection of tool name elements. An element for each tool type is present.

Tool Name Child Elements

Element	Type	Description
@displayName	String	Display name of the tool.
@isCustom	Bool	Reserved for future use.
MeasurementOptions	Collection	See <i>MeasurementOptions</i> below
FeatureOptions	Collection	See <i>FeatureOptions</i> below.
StreamOptions	Collection	See <i>StreamOptions</i> on the next page.

MeasurementOptions

MeasurementOptions Child Elements

Element	Type	Description
<Measurement Names>	Collection	A collection of measurement name elements. An element for each measurement is present.

<Measurement Name> Child Elements

Element	Type	Description
@displayName	String	Display name of the tool.
@minCount	32u	Minimum number of instances in a tool.
@maxCount	32u	Maximum number of instances in a tool.

FeatureOptions

FeatureOptions Child Elements

Element	Type	Description
<Feature Names>	Collection	A collection of feature name elements. An element for each measurement is present.

<Feature Name> Child Elements

Element	Type	Description
@displayName	String	Display name of the feature.
@minCount	32u	Minimum number of instances in a tool.
@maxCount	32u	Maximum number of instances in a tool.
@dataType	String	The data type of the feature. One of: <ul style="list-style-type: none">– PointFeature– LineFeature– CircleFeature– PlaneFeature

StreamOptions

StreamOptions Child Elements

Element	Type	Description
@step	32s	The data step of the stream being described. Possible values are: 1 - Video 2 - Range 3 - Surface 4 - Section
@ids	CSV	A list representing the available IDs associated with the given step.

Tools

The Tools element contains measurement tools. The following sections describe each tool and its available measurements.

Tools Child Elements

Element	Type	Description
@options	String (CSV)	A list of the tools available in the currently selected scan mode.
<ToolType>	Section	An element for each added tool.

Profile Types

The following types are used by various measurement tools.

ProfileFeature

An element of type ProfileFeature defines the settings for detecting a feature within an area of interest.

ProfileFeature Child Elements

Element	Type	Description
Type	32s	Determine how the feature is detected within the area: 0 - Max Z 1 - Min Z 2 - Max X 3 - Min X 4 - Corner 5 - Average 6 - Rising Edge 7 - Falling Edge 8 - Any Edge 9 - Top Corner 10 - Bottom Corner 11 - Left Corner 12 - Right Corner

Element	Type	Description
		13 – Median
RegionEnabled	Bool	Indicates whether feature detection applies to the defined Region or to the entire active area.
Region	ProfileRegion2D	Element for feature detection area.

ProfileLine

An element of type ProfileLine defines measurement areas used to calculate a line.

ProfileLine Child Elements

Element	Type	Description
RegionCount	32s	Count of the regions.
Regions	(Collection)	The regions used to calculate a line. Contains one or two Region elements of type ProfileRegion2D , with RegionEnabled fields for each.

ProfileRegion2d

An element of type ProfileRegion2d defines a rectangular area of interest.

ProfileRegion2d Child Elements

Element	Type	Description
X	64f	Setting for profile region X position (mm).
Z	64f	Setting for profile region Z position (mm).
Width	64f	Setting for profile region width (mm).
Height	64f	Setting for profile region height (mm).

Surface Types

The following types are used by the various measurement tools.

Region3D

An element of type Region3D defines a rectangular area of interest in 3D.

Region3D Child Elements

Element	Type	Description
X	64f	Volume X position (mm).
Y	64f	Volume Y position (mm).
Z	64f	Volume Z position (mm).
Width	64f	Volume width (mm).
Length	64f	Volume length (mm).
Height	64f	Volume height (mm).

SurfaceFeature

An element of type SurfaceFeature defines the settings for detecting a feature within an area of interest.

SurfaceFeature Child Elements

Element	Type	Description
Type	32s	Setting to determine how the feature is detected within the area: 0 – Average (formerly Centroid 2d) 1 – Centroid (formerly Centroid 3d) 2 – X Max 3 – X Min 4 – Y Max 5 – Y Min 6 – Z Max 7 – Z Min 8 – Median
RegionEnabled	Boolean	Setting to enable/disable region: 0 – Disable 1 – Enable
Region	Region3D	Element for feature detection volume.

SurfaceRegion2d

An element of type SurfaceRegion2d defines a rectangular area of interest on the X-Y plane.

SurfaceRegion2d Child Elements

Element	Type	Description
X	64f	Setting for surface region X position (mm).
Y	64f	Setting for surface region Y position (mm).
Width	64f	Setting for region width (mm).
Length	64f	Setting for region length (mm).

Geometric Feature Types

The Geometric Feature type is used by various measurement tools.

Feature Child Elements

Element	Type	Description
@id	32s	The identifier of the geometric feature. -1 if unassigned.
@dataType	String	The data type of the feature. One of: – PointFeature – LineFeature
@type	String	Type name of feature.
Name	String	The display name of the feature.
Enabled	Bool	Whether the given feature output is enabled.
Parameters	Collection	Collection of GdkParam elements.

Parameter Types

The following types are used by internal and custom (user-created) GDK-based tools.

GDK Parameter Child Elements

Element	Type	Description
@label	String	Parameter label.
@type	String	Type of parameter. It is one of the following (see tables below for elements found in each type): <ul style="list-style-type: none">- Bool- Int- Float- ProfileRegion- SurfaceRegion2d- SurfaceRegion3d- GeometricFeature
@options	Variant (CSV)	Options available for this parameter.
@optionNames	String (CSV)	Names

GDK Parameter Bool Type

Element	Type	Description
	Bool	Boolean value of parameter.

GDK Parameter Int Type

Element	Type	Description
	32s	Integer value of parameter of integer type.

GDK Parameter Float Type

Element	Type	Description
	64f	Floating point value of parameter.

GDK Parameter String Type

Element	Type	Description
	String	String value of parameter.

GDK Parameter Profile Region Type

Element	Type	Description
X	64f	X value of region.
Z	64f	Z value of region.
Width	64f	Width value of region.
Height	64f	Height value of region.

GDK Parameter Surface Region 2D Type

Element	Type	Description
X	64f	X value of region.
X	64f	X value of region.

Element	Type	Description
Y	64f	Y value of region.
Width	64f	Width value of region.
Length	64f	Length value of region.

GDK Parameter Surface Region 3D Type

Element	Type	Description
X	64f	X value of region.
Y	64f	Y value of region.
Z	64f	Z value of region.
Width	64f	Width value of region.
Length	64f	Length value of region.
Height	64f	Height value of region.
ZAngle	64f	ZAngle value of region.

GDK Parameter Geometric Feature Type

Element	Type	Description
	32s	Geometric feature Id for parameter.

ProfileArea

A ProfileArea element defines settings for a profile area tool and one or more of its measurements.

ProfileArea Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>ProfileArea</i> above.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
Type	Boolean	Area to measure:

Element	Type	Description
		0 – Object (convex shape above the baseline) 1 – Clearance (concave shape below the baseline)
Type.used	Boolean	Whether or not field is used.
Baseline	Boolean	Baseline type: 0 – X-axis 1 – Line
Baseline.used	Boolean	Whether or not field is used.
RegionEnabled	Boolean	If enabled, the defined region is used for measurements. Otherwise, the full active area is used.
Region	ProfileRegion2d	Measurement region.
Line	ProfileLine	Line definition when Baseline is set to Line.
Measurements\Area	Area tool measurement	Area measurement.
Measurements\CentroidX	Area tool measurement	CentroidX measurement.
Measurements\CentroidZ	Area tool measurement	CentroidZ measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature.

Area Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

ProfileBoundingBox

A ProfileBoundingBox element defines settings for a profile bounding box tool and one or more of its measurements.

ProfileBoundingBox Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>ProfileBoundingBox</i> above.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RegionEnabled	Bool	Whether or not to use the region. If the region is disabled, all available data is used.
Region	ProfileRegion2d	Measurement region.
Measurements\X	Bounding Box tool measurement	X measurement.
Measurements\Z	Bounding Box tool measurement	Z measurement.
Measurements\Width	Bounding Box tool measurement	Width measurement.
Measurements\Height	Bounding Box tool measurement	Height measurement.
Measurements\GlobalX	Bounding Box tool measurement	GlobalX measurement
Measurements\GlobalY	Bounding Box tool measurement	GlobalY measurement
Measurements\GlobalAngle	Bounding Box tool measurement	GlobalAngle measurement
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature.
Features\CornerPoint	GeometricFeature	CornerPoint PointFeature.

Bounding Box Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

ProfileBridgeValue

A ProfileBridgeValue element defines settings for a profile bridge value tool and one or more of its measurements.



This measurement is only available on Gocator 2342 sensors.

ProfileBridgeValue Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are:

Element	Type	Description
		1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RegionEnabled	Boolean	Whether or not to use region. If region is disabled, all available data is used.
Region	ProfileRegion2d	Measurement region.
WindowSize	64f	A percentage of the profile point heights when ordered from lowest to highest in a histogram, starting from the highest points, to include in the bridge value calculation.
WindowSkip	64f	A percentage of the profile point heights when ordered from lowest to highest in a histogram, starting from the highest points, to exclude from the bridge value calculation. Combines with WindowSize to determine what portion of the profile points are used in the bridge value calculation.
MaxInvalid	64f	The maximum percentage of invalid points.
NormalizeEnabled	Boolean	Whether tilt normalization is enabled.
MaxDifferential	64f	Maximum differential between the lowest and highest profile points (mm).
MaxDifferential.min	64f	Maximum differential limit min (mm).
MaxDifferential.max	64f	Maximum differential limit max (mm).
Measurements\BridgeValue	Bridge Value tool measurement	Bridge Value measurement.
Measurements\Angle	Bridge Value tool measurement	Angle measurement.

BridgeValue Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state:

Element	Type	Description
		0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

ProfileCircle

A ProfileCircle element defines settings for a profile circle tool and one or more of its measurements.

ProfileCircle Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>ProfileCircle</i> above.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RegionEnabled	Bool	Whether or not to use the region. If the region is disabled, all available data is used.
Region	ProfileRegion2d	Measurement region.
Measurements\X	Circle tool measurement	X measurement.

Element	Type	Description
Measurements\Z	Circle tool measurement	Z measurement.
Measurements\Radius	Circle tool measurement	Radius measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature.

Circle Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

ProfileDimension

A ProfileDimension element defines settings for a profile dimension tool and one or more of its measurements.

ProfileDimension Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.

Element	Type	Description
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RefFeature	ProfileFeature	Reference measurement region.
Feature	ProfileFeature	Measurement region.
Measurements\Width	Dimension tool measurement	Width measurement.
Measurements\Height	Dimension tool measurement	Height measurement.
Measurements\Distance	Dimension tool measurement	Distance measurement.
Measurements\CenterX	Dimension tool measurement	CenterX measurement.
Measurements\CenterZ	Dimension tool measurement	CenterZ measurement.

Dimension Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable

Element	Type	Description
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Absolute (Width and Height measurements only)	Boolean	Setting for selecting absolute or signed result: 0 – Signed 1 – Absolute

ProfileGroove

A ProfileGroove element defines settings for a profile groove tool and one or more of its measurements.

The profile groove tool is dynamic, meaning that it can contain multiple measurements of the same type in the Measurements element.

ProfileGroove Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
Shape	32s	Shape: 0 – U-shape 1 – V-shape 2 – Open
MinDepth	64f	Minimum depth.
MinWidth	64f	Minimum width.
MaxWidth	64f	Maximum width.
RegionEnabled	Bool	Whether or not to use the region. If the region is

Element	Type	Description
		disabled, all available data is used.
Region	ProfileRegion2d	Measurement region.
Measurements\X	Groove tool measurement	X measurement.
Measurements\Z	Groove tool measurement	Z measurement.
Measurements\Width	Groove tool measurement	Width measurement.
Measurements\Depth	Groove tool measurement	Depth measurement.

Groove Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
SelectType	32s	Method of selecting a groove when multiple grooves are found: 0 – Max depth 1 – Ordinal, from left 2 – Ordinal, from right

Element	Type	Description
SelectIndex	32s	Index when SelectType is set to 1 or 2.
Location (X and Z measurements only)	32s	Setting for groove location to return from: 0 – Bottom 1 – Left corner 2 – Right corner

ProfileIntersect

A ProfileIntersect element defines settings for a profile intersect tool and one or more of its measurements.

ProfileIntersect Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>ProfileIntersect</i> above.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
RefType	32s	Reference line type: 0 – Fit 1 – X Axis
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RefLine	ProfileLine	Definition of reference line. Ignored if RefType is not 0.
Line	ProfileLine	Definition of line.
Measurements\X	Intersect tool measurement	X measurement.
Measurements\Z	Intersect tool measurement	Z measurement.
Measurements\Angle	Intersect tool measurement	Angle measurement.

Element	Type	Description
Features\IntersectPoint	GeometricFeature	IntersectPoint PointFeature.
Features\Line	GeometricFeature	Line LineFeature.
Features\BaseLine	GeometricFeature	BaseLine LineFeature.

Intersect Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Absolute (<i>Angle measurement only</i>)	Boolean	Setting for selecting the angle range: 0 – A range of -90 to 90 degrees is used. 1 – A range of 0 to 180 degrees is used.

ProfileLine

A ProfileLine element defines settings for a profile line tool and one or more of its measurements.

ProfileLine Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>ProfileLine</i> above.

Element	Type	Description
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RegionEnabled	Bool	Whether or not to use the region. If the region is disabled, all available data is used.
Region	ProfileRegion2d	Measurement region.
FittingRegions	ProfileLine	ProfileLine describing regions to fit to.
FittingRegionsEnabled	Bool	Whether the fitting regions are enabled.
Measurements\StdDev	Line tool measurement	StdDev measurement.
Measurements\MaxError	Line tool measurement	MaxError measurement.
Measurements\MinError	Line tool measurement	MinError measurement.
Measurements\Percentile	Line tool measurement	Percentile measurement.
Measurements\Offset	Line tool measurement	Offset measurement.
Measurements\Angle	Line tool measurement	Angle measurement.
Measurements\MinErrorX	Line tool measurement	Minimum Error in X measurement.
Measurements\MinErrorZ	Line tool measurement	Minimum Error in Z measurement.
Measurements\MaxErrorX	Line tool measurement	Maximum Error in X measurement.
Measurements\MaxErrorZ	Line tool measurement	Maximum Error in Z measurement.
Features\Line	GeometricFeature	Line LineFeature.
Features>ErrorMinPoint	GeometricFeature	ErrorMinPoint PointFeature.
Features>ErrorMaxPoint	GeometricFeature	ErrorMaxPoint PointFeature.

Line Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable

Element	Type	Description
		1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Percent	64f	Error percentile. <i>(Percentile measurement only)</i>

ProfilePanel

A ProfilePanel element defines settings for a profile panel tool and one or more of its measurements.

ProfilePanel Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.

Element	Type	Description
RefSide	32s	Setting for reference side to use.
MaxGapWidth	64f	Setting for maximum gap width (mm).
LeftEdge	ProfilePanelEdge	Element for left edge configuration.
RightEdge	ProfilePanelEdge	Element for right edge configuration.
Measurements\Gap	Gap/Flush measurement	Gap measurement.
Measurements\Flush	Gap/Flush measurement	Flush measurement.
Measurements\LeftGapX	Gap/Flush measurement	Left Gap X measurement.
Measurements\LeftGapZ	Gap/Flush measurement	Left Gap Z measurement.
Measurements\LeftFlushX	Gap/Flush measurement	Left Flush X measurement.
Measurements\LeftFlushZ	Gap/Flush measurement	Left Flush Z measurement.
Measurements\LeftSurfaceAngle	Gap/Flush measurement	Left Surface Angle measurement.
Measurements\RightGapX	Gap/Flush measurement	Right Gap X measurement.
Measurements\RightGapZ	Gap/Flush measurement	Right Gap Z measurement.
Measurements\RightFlushX	Gap/Flush measurement	Right Flush X measurement.
Measurements\RightFlushZ	Gap/Flush measurement	Right Flush Z measurement.
Measurements\RightSurfaceAngle	Gap/Flush measurement	Right Surface Angle measurement.

ProfilePanelEdge

Element	Type	Description
EdgeType	32s	Edge type: 0 – Tangent 1 – Corner
MinDepth	64f	Minimum depth.
MaxVoidWidth	64f	Maximum void width.
SurfaceWidth	64f	Surface width.
SurfaceOffset	64f	Surface offset.
NominalRadius	64f	Nominal radius.

Element	Type	Description
EdgeAngle	64f	Edge angle.
RegionEnabled	Bool	Whether or not to use the region. If the region is disabled, all available data is used.
Region	ProfileRegion2d	Edge region.

Gap/Flush Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Axis <i>(Gap measurement only)</i>	32s	Measurement axis: 0 – Edge 1 – Surface 2 – Distance
Absolute <i>(Flush measurement only)</i>	Boolean	Setting for selecting absolute or signed result: 0 – Signed 1 – Absolute

ProfilePosition

A ProfilePosition element defines settings for a profile position tool and one or more of its measurements.

ProfilePosition Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>ProfilePosition</i> on the previous page.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
Feature	ProfileFeature	Element for feature detection.
Measurements\X	Position tool measurement	X measurement.
Measurements\Z	Position tool measurement	Z measurement.
Features\Point	GeometricFeature FeatureTypes.htm	Point PointFeature

Position Tool Measurement

Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable

Element	Type	Description
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

ProfileStrip

A ProfileStrip element defines settings for a profile strip tool and one or more of its measurements.

The profile strip tool is dynamic, meaning that it can contain multiple measurements of the same type in the Measurements element.

ProfileStrip Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Profile source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
BaseType	32s	Setting for the strip type: 0 – None 1 – Flat
LeftEdge	Bitmask	Setting for the left edge conditions: 1 – Raising 2 – Falling 4 – Data End 8 – Void

Element	Type	Description
RightEdge	Bitmask	Setting for the right edge conditions: 1 - Raising 2 - Falling 4 - Data End 8 - Void
TiltEnabled	Boolean	Setting for tilt compensation: 0 - Disabled 1 - Enabled
SupportWidth	64f	Support width of edge (mm).
TransitionWidth	64f	Transition width of edge (mm).
MinWidth	64f	Minimum strip width (mm).
MinHeight	64f	Minimum strip height (mm).
MaxVoidWidth	64f	Void max (mm).
Region	ProfileRegion2d	Region containing the strip.
Measurements\X	Strip tool measurement	X measurement.
Measurements\Z	Strip tool measurement	Z measurement.
Measurements\Width	Strip tool measurement	Width measurement.
Measurements\Height	Strip tool measurement	Width measurement.

Strip Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 - Disable 1 - Enable
HoldEnabled	Boolean	Output hold enable state: 0 - Disable 1 - Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 - Disable 1 - Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 - Disable 1 - Enable
SmoothingWindow	32u	Smoothing window.

Element	Type	Description
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
SelectType	32s	Method of selecting a groove when multiple grooves are found: 0 – Best 1 – Ordinal, from left 2 – Ordinal, from right
SelectIndex	32s	Index when SelectType is set to 1 or 2.
Location (X, Z, and Height measurements only)	32s	Setting for groove location to return from: 0 – Left 1 – Right 2 – Center

Script

A Script element defines settings for a script measurement.

Script Child Elements

Element	Type	Description
Name	String	Tool name.
Code	String	Script code.
Measurements\Output	(Collection)	Dynamic list of Output elements.

Output

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.

SurfaceBoundingBox

A SurfaceBoundingBox element defines settings for a surface bounding box tool and one or more of its measurements.

SurfaceBoundingBox Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>SurfaceBoundingBox</i> above.
Source	32s	Surface source.

Element	Type	Description
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
ZRotationEnabled	Boolean	Setting to enable/disable rotation of bounding box
AsymmetryDetectionType	32s	Determine whether to use asymmetry detection and if enabled, which dimension would be the basis of detection. The possible values are: 0 – None 1 – Length 2 – Width
RegionEnabled	Boolean	Setting to enable/disable region.
Region	Region3D	Measurement region.
Measurements\X	Bounding Box tool measurement	X measurement.
Measurements\Y	Bounding Box tool measurement	Y measurement.
Measurements\Z	Bounding Box tool measurement	Z measurement.
Measurements\Width	Bounding Box tool measurement	Width measurement.
Measurements\Length	BoundingBoxMeasurement	Length measurement
Measurements\Height	Bounding Box tool measurement	Height measurement.
Measurements\ZAngle	Bounding Box tool measurement	ZAngle measurement.
Measurements\GlobalX	Bounding Box tool	Global X measurement.

Element	Type	Description
	measurement	
Measurements\GlobalY	Bounding Box tool measurement	Global Y measurement.
Measurements\GlobalZAngle	Bounding Box tool measurement	Global Z Angle measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature

Bounding Box Tool Measurement

Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfaceCsHole

A SurfaceCsHole element defines settings for a surface countersunk hole tool and one or more of its measurements.

SurfaceCsHole Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>SurfaceCsHole</i> above.

Element	Type	Description
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
NominalBevelAngle	64f	Nominal bevel angle (mm).
NominalOuterRadius	64f	Nominal outer radius (mm).
NominalInnerRadius	64f	Nominal inner radius (mm).
BevelRadiusOffset	64f	Bevel radius offset (mm).
Shape	32s	The shape of the countersunk hole: 0 – Cone 1 – Counterbore
PartialDetectionEnabled	Boolean	Setting to enable/disable partial detection: 0 – Disable 1 – Enable
RegionEnabled	Boolean	Setting to enable/disable region: 0 – Disable 1 – Enable
Region	Region3D	Measurement region.
RefRegionsEnabled	Boolean	Setting to enable/disable reference regions: 0 – Disable 1 – Enable
RefRegionCount	32s	Count of the reference regions which are to be used
RefRegions	(Collection)	Reference regions. Contains 2 SurfaceRegion2D elements.

Element	Type	Description
AutoTiltEnabled	Boolean	Setting to enable/disable tilt correction: 0 – Disable 1 – Enable
TiltXAngle	64f	Setting for manual tilt correction angle X.
TiltYAngle	64f	Setting for manual tilt correction angle Y.
CurveFitEnabled	Boolean	Setting to enable/disable curve fitting: 0 – Disable 1 – Enable
CurveOrientation	64f	The orientation of the curvature, in degrees.
PlaneFitRangeEnabled	Boolean	Setting to enable/disable the use of the plane fit range
PlaneFitRange	64f	Setting for the tolerance to use when doing the plane fit
Measurements\X	Countersunk Hole tool measurement	X measurement.
Measurements\Y	Countersunk Hole tool measurement	Y measurement.
Measurements\Z	Countersunk Hole tool measurement	Z measurement.
Measurements\OuterRadius	Countersunk Hole tool measurement	Outer Radius measurement.
Measurements\Depth	Countersunk Hole tool measurement	Depth measurement.
Measurements\BevelRadius	Countersunk Hole tool measurement	Bevel Radius measurement.
Measurements\BevelAngle	Countersunk Hole tool measurement	Bevel Angle measurement.
Measurements\XAngle	Countersunk Hole tool measurement	X Angle measurement.
Measurements\YAngle	Countersunk Hole tool measurement	Y Angle measurement.
Measurements\CounterboreDepth	Countersunk Hole tool measurement	CounterboreDepth measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature

Countersunk Hole Tool Measurement

Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Features	Collection	Collection of geometric feature outputs available in the

Element	Type	Description
		tool. See <i>SurfaceCsHole</i> on page 196.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfaceDimension

A *SurfaceDimension* element defines settings for a surface dimension tool and one or more of its measurements.

SurfaceDimension Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are:

Element	Type	Description
		1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
Measurements\CenterX	Dimension tool measurement	Center X measurement
Measurements\CenterY	Dimension tool measurement	Center Y measurement
Measurements\CenterZ	Dimension tool measurement	Center Z measurement
Measurements\Distance	Dimension tool measurement	Distance measurement
Measurements\PlaneDistance	Dimension tool measurement	Plane Distance measurement
Measurements\Height	Dimension tool measurement	Height measurement
Measurements\Length	Dimension tool measurement	Length measurement
Measurements\Width	Dimension tool measurement	Width measurement

Dimension Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable

Element	Type	Description
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Absolute (Height, Length, and Width measurements only)	Boolean	Setting for selecting absolute or signed result. 0 – Signed 1 – Absolute

SurfaceEllipse

A SurfaceEllipse element defines settings for a surface ellipse tool and one or more of its measurements.

SurfaceEllipse Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>SurfaceEllipse</i> above.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RegionEnabled	Boolean	Setting to enable/disable region.
Region	Region3D	Measurement region.
AsymmetryDetectionType	32s	Determine whether to use asymmetry detection and if enabled, which dimension would be the basis of detection. The possible values are:

Element	Type	Description
		0 – None 1 – Major 2 – Minor
Measurements\Major	Ellipse tool measurement	Major measurement.
Measurements\Minor	Ellipse tool measurement	Minor measurement.
Measurements\Ratio	Ellipse tool measurement	Ratio measurement.
Measurements\ZAngle	Ellipse tool measurement	ZAngle measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature
Features\MajorAxisLine	GeometricFeature	MajorAxisLine LineFeature
Features\MinroAxisLine	GeometricFeature	MinorAxisLine LineFeature

Ellipse Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfaceHole

A SurfaceHole element defines settings for a surface hole tool and one or more of its measurements.

SurfaceHole Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>SurfaceHole</i> on the previous page.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
NominalRadius	64f	Nominal radius (mm).
RadiusTolerance	64f	Radius tolerance (mm).
PartialDetectionEnabled	Boolean	Setting to enable/disable partial detection: 0 – Disable 1 – Enable
DepthLimitEnabled	Boolean	Setting to enable/disable depth limit: 0 – Disable 1 – Enable
DepthLimit	64f	The depth limit relative to the surface. Data below this limit is ignored.
RegionEnabled	Boolean	Setting to enable/disable region: 0 – Disable 1 – Enable
Region	Region3D	Measurement region.
RefRegionsEnabled	Boolean	Setting to enable/disable reference regions: 0 – Disable

Element	Type	Description
		1 – Enable
RefRegionCount	32s	Count of the reference regions that are to be used.
RefRegions	(Collection)	Reference regions. Contains two RefRegion elements of type SurfaceRegion2D .
AutoTiltEnabled	Boolean	Setting to enable/disable tilt correction: 0 – Disable 1 – Enable
TiltXAngle	64f	Setting for manual tilt correction angle X.
TiltYAngle	64f	Setting for manual tilt correction angle Y.
Measurements\X	Hole tool measurement	X measurement.
Measurements\Y	Hole tool measurement	Y measurement.
Measurements\Z	Hole tool measurement	Z measurement.
Measurements\Radius	Hole tool measurement	Radius measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature

Hole Tool Measurement

Element	Type	Description
@id	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfaceOpening

A SurfaceOpening element defines settings for a surface opening tool and one or more of its measurements.

SurfaceOpening Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>SurfaceOpening</i> above.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
Type	32s	Type of the opening: 0 – Rounded 1 – Slot
NominalWidth	64f	Nominal width (mm).
NominalLength	64f	Nominal length (mm).
NominalAngle	64f	Nominal angle (degrees).
NominalRadius	64f	Nominal radius (mm).
WidthTolerance	64f	Radius tolerance (mm).
LengthTolerance	64f	Length tolerance (mm).
AngleTolerance	64f	Angle tolerance (degrees).
PartialDetectionEnabled	Boolean	Setting to enable/disable partial detection: 0 – Disable 1 – Enable
DepthLimitEnabled	Boolean	Setting to enable/disable depth limit:

Element	Type	Description
		0 – Disable 1 – Enable
DepthLimit	64f	The depth limit relative to the surface. Data below this limit is ignored.
RegionEnabled	Boolean	Setting to enable/disable region: 0 – Disable 1 – Enable
Region	Region3D	Measurement region.
RefRegionsEnabled	Boolean	Setting to enable/disable reference regions: 0 – Disable 1 – Enable
RefRegionCount	32s	Count of the reference regions that are to be used.
RefRegions	(Collection)	Reference regions. Contains two RefRegion elements of type SurfaceRegion2D .
AutoTiltEnabled	Boolean	Setting to enable/disable tilt correction: 0 – Disable 1 – Enable
TiltXAngle	64f	Setting for manual tilt correction angle X.
TiltYAngle	64f	Setting for manual tilt correction angle Y.
Measurements\X	Opening tool measurement	X measurement.
Measurements\Y	Opening tool measurement	Y measurement.
Measurements\Z	Opening tool measurement	Z measurement.
Measurements\Width	Opening tool measurement	Width measurement.
Measurements\Length	Opening tool measurement	Length measurement.
Measurements\Angle	Opening tool measurement	Angle measurement.
Features\CenterPoint	GeometricFeature	CenterPoint PointFeature
<i>Opening Tool Measurement</i>		
Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state:

Element	Type	Description
		0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfacePlane

A SurfacePlane element defines settings for a surface plane tool and one or more of its measurements.

SurfacePlane Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface

Element	Type	Description
		4 - Section
Stream\ld	32u	The stream source ID.
RegionsEnabled	Boolean	Setting to enable/disable regions: 0 - Disable 1 - Enable
RegionCount	32s	Count of the regions.
Regions	(Collection)	Measurement regions. Contains one or two Region elements of type Region3D .
Measurements\XAngle	Plane tool measurement	XAngle measurement.
Measurements\YAngle	Plane tool measurement	YAngle measurement.
Measurements\ZOffset	Plane tool measurement	ZOffset measurement.
Measurements\StdDev	Plane tool measurement	Standard deviation measurement
Measurements\MinError	Plane tool measurement	Minimum error measurement
Measurements\MaxError	Plane tool measurement	Maximum error measurement

Plane Tool Measurement

Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 - Disable 1 - Enable
HoldEnabled	Boolean	Output hold enable state: 0 - Disable 1 - Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 - Disable 1 - Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 - Disable 1 - Enable
SmoothingWindow	32u	Smoothing window.

Element	Type	Description
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfacePosition

A SurfacePosition element defines settings for a surface position tool and one or more of its measurements.

SurfacePosition Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>SurfacePosition</i> above.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 - Video 2 - Range 3 - Surface 4 - Section
Stream\ld	32u	The stream source ID.
Feature	SurfaceFeature	Measurement feature.
Measurements\X	Position tool measurement	X measurement.
Measurements\Y	Position tool measurement	Y measurement.
Measurements\Z	Position tool measurement	Z measurement.
Features\Point	GeometricFeature	Point PointFeature

Position Tool Measurement

Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.

SurfaceStud

A SurfaceStud element defines settings for a surface stud tool and one or more of its measurements.

SurfaceStud Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Collection of geometric feature outputs available in the tool. See <i>Feature Child Elements</i> on page 212.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.

Element	Type	Description
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 - Video 2 - Range 3 - Surface 4 - Section
Stream\ld	32u	The stream source ID.
StudRadius	64f	Radius of stud (mm).
StudHeight	64f	Height of stud (mm).
BaseHeight	64f	Height of stud's base.
TipHeight	64f	Height of stud's tip.
RegionEnabled	Boolean	Setting to enable/disable region.
Region	Region3D	Measurement region.
RefRegionsEnabled	Boolean	Setting to enable/disable reference regions: 0 - Disable 1 - Enable
RefRegionCount	32s	Count of the reference regions that are to be used.
RefRegions	(Collection)	Reference regions. Contains two RefRegion elements of type SurfaceRegion2D .
AutoTiltEnabled	Boolean	Setting to enable/disable tilt correction: 0 - Disable 1 - Enable
TiltXAngle	64f	Setting for manual tilt correction angle X.
TiltYAngle	64f	Setting for manual tilt correction angle Y.
Measurements\BaseX	Stud tool measurement	BaseX measurement.
Measurements\BaseY	Stud tool measurement	BaseY measurement.
Measurements\BaseZ	Stud tool measurement	BaseZ measurement.
Measurements\TipX	Stud tool measurement	TipX measurement.
Measurements\TipY	Stud tool measurement	TipY measurement.
Measurements\TipZ	Stud tool measurement	TipZ measurement.
Measurements\Radius	Stud tool measurement	Radius measurement.
Features\TipPoint	GeometricFeature	TipPoint PointFeature
Features\BasePoint	GeometricFeature	BasePoint PointFeature
<i>Stud Tool Measurement</i>		
Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).

Element	Type	Description
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
RadiusOffset	64f	Radius offset of the stud. <i>(Radius measurement only)</i>

Feature Child Elements

Element	Type	Description
@id	32s	The identifier of the geometric feature. -1 if unassigned.
@dataType	String	The data type of the feature. One of: – PointFeature – LineFeature
Name	String	The display name of the feature.
Enabled	Bool	Whether the given feature output is enabled.

SurfaceVolume

A SurfaceVolume element defines settings for a surface volume tool and one or more of its measurements.

SurfaceVolume Child Elements

Element	Type	Description
Name	String	Tool name.
Features	Collection	Not used.

Element	Type	Description
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Anchor\ZAngle	String (CSV)	The Z Angle measurements (IDs) used for anchoring.
Anchor\ZAngle.options	String (CSV)	The Z measurements (IDs) available for anchoring.
StreamOptions	Collection	A collection of <i>StreamOptions</i> on page 171 elements.
Stream\Step	32s	The stream source step. Possible values are: 1 – Video 2 – Range 3 – Surface 4 – Section
Stream\ld	32u	The stream source ID.
RegionEnabled	Boolean	Setting to enable/disable region.
Region	Region3D	Measurement region.
Measurements\Volume	Volume tool measurement	Volume measurement.
Measurements\Area	Volume tool measurement	Area measurement.
Measurements\Thickness	Volume tool measurement	Thickness measurement.

Volume Tool Measurement

Element	Type	Description
id (attribute)	32s	Measurement ID. Optional (measurement disabled if not set).
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable

Element	Type	Description
		1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Location (Thickness measurement only)	32s	Measurement type: 0 – Maximum 1 – Minimum 2 – 2D Centroid 3 – 3D Centroid 4 – Average 5 – Median

Tool

A Tool element of type FeatureDimension defines settings for a feature dimension tool and one or more of its measurements.

Tool Child Elements

Element	Type	Description
@type	String	Type name of the tool.
@version	String	Version string for custom tool.
Name	String	Tool name.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.

Element	Type	Description
Parameters\RefPoint	GdkParamGeometricFeature	Reference point feature.
Parameters\Feature	GdkParamGeometricFeature	Reference feature.
Parameters\PathWidth	GdkParamFloat	Path width.
Measurements\Measurement @type=Width	Dimension Measurement	Width measurement.
Measurements\Measurement @type=Length	Dimension Measurement	Length measurement.
Measurements\Measurement @type=Height	Dimension Measurement	Width measurement.
Measurements\Measurement @type=Distance	Dimension Measurement	Distance measurement.
Measurements\Measurement @type=PlaneDistance	Dimension Measurement	Plane distance measurement.
Measurements\Measurement @type=CenterX	Dimension Measurement	Center x measurement.
Measurements\Measurement @type=CenterY	Dimension Measurement	Center y measurement.
Measurements\Measurement @type=CenterZ	Dimension Measurement	Center z measurement.

Dimension Measurement Child Elements

@id	32s	Measurement ID. Optional (measurement disabled if not set).
@type	String	Type name of measurement.
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.

Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Parameters\WidthAbsolute (Width measurement only)	GdkParamBool	Absolute width enabled boolean.
Parameters\LengthAbsolute (Length measurement only)	GdkParamBool	Absolute length enabled boolean.
Parameters\HeightAbsolute (Height measurement only)	GdkParamBool	Absolute height enabled boolean.

Tool

A Tool element of type FeatureIntersect defines settings for a feature intersection tool and one or more of its measurements.

Tool Child Elements

Element	Type	Description
@type	String	Type name of the tool.
@version	String	Version string for custom tool.
Name	String	Tool name.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Parameters\Line	GdkParamGeometricFeature	Line feature input.
Parameters\RefLine	GdkParamGeometricFeature	Reference line feature input.
Measurements\Measurement @type=X	Intersect Measurement	X measurement.
Measurements\Measurement @type=Y	Intersect Measurement	Y measurement.
Measurements\Measurement @type=Z	Intersect Measurement	Z measurement.
Measurements\Measurement @type=Angle	Intersect Measurement	Angle measurement.

Intersect Measurement Child Elements

@id	32s	Measurement ID. Optional (measurement disabled if not set).
@type	String	Type name of measurement.
Name	String	Measurement name.
Enabled	Boolean	Measurement enable state: 0 – Disable 1 – Enable
HoldEnabled	Boolean	Output hold enable state: 0 – Disable 1 – Enable
SmoothingEnabled	Boolean	Smoothing enable state: 0 – Disable 1 – Enable
PreserveInvalidsEnabled	Boolean	Preserve invalid measurements enable state 0 – Disable 1 – Enable
SmoothingWindow	32u	Smoothing window.
Scale	64f	Output scaling factor.
Offset	64f	Output offset factor.
DecisionMin	64f	Minimum decision threshold.
DecisionMax	64f	Maximum decision threshold.
Parameters\AngleRange	GdkParamInt	Angle range option choice. Is one of: 0 – -180 To 180 1 – 0 To 360

Custom

A Custom element defines settings for a user-created GDK-based tool and one or more of its measurements.

Custom Child Elements

Element	Type	Description
@type	String	Type name of the tool.
@version	String	Version string for custom tool.
Name	String	Tool name.
Source	32s	Surface source.
Anchor\X	String (CSV)	The X measurements (IDs) used for anchoring.
Anchor\X.options	String (CSV)	The X measurements (IDs) available for anchoring.
Anchor\Y	String (CSV)	The Y measurements (IDs) used for anchoring.

Element	Type	Description
Anchor\Y.options	String (CSV)	The Y measurements (IDs) available for anchoring.
Anchor\Z	String (CSV)	The Z measurements (IDs) used for anchoring.
Anchor\Z.options	String (CSV)	The Z measurements (IDs) available for anchoring.
Parameters	GDK Parameter	Collection of parameters . The element name in the job file is the name of the parameter.
Measurements	GDK Measurement	Collection of measurements .
Features	GDK Feature	Collection of features .

Output

The Output element contains the following sub-elements: Ethernet, Serial, Analog, Digital0, and Digital1. Each of these sub-elements defines the output settings for a different type of Gocator output.

For all sub-elements, the source identifiers used for measurement outputs correspond to the measurement identifiers defined in each tool's Measurements element. For example, in the following XML, in the options attribute of the Measurements element, 2 and 3 are the identifiers of measurements that are enabled and available for output. The value of the Measurements element (that is, 2) means that only the measurement with id 2 (Profile Dimension Width) will be sent to output.

```
<ProfileDimension> ...
  <Measurements>
    <Width id="2"> ...
    <Height id="3"> ...

<Output>
  <Ethernet> ...
  <Measurements options="2,3">2</Measurements>
```

Ethernet

The Ethernet element defines settings for Ethernet output.

In the Ethernet element, the source identifiers used for video, range, profile, and surface output, as well as range, profile, and surface intensity outputs, correspond to the *sensor* that provides the data. For example, in the XML below, the *options* attribute of the Profiles element shows that only two sources are available (see the table below for the meanings of these values). The value in this element—0—indicates that only data from that source will be sent to output.

```
<Output>
  <Ethernet>
    ...
    <Ranges options=""/>
    <Profiles options="0,1">0</Profiles>
    <Surfaces options=""/>
    ...
```

Ethernet Child Elements

Element	Type	Description
Protocol	32s	Ethernet protocol: 0 – Gocator 1 – Modbus 2 – EtherNet/IP 3 – ASCII
TimeoutEnabled	Boolean	Enable or disable auto-disconnection timeout. Applies only to the Gocator protocol.
Timeout	64f	Disconnection timeout (seconds). Used when TimeoutEnabled is true and the Gocator protocol is selected.
Ascii	Section	See <i>Ascii</i> on the next page.
EIP	Section	See <i>EIP</i> on page 221.
Modbus	Section	See <i>Modbus</i> on page 221.
Videos	32s (CSV)	Selected video sources: 0 – Top 1 – Bottom 2 – Top left 3 – Top right
Videos.options	32s (CSV)	List of available video sources (see above).
Ranges	32s (CSV)	Selected range sources: 0 – Top 1 – Bottom 2 – Top left 3 – Top right
Ranges.options	32s (CSV)	List of available range sources (see above).
Profiles	32s (CSV)	Selected profile sources: 0 – Top 1 – Bottom 2 – Top left 3 – Top right
Profiles.options	32s (CSV)	List of available profile sources (see above).
Surfaces	32s (CSV)	Selected surface sources: 0 – Top 1 – Bottom 2 – Top left 3 – Top right

Element	Type	Description
Surfaces.options	32s (CSV)	List of available surface sources (see above).
Rangelntensities	32s (CSV)	Selected range intensity sources. 0 – Top 1 – Bottom 2 – Top left 3 – Top right
Rangelntensities.options	32s (CSV)	List of available range intensity sources (see above).
ProfileIntensities	32s (CSV)	Selected profile intensity sources. 0 – Top 1 – Bottom 2 – Top left 3 – Top right
ProfileIntensities.options	32s (CSV)	List of available profile intensity sources (see above).
SurfaceIntensities	32s (CSV)	Selected surface intensity sources: 0 – Top 1 – Bottom 2 – Top left 3 – Top right
SurfaceIntensities.options	32s (CSV)	List of available surface intensity sources (see above).
Measurements	32u (CSV)	Selected measurement sources.
Measurements.options	32u (CSV)	List of available measurement sources.
Events	32s (CSV)	CSV list of possible event options: 0 – Exposure Begins 1 – Exposure Ends
Events.options	32s (CSV)	List of available event options (see above).

Ascii

Ascii Child Elements

Element	Type	Description
Operation	32s	Operation mode: 0 – Asynchronous 1 – Polled
ControlPort	32u	Control service port number.
HealthPort	32u	Health service port number.
DataPort	32u	Data service port number.
Delimiter	String	Field delimiter.

Element	Type	Description
Terminator	String	Line terminator.
InvalidValue	String	String for invalid output.
CustomDataFormat	String	Custom data format.
CustomFormatEnabled	Bool	Enables custom data format.
StandardFormatMode	32u	The formatting mode used if not a custom format: 0 – Standard 1 – Standard with Stamp

EIP

EIP Child Elements

Element	Type	Description
BufferEnabled	Bool	Enables EtherNet/IP output buffering.
EndianOutputType	32s	Endian output type: 0 – Big endian 1 – Little endian
ImplicitOutputEnabled	Bool	Enables Implicit (I/O) Messaging.
ImplicitTriggerOverride	32s	Override requested trigger type by client: 0 – No override 1 – Cyclic 2 – Change of State

Modbus

Modbus Child Elements

Element	Type	Description
BufferEnabled	Bool	Enables Modbus output buffering.

Digital0 and Digital1

The Digital0 and Digital1 elements define settings for the Gocator's two digital outputs.

Digital0 and Digital1 Child Elements

Element	Type	Description
Event	32s	Triggering event: 0 – None (disabled) 1 – Measurements 2 – Software 3 – Alignment state 4 – Acquisition start 5 – Acquisition end

Element	Type	Description
SignalType	32s	Signal type: 0 – Pulse 1 – Continuous
ScheduleEnabled	Bool	Enables scheduling.
PulseWidth	64f	Pulse width (µs).
PulseWidth.min	64f	Minimum pulse width (µs).
PulseWidth.max	64f	Maximum pulse width (µs).
PassMode	32s	Measurement pass condition: 0 – AND of measurements is true 1 – AND of measurements is false 2 – Always assert
Delay	64f	Output delay (µs or mm, depending on delay domain defined below).
DelayDomain	32s	Output delay domain: 0 – Time (µs) 1 – Encoder (mm)
Inverted	Bool	Whether the sent bits are flipped.
Measurements	32u (CSV)	Selected measurement sources.
Measurements.options	32u (CSV)	List of available measurement sources.

Analog

The Analog element defines settings for analog output.

The range of valid measurement values [DataScaleMin, DataScaleMax] is scaled linearly to the specified current range [CurrentMin, CurrentMax].

Only one Value or Decision source can be selected at a time.

Analog Child Elements

Element	Type	Description
Event	32s	Triggering event: 0 – None (disabled) 1 – Measurements 2 – Software
ScheduleEnabled	Bool	Enables scheduling.
CurrentMin	64f	Minimum current (mA).
CurrentMin.min	64f	Minimum value of minimum current (mA).
CurrentMin.max	64f	Maximum value of minimum current (mA).
CurrentMax	64f	Maximum current (mA).
CurrentMax.min	64f	Minimum value of maximum current (mA).

Element	Type	Description
CurrentMax.max	64f	Maximum value of maximum current (mA).
CurrentInvalidEnabled	Bool	Enables special current value for invalid measurement value.
CurrentInvalid	64f	Current value for invalid measurement value (mA).
CurrentInvalid.min	64f	Minimum value for invalid current (mA).
CurrentInvalid.max	64f	Maximum value for invalid current (mA).
DataScaleMin	64f	Measurement value corresponding to minimum current.
DataScaleMax	64f	Measurement value corresponding to maximum current.
Delay	64f	Output delay (μ s or mm, depending on delay domain defined below).
DelayDomain	32s	Output delay domain: 0 – Time (μ s) 1 – Encoder (mm)
Measurement	32u	Selected measurement source.
Measurement.options	32u (CSV)	List of available measurement sources.



The delay specifies the time or position at which the analog output activates. Upon activation, there is an additional delay before the analog output settles at the correct value.

Serial

The Serial element defines settings for Serial output.

Serial Child Elements

Element	Type	Description
Protocol	32s	Serial protocol: 0 – ASCII 1 – Selcom
Protocol.options	32s (CSV)	List of available protocols.
Selcom	Section	See <i>Selcom</i> below.
Ascii	Section	See <i>Ascii</i> on the next page.
Measurements	32u (CSV)	Selected measurement sources.
Measurements.options	32u (CSV)	List of available measurement sources.

Selcom

Selcom Child Elements

Element	Type	Description
Rate	32u	Output bit rate.
Rate.options	32u (CSV)	List of available rates.
Format	32s	Output format: 0 – 12-bit 1 – 12-bit with search

Element	Type	Description
		2 – 14-bit 3 – 14-bit with search
Format.options	32s (CSV)	List of available formats.
DataScaleMin	64f	Measurement value corresponding to minimum word value.
DataScaleMax	64f	Measurement value corresponding to maximum word value.
Delay	64u	Output delay in μ s.

Ascii

Ascii Child Elements

Element	Type	Description
Delimiter	String	Field delimiter.
Terminator	String	Line terminator.
InvalidValue	String	String for invalid output.
CustomDataFormat	String	Custom data format.
CustomFormatEnabled	Bool	Enables custom data format.
StandardFormatMode	32u	The formatting mode used if not a custom format: 0 – Standard 1 – Standard with Stamp

Transform

The transformation component contains information about the physical system setup that is used to:

- Transform data from sensor coordinate system to another coordinate system (e.g., world)
- Define encoder resolution for encoder-based triggering
- Define the travel offset (Y offset) between sensors for staggered operation

You can access the Transform component of the active job as an XML file, either using path notation, via "_live.job/transform.xml", or directly via "_live.tfm".

You can access the Transform component in user-created job files in non-volatile storage, for example, "productionRun01.job/transform.xml". You can only access transformations in user-created job files using path notation.

See the following sections for the elements contained in this component.

Transformation Example:

```
<?xml version="1.0" encoding="UTF-8"?>
<Transform version="100">
  <EncoderResolution>1</EncoderResolution>
  <Speed>100</Speed>
  <Devices>
```

```

<Device role="0">
  <X>-2.3650924829</X>
  <Y>0.0</Y>
  <Z>123.4966803469</Z>
  <XAngle>5.7478302588</XAngle>
  <YAngle>3.7078302555</XAngle>
  <ZAngle>2.7078302556</XAngle>
</Device>
<Device id="1">
  <X>0</X>
  <Y>0.0</Y>
  <Z>123.4966803469</Z>
  <XAngle>5.7478302588</XAngle>
  <YAngle>3.7078302555</XAngle>
  <ZAngle>2.7078302556</XAngle>
</Device>
</Devices>
</Transform>

```

The Transform element contains the alignment record for both the Main and the Buddy sensor.

Transform Child Elements

Element	Type	Description
@version	32u	Major transform version (100).
@versionMinor	32u	Minor transform version (0).
EncoderResolution	64f	Encoder Resolution (mm/tick).
Speed	64f	Travel Speed (mm/s).
Devices	(Collection)	Contains two Device elements.

Device

A Device element defines the transformation for a sensor. There is one entry element per sensor, identified by a unique role attribute (0 for main and 1 for buddy):

Device Child Elements

Element	Type	Description
@role	32s	Role of device described by this section: 0 – Main 1 – Buddy
X	64f	Translation on the X axis (mm).
Y	64f	Translation on the Y axis (mm).
Z	64f	Translation on the Z axis (mm).
XAngle	64f	Rotation around the X axis (degrees).

Element	Type	Description
YAngle	64f	Rotation around the Y axis (degrees).
ZAngle	64f	Rotation around the Z axis (degrees).

The rotation (counter-clockwise in the X-Z plane) is performed before the translation.

Part Models

Part models represent models created using the part matching feature.

You can access a model in the active job using path notation. For example, to access a model called scan.mdl, use "_live.job/scan.mdl".

You can access part models in user-created job files in non-volatile storage, for example, "productionRun01.job/model1.mdl". You can only access part models in user-created job files using path notation.

See the following sections for the elements contained in a model.

Part models contain the following subcomponents. You can access the subcomponents using path notation, for example, "productionRun01.job/myModel.mdl/config.xml".

Part Model Child Elements

Element	Type	Description
Configuration	config.xml	Model configuration XML. It is always present. (See <i>Configuration</i> on the next page.)
Edge Points	edge-height-top	Edge points for the top heightmap. (See <i>Edge Points</i> below.)
Edge Points	edge-height-bottom	Edge points for the bottom heightmap.
Edge Points	edge-intensity-top	Edge points for the top intensity map.
Edge Points	edge-intensity-bottom	Edge points for the bottom intensity map.

The edge points file exists only when the model contains the source data for the edge points.

Edge Points

Edge Points Data

Field	Type	Offset	Description
id	16s	0	Sender ID -1 – Part matching
source	8s	2	Source 0 – Model 1 – Target

Field	Type	Offset	Description
imageType	8s	3	Image type 0 – Height map 1 – Intensity map
imageSource	8s	4	Image source 0 – Top 1 – Bottom
width	32u	5	Width of model space, in units of xScale
length	32u	9	Length of model space, un units of yScale
xScale	32u	13	X scale (nm)
yScale	32u	17	Y scale (nm)
xOffset	32s	21	X offset (μm)
yOffset	32s	25	Y offset μm
zAngle	32s	29	Z rotation (microdegrees)
pointCount	32u	33	Number of edge points
points[pointCount]	(32u, 32u)	37	Edge points collection. Each point is a tuple of x and y values, in units of xScale and yScale, respectively.

Configuration

Delete this text and replace it with your own content.

Configuration Child Elements

Element	Type	Description
@version	32u	Major version (1).
@versionMinor	32u	Minor version (0).
Edges	Collection	Collection of Edge items (described below).
EdgeSensitivity	64f	Sensitivity recorded during model edges generation (read-only).
TransformedDataRegion	Region3d	Data region of the model.
ZAngle	64f	Additional rotation applied to the model (degrees).
TargetEdgeSensitivity	64f	Sensitivity used to generate target edges.
ImageType	32s	Selects type of image used to generate edges: 0 – Height map 1 – Intensity map
ImageType.options	32s (CSV)	List of available image types.

Protocols

Gocator supports protocols for communicating with sensors over Ethernet (TCP/IP) and serial output. For a protocol to output data, it must be enabled and configured in the active job.

Protocols Available over Ethernet

- [Gocator](#)
- [Modbus](#)
- [EtherNet/IP](#)
- [ASCII](#)

Protocols Available over Serial

- [ASCII](#)
- [Selcom](#)

Gocator Protocol

This section describes the TCP and UDP commands and data formats used by a client computer to communicate with Gocator sensors using the Gocator protocol. It also describes the connection types (Discovery, Control, Upgrade, Data, and Health), and data types. The protocol enables the client to:

- Discover Main and Buddy sensors on an IP network and re-configure their network addresses.
- Configure Main and Buddy sensors.
- Send commands to run sensors, provide software triggers, read/write files, etc.
- Receive data, health, and diagnostic messages.
- Upgrade firmware.



The Gocator 4.x firmware uses mm, mm², mm³, and degrees as standard units. In all protocols, values are scaled by 1000, as values in the protocols are represented as integers. This results in effective units of mm/1000, mm²/1000, mm³/1000, and deg/1000 in the protocols.

To use the Gocator protocol, it must be enabled and configured in the active job.



Gocator sensors send UDP broadcasts over the network over the Internal Discovery channel (port 2016) at regular intervals during operation to perform peer discovery.

For information on configuring the protocol using the Web interface, see *Ethernet Output* on page 119.

For information on job file structures (for example, if you wish to create job files programmatically), see *Job Files* on page 147.

Data Types

The table below defines the data types and associated type identifiers used in this section.

All values except for IP addresses are transmitted in little endian format (least significant byte first) unless stated otherwise. The bytes in an IP address "a.b.c.d" will always be transmitted in the order a, b, c, d (big endian).

Data Types

Type	Description	Null Value
char	Character (8-bit, ASCII encoding)	-
byte	Byte.	-
8s	8-bit signed integer.	-128
8u	8-bit unsigned integer.	255U
16s	16-bit signed integer.	-32768 (0x8000)
16u	16-bit unsigned integer.	65535 (0xFFFF)
32s	32-bit signed integer.	-2147483648 (0x80000000)
32u	32-bit unsigned integer.	4294967295 (0xFFFFFFFF)
64s	64-bit signed integer.	-9223372036854775808 (0x8000000000000000)
64u	64-bit unsigned integer.	18446744073709551615 (0xFFFFFFFFFFFFFFFF)
64f	64-bit floating point	-1.7976931348623157e+308
Point16s	Two 16-bit signed integers	-
Point64f	Two 64-bit floating point values	-
Point3d64f	Three 64-bit floating point values	-
Rect64f	Four 64-bit floating point values	-
Rect3d64f	Eight 64-bit floating point values	-

Commands

The following sections describe the commands available on the Discovery (page 230), Control (page 233), and Upgrade (page 264) channels.

When a client sends a command over the Control or Upgrade channel, the sensor sends a reply whose identifier is the same as the command's identifier. The identifiers are listed in the tables of each of the commands.

Status Codes

Each reply on the Discovery, Control, and Upgrade channels contains a *status* field containing a status code indicating the result of the command. The following status codes are defined:

Status Codes

Label	Value	Description
OK	1	Command succeeded.
Failed	0	Command failed.

Label	Value	Description
Invalid State	-1000	Command is not valid in the current state.
Item Not Found	-999	A required item (e.g., file) was not found.
Invalid Command	-998	Command is not recognized.
Invalid Parameter	-997	One or more command parameters are incorrect.
Not Supported	-996	The operation is not supported.
Simulation Buffer Empty	-992	The simulation buffer is empty.

Discovery Commands

Sensors ship with the following default network configuration:

Setting	Default
DHCP	0 (disabled)
IP Address	192.168.1.10
Subnet Mask	255.255.255.0
Gateway	0.0.0.0 (disabled)

Use the [Get Address](#) and [Set Address](#) commands to modify a sensor's network configuration. These commands are UDP broadcast messages:

Destination Address	Destination Port
255.255.255.255	3220

When a sensor accepts a discovery command, it will send a UDP broadcast response:

Destination Address	Destination Port
255.255.255.255	Port of command sender.

The use of UDP broadcasts for discovery enables a client computer to locate a sensor when the sensor and client are configured for different subnets. All you need to know is the serial number of the sensor in order to locate it on an IP network.

Get Address

The Get Address command is used to discover Gocator sensors across subnets.

Command

Field	Type	Offset	Description
length	64s	0	Command length.
type	64s	8	Command type (0x1).
signature	64s	16	Message signature (0x0000504455494D4C)
deviceld	64s	24	Serial number of the device whose address information is queried. 0 selects all devices.

Reply

Field	Type	Offset	Description
length	64s	0	Reply length.
type	64s	8	Reply type (0x1001).
status	64s	16	Operation status.
signature	64s	24	Message signature (0x0000504455494D4C)
deviceld	64s	32	Serial number.
dhcpEnabled	64s	40	0 – Disabled 1 – Enabled
reserved[4]	byte	48	Reserved.
address[4]	byte	52	The IP address in left to right order.
reserved[4]	byte	56	Reserved.
subnetMask[4]	byte	60	The subnet mask in left to right order.
reserved[4]	byte	64	Reserved.
gateway[4]	byte	68	The gateway address in left to right order.
reserved[4]	byte	72	Reserved.
reserved[4]	byte	76	Reserved.

Set Address

The Set Address command modifies the network configuration of a Gocator sensor. On receiving the command, the Gocator will perform a reset. You should wait 30 seconds before re-connecting to the Gocator.

Command

Field	Type	Offset	Description
length	64s	0	Command length.
type	64s	8	Command type (0x2).
signature	64s	16	Message signature (0x0000504455494D4C)
deviceld	64s	24	Serial number of the device whose address information is queried. 0 selects all devices.
dhcpEnabled	64s	32	0 – Disabled 1 – Enabled
reserved[4]	byte	40	Reserved.
address[4]	byte	44	The IP address in left to right order.
reserved[4]	byte	48	Reserved.
subnetMask[4]	byte	52	The subnet mask in left to right order.
reserved[4]	byte	56	Reserved.
gateway[4]	byte	60	The gateway address in left to right order.
reserved[4]	byte	64	Reserved.
reserved[4]	byte	68	Reserved.

Reply

Field	Type	Offset	Description
length	64s	0	Reply length.
type	64s	8	Reply type (0x1002).
status	64s	16	Operation status. For a list of status codes, see <i>Commands</i> on page 229.
signature	64s	24	Message signature (0x0000504455494D4C).
deviceld	64s	32	Serial number.

Get Info

The Get Info command is used to retrieve sensor information.

Command

Field	Type	Offset	Description
length	64s	0	Command length.
type	64s	8	Command type (0x5).
signature	64s	16	Message signature (0x0000504455494D4C).
deviceld	64s	24	Serial number of the device whose address information is queried. 0 selects all devices.

Reply

Field	Type	Offset	Description
length	64s	0	Reply length.
type	64s	8	Reply type (0x1005).
status	64s	16	Operation status. For a list of status codes, see <i>Commands</i> on page 229.
signature	64s	24	Message signature (0x0000504455494D4C).
attrCount	16u	32	Byte count of the attributes (begins after this field and ends before propertyCount).
id	32u	34	Serial number.
version	32u	38	Version as a 4-byte integer (encoded in little-endian).
uptime	64u	42	Sensor uptime (microseconds).
ipNegotiation	byte	50	IP negotiation type: 0 – Static 1 – DHCP
addressVersion	byte	51	IP address version (always 4).
address[4]	byte	52	IP address.
reserved[12]	byte	56	Reserved.
prefixLength	32u	68	Subnet prefix length (in number of bits).
gatewayVersion	byte	72	Gateway address version (always 4).

Field	Type	Offset	Description
gatewayAddress[4]	byte	73	Gateway address.
reserved[12]	byte	77	Reserved.
controlPort	16u	89	Control channel port.
upgradePort	16u	91	Upgrade channel port.
healthPort	16u	93	Health channel port.
dataPort	16u	95	Data channel port.
webPort	16u	97	Web server port.
propertyCount	8u	99	Number of sensor ID properties.
properties[propertyCount]	Property	100	List of sensor ID properties.

Property

Field	Type	Description
nameLength	8u	Length of the name.
name[nameLength]	char	Name string.
valueLength	8u	Length of the value.
value[valueLength]	char	Value string.

Control Commands

A client sends control commands for most operations over the Control TCP channel (port 3190).

The Control channel and the Upgrade channel (port 3192) can be connected simultaneously. For more information on Upgrade commands, see *Upgrade Commands* on page 264.

States

A Gocator system can be in one of three states: Conflict, Ready, or Running. The client sends the [Start](#) and [Stop](#) control commands to change the system's current state to Running and Ready, respectively. The sensor can also be configured to boot in either the Ready or Running state, by enabling or disabling autostart, respectively, using the [Set Auto Start Enabled](#) command.

In the Ready state, a sensor can be configured. In the Running state, a sensor responds to input signals, performs measurements, drives its outputs, and sends data messages to the client.

The state of the sensor can be retrieved using the [Get States](#) or [Get System Info](#) command.

The Conflict state indicates that a sensor has been configured with a Buddy sensor but the Buddy sensor is not present on the network. The sensor will not accept some commands until the [Set Buddy](#) command is used to remove the configured Buddy.

Progressive Reply

Some commands send replies progressively, as multiple messages. This allows the sensor to stream data without buffering it first, and allows the client to obtain progress information on the stream.

A progressive reply begins with an initial, standard reply message. If the *status* field of the reply indicates success, the reply is followed by a series of "continue" reply messages.

A continue reply message contains a block of data of variable size, as well as status and progress information. The series of continue messages is ended by either an error, or a continue message containing 0 bytes of data.

Protocol Version

The Protocol Version command returns the protocol version of the connected sensor.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4511)

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4511).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
majorVersion	8u	10	Major version.
minorVersion	8u	11	Minor version.

Get Address

The Get Address command is used to get a sensor address.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x3012)

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x3012).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
dhcpEnabled	byte	10	0 – DHCP not used 1 – DHCP used
address[4]	byte	11	IP address (most significant byte first).
subnetMask[4]	byte	15	Subnet mask.
gateway[4]	byte	19	Gateway address.

Set Address

The Set Address command modifies the network configuration of a Gocator sensor. On receiving the command, the Gocator will perform a reset. You should wait 30 seconds before re-connecting to the Gocator.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x3013)
dhcpEnabled	byte	6	0 – DHCP not used 1 – DHCP used
address[4]	byte	7	IP address (most significant byte first).
subnetMask[4]	byte	11	Subnet mask.
gateway[4]	byte	15	Gateway address.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x3013).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get System Info

The Get System Info command reports information about the local node, remote nodes and assigned buddies.

Firmware version refers to the version of the Gocator's firmware installed on each individual sensor. The client can upgrade the Gocator's firmware by sending the Start Upgrade command (see *Start Upgrade* on page 264). Firmware upgrade files are available from the downloads section under the support tab on the LMI web site. For more information on getting the latest firmware, see *Firmware Upgrade* on page 52.

Every Gocator sensor contains factory backup firmware. If a firmware upgrade command fails (e.g., power is interrupted), the factory backup firmware will be loaded when the sensor is reset or power cycled. In this case, the sensors will fall back to the factory default IP address. To avoid IP address conflicts in a multi-sensor system, connect to one sensor at a time and re-attempt the firmware upgrade.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4010)

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4010).
localInfoSize	16u	10	Size of localInfo structure. Current: 52.
localInfo	Device Info	12	Info for this device.
remoteCount	32u	-	Number of discovered sensors.
remoteInfoSize	16u	-	Size of remoteInfo structure. Current 60.
remoteInfo[remoteCount]	Remote Info	-	List of info for discovered sensors.
buddyInfoCount	32u	-	Number of buddies assigned (can be 0).
buddyInfoSize	16u	-	Size of buddyInfo structure. Current: 8.
Buddies[buddyCount]	Buddy Info	-	List of info for the assigned buddies.

Sensor Info

Field	Type	Offset	Description
deviceId	32u	0	Serial number of the device.
address[4]	byte	4	IP address (most significant byte first).
modelName[32]	char	8	Model name.
firmwareVersion[4]	byte	40	Firmware version (most significant byte first).
state	32s	44	Sensor state -1 – Conflict 0 – Ready 1 – Running For more information on states, see <i>Control Commands</i> on page 233.
role	32s	48	Sensor role 0 – Main 1 – Buddy

Remote Info

Field	Type	Offset	Description
deviceId	32u	0	Serial number of the device.
address[4]	byte	4	IP address (most significant byte first).
modelName[32]	char	8	Model name.
firmwareVersion[4]	byte	40	Firmware version (most significant byte first).
state	32s	44	Sensor state -1 – Conflict 0 – Ready 1 – Running

Field	Type	Offset	Description
			For more information on states, see <i>Control Commands</i> on page 233.
role	32s	48	Sensor role 0 – Main 1 – Buddy
mainId	32u	52	Serial number of the main device, or zero.
buddyableStatus	32s	56	Whether or not the device can be buddied: 1 – Can be buddied
			Errors: 0 – Unbuddiable (General Error) -100 – Already buddied -99 – Invalid State (e.g. running) -98 – Version Mismatch -97 – Model Mismatch

Buddy Info

Field	Type	Offset	Description
deviceId	32u	2	Serial number of the device.
state	k32s	6	Buddy state 2 - Connecting 1 – Connected
			Errors: 0 – Unbuddiable (General Error) -100 – Already buddied -99 – Invalid State (e.g. running) -98 – Version Mismatch -97 – Model Mismatch -95 – Device Missing

Get System Info



This version of the Get System Info command is deprecated. Use [Get System Info \(v2\)](#) instead.

The Get System Info command reports information for sensors that are visible in the system.

Firmware version refers to the version of the Gocator's firmware installed on each individual sensor. The client can upgrade the Gocator's firmware by sending the Start Upgrade command (see *Start Upgrade* on page 264). Firmware upgrade files are available from the downloads section under the support tab on

the LMI web site. For more information on getting the latest firmware, see *Firmware Upgrade* on page 52.

Every Gocator sensor contains factory backup firmware. If a firmware upgrade command fails (e.g., power is interrupted), the factory backup firmware will be loaded when the sensor is reset or power cycled. In this case, the sensors will fall back to the factory default IP address. To avoid IP address conflicts in a multi-sensor system, connect to one sensor at a time and re-attempt the firmware upgrade.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4002)

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4002).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
localInfo	Sensor Info	10	Info for this device.
remoteCount	32u	66	Number of discovered sensors.
remoteInfo[remoteCount]	Sensor Info	70	List of info for discovered sensors.

Sensor Info

Field	Type	Offset	Description
deviceId	32u	0	Serial number of the device.
address[4]	byte	4	IP address (most significant byte first).
modelName[32]	char	8	Model name.
firmwareVersion[4]	byte	40	Firmware version (most significant byte first).
state	32s	44	Sensor state -1 – Conflict 0 – Ready 1 – Running For more information on states, see <i>Control Commands</i> on page 233.
role	32s	48	Sensor role 0 – Main 1 – Buddy
buddyId	32s	52	Serial number of paired device (main or buddy). 0 if unpaired.

Get States

The Get States command returns various system states.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4525)

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4525).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
count	32u	10	Number of state variables.
sensorState	32s	14	Sensor state -1 – Conflict 0 – Ready 1 – Running For more information on states, see <i>Control Commands</i> on page 233.
loginState	32s	18	Device login state 0 – No user 1 – Administrator 2 – Technician
alignmentReference	32s	22	Alignment reference 0 – Fixed 1 – Dynamic
alignmentState	32s	26	Alignment state 0 – Unaligned 1 – Aligned
recordingEnabled	32s	30	Whether or not recording is enabled 0 – Disabled 1 – Enabled
playbackSource	32s	34	Playback source 0 – Live data 1 – Recorded data
uptimeSec	32s	38	Uptime (whole seconds component)
uptimeMicrosec	32s	42	Uptime (remaining microseconds component)
playbackPos	32s	46	Playback position
playbackCount	32s	50	Playback frame count
autoStartEnabled	32s	54	Auto-start enable (boolean)

Log In/Out

The Log In/Out command is used to log in or out of a sensor.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4003).
userType	32s	6	Defines the user type 0 – None (log out) 1 – Administrator 2 – Technician
password[64]	char	10	Password (required for log-in only).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4003).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Change Password

The Change Password command is used to change log-in credentials for a user.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4004).
user type	32s	6	Defines the user type 0 – None (log out) 1 – Administrator 2 – Technician
password[64]	char	10	New password.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4004).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.



Passwords can only be changed if a user is logged in as an administrator.

Set Buddy

The Set Buddy command is used to assign or unassign a Buddy sensor.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4005).
buddyId	32u	6	Id of the sensor to acquire as buddy. Set to 0 to remove buddy.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4005).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

List Files

The List Files command returns a list of the files in the sensor's file system.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x101A).
extension[64]	char	6	Specifies the extension used to filter the list of files (does not include the "."). If an empty string is used, then no filtering is performed.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x101A).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
count	32u	10	Number of file names.
fileNames[count][64]	char	14	File names.

Copy File

The Copy File command copies a file from a source to a destination within the connected sensor (a .job file, a component of a job file, or another type of file; for more information, see *Job Files* on page 147).

To make a job active (to load it), copy a saved job to "_live.job".

To "save" the active job, copy from "_live.job" to another file.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x101B).
source[64]	char	6	Source file name.
destination[64]	char	70	Destination file name.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x101B).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Read File

Downloads a file from the connected sensor (a .job file, a component of a job file, or another type of file; for more information, see *Job Files* on page 147).

To download the live configuration, pass "_live.job" in the *name* field.

To read the configuration of the live configuration only, pass "_live.job/config.xml" in the *name* field.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x1007).
name[64]	char	6	Source file name.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x1007).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
length	32u	10	File length.
data[length]	byte	14	File contents.

Write File

The Write File command uploads a file to the connected sensor (a .job file, a component of a job file, or another type of file; for more information, see *Job Files* on page 147).

To make a job file live, write to "_live.job". Except for writing to the live file, the file is permanently stored on the sensor.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x1006).
name[64]	char	6	Source file name.
length	32u	70	File length.
data[length]	byte	74	File contents.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x1006).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Delete File

The Delete File command removes a file from the connected sensor (a .job file, a component of a job file, or another type of file; for more information, see *Job Files* on page 147).

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x1008).
name[64]	char	6	Source file name.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x1008).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Default Job

The Get Default Job command gets the name of the job the sensor loads when it powers up.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4100).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4100).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
name[64]	char	10	The file name (null-terminated) of the job the sensor loads when it powers up.

Set Default Job

The Set Default Job command sets the job the sensor loads when it powers up.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4101).
fileName[64]	char	6	File name (null-terminated) of the job the sensor loads when it powers up.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4101).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Loaded Job

The Get Loaded Job command returns the name and modified status of the currently loaded file.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4512).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4512).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
fileName[64]	char	10	Name of the currently loaded job.
changed	8u	74	Whether or not the currently loaded job has been changed (1: yes; 0: no).

Get Alignment Reference

The Get Alignment Reference command is used to get the sensor's alignment reference.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4104).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4104).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
reference	32s	10	Alignment reference 0 – Fixed 1 – Dynamic

Set Alignment Reference

The Set Alignment Reference command is used to set the sensor's alignment reference.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4103).
reference	32s	6	Alignment reference 0 – Fixed 1 – Dynamic

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4103).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Clear Alignment

The Clear Alignment command clears sensor alignment.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4102).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4102).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Timestamp

The Get Timestamp command retrieves the sensor's timestamp, in clock ticks. All devices in a system are synchronized with the system clock; this value can be used for diagnostic purposes, or used to synchronize the start time of the system.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x100A).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x100A).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
timestamp	64u	10	Timestamp, in clock ticks.

Get Encoder

This command retrieves the current system encoder value.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x101C).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x101C).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
encoder	64s	10	Current encoder position, in ticks.

Reset Encoder

The Reset Encoder command is used to reset the current encoder value.



The encoder value can be reset only when the encoder is connected directly to a sensor. When the encoder is connected to the master, the value cannot be reset via this command.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x101E).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x101E).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Start

The Start command starts the sensor system (system enters the Running state). For more information on states, see *Control Commands* on page 233.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x100D).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x100D).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Scheduled Start

The scheduled start command starts the sensor system (system enters the Running state) at target time or encoder value (depending on the trigger mode). For more information on states, see *Control Commands* on page 233.

Command

Field	Type	Offset	Description
length	32u	0	Command size – in bytes.
id	16u	4	Command identifier (0x100F).
target	64s	6	Target scheduled start value (in ticks or μ s, depending on the trigger type).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size – in bytes.
id	16u	4	Reply identifier (0x100F).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Stop

The Stop command stops the sensor system (system enters the Ready state). For more information on states, see *Control Commands* on page 233.

Command

Field	Type	Type	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x1001).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x1001).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Auto Start Enabled

The Get Auto Start Enabled command returns whether the system automatically starts after booting.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x452C).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x452C).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
enable	8u	10	0: disabled 1: enabled

Set Auto Start Enabled

The Set Auto Start Enabled command sets whether the system automatically starts after booting (enters Running state; for more information on states, see *Control Commands* on page 233).

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x452B).
enable	8u	6	0: disabled 1: enabled

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x452B).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Start Alignment

The Start Alignment command is used to start the alignment procedure on a sensor.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4600).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4600).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
opId	32u	10	Operation ID. Use this ID to correlate the command/reply on the Command channel with the correct Alignment Result message on the Data channel. A unique ID is returned each time the client uses this command.

Start Exposure Auto-set

The Start Exposure Auto-set command is used to start the exposure auto-set procedure on a sensor.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4601).
role	32s	6	Role of sensors to auto-set. 0 – Main 1 – Buddy

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4601).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
opId	32u	10	Operation ID. Use this ID to correlate the command/reply on the Command channel with the correct Exposure Calibration Result message on the Data channel. A unique ID is returned each time the client uses this command.

Software Trigger

The Software Trigger command causes the sensor to take a snapshot while in software mode and in the Running state.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4510).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4510).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Schedule Digital Output

The Schedule Digital Output command schedules a digital output event. The digital output must be configured to accept software-scheduled commands and be in the Running state. For more information on setting up digital output, see *Digital Output* on page 122.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4518).
index	16u	6	Index of the output (starts from 0).
target	64s	8	Specifies the time (clock ticks) when or position (μm) at which the digital output event should happen. The target value is ignored if ScheduleEnabled is set to false. (Scheduled is unchecked in Digital in the Output panel.) The output will be triggered immediately.

Field	Type	Offset	Description
value	8u	16	Specifies the target state: 0 – Set to low (continuous) 1 – Set to high (continuous) Ignored if output type is pulsed.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4518).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Schedule Analog Output

The Schedule Analog Output command schedules an analog output event. The analog output must be configured to accept software-scheduled commands and be in the Running state. For information on setting up the analog output, see *Analog Output* on page 125.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4519).
index	16u	6	Index of the output. Must be 0.
target	64s	8	Specifies the time (clock ticks) or position (encoder ticks) of when the event should happen. The target value is ignored if ScheduleEnabled is set to false. (Scheduled is unchecked in Analog in the Output panel.) The output will be triggered immediately.
value	32s	16	Output current (microamperes).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4519).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.



The analog output takes about 75 us to reach 90% of the target value for a maximum change, then roughly another 40 us to settle completely.

Ping


The Ping command can be used to test the control connection. This command has no effect on sensors.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x100E).
timeout	64u	6	Timeout value (microseconds).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x100E).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

 If a non-zero value is specified for timeout, the client must send another ping command before the timeout elapses; otherwise the server would close the connection. The timer is reset and updated with every command.

Reset

The Reset command reboots the Main sensor and any Buddy sensors. All sensors will automatically reset 3 seconds after the reply to this command is transmitted.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4300).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4300).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Backup

The Backup command creates a backup of all files stored on the connected sensor and downloads the backup to the client.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x1013).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x1013).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
length	32u	10	Data length.
data[length]	byte	14	Data content.

Restore

The Restore command uploads a backup file to the connected sensor and then restores all sensor files from the backup.



The sensor must be reset or power-cycled before the restore operation can be completed.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x1014).
length	32u	6	Data length.
data[length]	byte	10	Data content.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x1014).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Restore Factory

The Restore Factory command restores the connected sensor to factory default settings.



The command erases the non-volatile memory of the main device.

This command has no effect on connected Buddy sensors.

Note that the sensor must be reset or power-cycled before the factory restore operation can be completed.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.

Field	Type	Offset	Description
id	16u	4	Command identifier (0x4301).
resetip	8u	6	Specifies whether IP address should be restored to default: 0 – Do not reset IP 1 – Reset IP

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4301).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Recording Enabled

The Get Recording Enabled command retrieves whether recording is enabled.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4517).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4517).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
enable	8u	10	0: disabled; 1: enabled.

Set Recording Enabled

The Set Recording Enabled command enables recording for replay later.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4516).
enable	8u	6	0: disabled; 1: enabled.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4516).

Field	Type	Offset	Description
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Clear Replay Data

The Clear Replay Data command clears the sensors replay data..

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4513).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4513).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Playback Source

The Get Playback Source command gets the data source for data playback.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4524).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4524).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
source	32s	10	Source 0 – Live 1 – Replay buffer

Set Playback Source

The Set Playback Source command sets the data source for data playback.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4523).
source	32s	6	Source 0 – Live 1 – Replay buffer

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4523).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Simulate

The Simulate command simulates the last frame if playback source is live, or the current frame if playback source is the replay buffer.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4522).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4522).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
bufferValid	8u	10	Whether or not the buffer is valid.



A reply status of -996 means that the current configuration (mode, sensor type, etc.) does not support simulation.

A reply status of -992 means that the simulation buffer is empty. Note that the buffer can be valid even if the simulation buffer is actually empty due to optimization choices. This scenario means that the simulation buffer would be valid if data were recorded.

Seek Playback

The Seek Playback command seeks to any position in the current playback dataset. The frame is then sent.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4503).
frame	32u	6	Frame index.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4503).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Step Playback


The Step Playback command advances playback by one frame.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4501).
direction	32s	6	Define step direction 0 – Forward 1 – Reverse

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4501).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

 When the system is running in the Replay mode, this command advances replay data (playback) by one frame. This command returns an error if no live playback data set is loaded. You can use the [Copy File](#) command to load a replay data set to `_live.rec`.

Playback Position

The Playback Position command retrieves the current playback position.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4502).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4502).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
Frame Index	32u	10	Current frame index (starts from 0).
Frame Count	32u	14	Total number of available frames/objects.

Clear Measurement Stats

The Clear Measurement Stats command clears the sensor's measurement statistics.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4526).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4526).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Clear Log

The Clear Log command clears the sensor's log.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x101D).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x101D).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Simulate Unaligned

The Simulate Unaligned command simulates data before alignment transformation.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x452A).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x452A).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Acquire

The Acquire command acquires a new scan.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4528).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4528).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.



The command returns after the scan has been captured and transmitted.

Acquire Unaligned

The Acquire Unaligned command acquires a new scan without performing alignment transformation.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4527).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4527).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.



The command returns after the scan has been captured and transmitted.

Create Model

The Create Model command creates a new part model from the active simulation scan.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4602).
modelName[64]	char	6	Name of the new model (without .mdl extension)

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4602).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Detect Edges

The Detect Edges command detects and updates the edge points of a part model.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4604).
modelName[64]	char	6	Name of the model (without .mdl extension)
sensitivity	16u	70	Sensitivity (in thousandths).

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4604).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Add Tool

The Add Tool command adds a tool to the live job.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4530).

Field	Type	Offset	Description
typeName[64]	char	6	Type name of the tool (e.g., ProfilePosition)
name[64]	char	70	User-specified name for tool instance

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4530).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Add Measurement


The Add Measurement command adds a measurement to a tool instance.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4531).
toolIndex	32u	6	Index of the tool instance the new measurement is added to.
typeName[64]	char	10	Type name of the measurement (for example, X).
name[64]	char	74	User-specified name of the measurement instance.

Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4531).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

 This command can only be used with dynamic tools (tools with a dynamic list of measurements). The maximum number of instances for a given measurement type can be found in the [ToolOptions](#) node. For dynamic tools, the maximum count is greater than one, while for static tools it is one.

Read File (Progressive)

The progressive Read File command reads the content of a file as a stream.

This command returns an initial reply, followed by a series of "continue" replies if the initial reply's *status* field indicates success. The continue replies contain the actual data, and have 0x5000 as their identifier.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.

Field	Type	Offset	Description
id	16u	4	Command identifier (0x4529).
name[64]	char	6	Source file name.

Initial Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4529).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
progressTotal	32u	10	Progress indicating completion (100%).
progress	32u	14	Current progress.

Continue Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x5000).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
progressTotal	32u	10	Progress indicating completion (100%).
progress	32u	14	Current progress.
size	32u	18	Size of the chunk in bytes.
data[size]	byte	22	Chunk data.

Export CSV (Progressive)

The progressive Export CSV command exports replay data as a CSV stream.

This command returns an initial reply, followed by a series of "continue" replies if the initial reply's *status* field indicates success. The continue replies contain the actual data, and have 0x5000 as their identifier.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4507).

Initial Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4507).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Field	Type	Offset	Description
progressTotal	32u	10	Progress indicating completion (100%).
progress	32u	14	Current progress.

Continue Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x5000).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
progressTotal	32u	10	Progress indicating completion (100%).
progress	32u	14	Current progress.
size	32u	18	Size of the chunk in bytes.
data[size]	byte	22	Chunk data.



All recorded range or profile data is exported to the CSV stream. Only the current surface scan, as determined by the playback position, is exported to the CSV stream.

Export Bitmap (Progressive)

The progressive Export Bitmap command exports replay data as a bitmap stream.

This command returns an initial reply, followed by a series of "continue" replies if the initial reply's *status* field indicates success. The continue replies contain the actual data, and have 0x5000 as their identifier.

Command

Field	Type	Offset	Description
length	32u	0	Command size including this field, in bytes.
id	16u	4	Command identifier (0x4508).
type	32s	6	Data type: 0 – Range or video 1 – Intensity
source	32s	10	Data source to export.

Initial Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x4508).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
progressTotal	32u	10	Progress indicating completion (100%).
progress	32u	14	Current progress.

Continue Reply

Field	Type	Offset	Description
length	32u	0	Reply size including this field, in bytes.
id	16u	4	Reply identifier (0x5000).
status	32s	6	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
progressTotal	32u	10	Progress indicating completion (100%).
progress	32u	14	Current progress.
size	32u	18	Size of the chunk in bytes.
data[size]	byte	22	Chunk data.

Upgrade Commands

A client sends firmware upgrade commands over the Upgrade TCP channel (port 3192).

The Control channel (port 3190) and the Upgrade channel can be connected simultaneously. For more information on Control commands, see *Control Commands* on page 233.

After connecting to a Gocator sensor, you can use the [Protocol Version](#) command to retrieve the protocol version. Protocol version refers to the version of the Gocator Protocol supported by the *connected sensor* (the sensor to which a command connection is established), and consists of major and minor parts. The minor part is updated when backward-compatible additions are made to the Gocator Protocol. The major part is updated when breaking changes are made to the Gocator Protocol.

Start Upgrade

The Start Upgrade command begins a firmware upgrade for the sensors in a system. All sensors automatically reset 3 seconds after the upgrade process is complete.

Command

Field	Type	Offset	Description
length	64s	0	Command size including this field, in bytes.
id	64s	8	Command identifier (0x0000).
length	64s	16	Length of the upgrade package (bytes).
data[length]	byte	24	Upgrade package data.

Reply

Field	Type	Offset	Description
length	64s	0	Reply size including this field, in bytes.
id	64s	8	Reply identifier (0x0000).
status	64s	16	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Start Upgrade Extended

The Start Upgrade Extended command begins a firmware upgrade for the sensors in a system. All sensors automatically reset 3 seconds after the upgrade process is complete.

Command

Field	Type	Offset	Description
length	64s	0	Command size including this field, in bytes.
id	64s	8	Command identifier (0x0003).
skipValidation	64s	16	Whether or not to skip validation (0 – do not skip, 1 – skip).
length	64s	24	Length of the upgrade package (bytes).
data[length]	byte	32	Upgrade package data.

Reply

Field	Type	Offset	Description
length	64s	0	Reply size including this field, in bytes.
id	64s	8	Reply identifier (0x0003).
status	64s	16	Reply status. For a list of status codes, see <i>Commands</i> on page 229.

Get Upgrade Status

The Get Upgrade Status command determines the progress of a firmware upgrade.

Command

Field	Type	Offset	Description
length	64s	0	Command size including this field, in bytes.
id	64s	8	Command identifier (0x1)

Reply

Field	Type	Offset	Description
length	64s	0	Reply size including this field, in bytes.
id	64s	8	Reply identifier (0x1).
status	64s	16	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
state	64s	24	Upgrade state: -1 – Failed 0 – Completed 1 – Running 2 – Completed, but should run again
progress	64s	32	Upgrade progress (valid when in the Running state)

Get Upgrade Log

The Get Upgrade Log command can retrieve an upgrade log in the event of upgrade problems.

Command

Field	Type	Offset	Description
length	64s	0	Command size including this field, in bytes.
id	64s	8	Command identifier (0x2)

Reply

Field	Type	Offset	Description
length	64s	0	Reply size including this field, in bytes.
id	64s	8	Reply identifier (0x2).
status	64s	16	Reply status. For a list of status codes, see <i>Commands</i> on page 229.
length	64s	24	Length of the log (bytes).
log[length]	char	32	Log content.

Results

The following sections describe the results (data and health) that Gocator sends.

Data Results

A client can receive data messages from a Gocator sensor by connecting to the Data TCP channel (port 3196).

The Data channel and the Health channel (port 3194) can be connected at the same time. The sensor accepts multiple connections on each port. For more information on the Health channel, see *Health Results* on page 275.

Messages that are received on the Data and Health channels use a common structure, called Gocator Data Protocol (GDP). Each GDP message consists of a 6-byte header, containing *size* and *control* fields, followed by a variable-length, message-specific content section. The structure of the GDP message is defined below.

Gocator Data Protocol

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last Message flag Bits 0-14: Message type identifier. (See individual data result sections.)

GDP messages are always sent in groups. The Last Message flag in the *control* field is used to indicate the final message in a group. If there is only one message per group, this bit will be set in each message.



Dual-sensor systems are not supported on Gocator 2345 and 2385 sensors.

Stamp

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 1.
count (C)	32u	6	Count of stamps in this message.
size	16u	10	Stamp size, in bytes (min: 56, current: 56).
source	8u	12	Source (0 – Main, 1 – Buddy).
reserved	8u	13	Reserved.
stamps[C]	Stamp	14	Array of stamps (see below).

Stamp

Field	Type	Offset	Description
frameIndex	64u	0	Frame index (counts up from zero).
timestamp	64u	8	Timestamp (μ s).
encoder	64s	16	Current encoder value (ticks).
encoderAtZ	64s	24	Encoder value latched at z/index mark (ticks).
status	64u	32	Bit field containing various frame information: Bit 0: sensor digital input state Bit 4: master digital input state Bit 8-9: inter-frame digital pulse trigger (Master digital input if master is connected, otherwise sensor digital input. Value is cleared after each frame and clamped at 3 if more than 3 pulses are received).
serialNumber	32u	40	Sensor serial number. (In a dual-sensor system, the serial number of the main sensor.)
reserved[2]	32u	44	Reserved.

Video

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 2.
attributesSize	16u	6	Size of attributes, in bytes (min: 20, current: 20).
height (H)	32u	8	Image height, in pixels.
width (W)	32u	12	Image width, in pixels.
pixelSize	8u	16	Pixel size, in bytes.
pixelFormat	8u	17	Pixel format:

Field	Type	Offset	Description
			1 – 8-bit greyscale 2 – 8-bit color filter 3 – 8-bits-per-channel color (B, G, R, X)
colorFilter	8u	18	Color filter array alignment: 0 – None 1 – Bayer BG/GR 2 – Bayer GB/RG 3 – Bayer RG/GB 4 – Bayer GR/BG
source	8u	19	Source 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
cameraIndex	8u	20	Camera index.
exposureIndex	8u	21	Exposure index.
exposure	32u	22	Exposure (ns).
flippedX	8u	26	Indicates whether the video data must be flipped horizontally to match up with profile data.
flippedY	8u	27	Indicates whether the video data must be flipped vertically to match up with profile data.
pixels[H][W]	(Variable)	28	Image pixels. (Depends on pixelSize above.)

Profile

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 5.
attributeSize	16u	6	Size of attributes, in bytes (min: 32, current: 32).
count (C)	32u	8	Number of profile arrays.
width (W)	32u	12	Number of points per profile array.
xScale	32u	16	X scale (nm).
zScale	32u	20	Z scale (nm).
xOffset	32s	24	X offset (μm).
zOffset	32s	28	Z offset (μm).
source	8u	32	Source

Field	Type	Offset	Description
			0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
exposure	32u	33	Exposure (ns).
cameraIndex	8u	37	Camera index.
reserved[2]	8u	38	Reserved.
ranges[C][W]	Point16s	40	Profile ranges.

Resampled Profile

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 6.
attributeSize	16u	6	Size of attributes, in bytes (min: 32, current: 32).
count (C)	32u	8	Number of profile arrays.
width (W)	32u	12	Number of points per profile array.
xScale	32u	16	X scale (nm).
zScale	32u	20	Z scale (nm).
xOffset	32s	24	X offset (μm).
zOffset	32s	28	Z offset (μm).
source	8u	32	Source 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
exposure	32u	33	Exposure (ns).
reserved[3]	8u	37	Reserved.
ranges[C][W]	16s	40	Profile ranges.

Profile Intensity

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 7.

Field	Type	Offset	Description
attributesSize	16u	6	Size of attributes, in bytes (min: 24, current: 24).
count (C)	32u	8	Number of profile intensity arrays.
width (W)	32u	12	Number of points per profile intensity array.
xScale	32u	16	X scale (nm).
xOffset	32s	20	X offset (μm).
source	8u	24	Source 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
exposure	32u	25	Exposure (ns).
reserved[3]	8u	29	Reserved.
points[C][W]	8u	32	Intensity arrays.

Surface

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 8.
attributeSize	16u	6	Size of attributes, in bytes (min: 40, current: 40).
length (L)	32u	8	Surface length (rows).
length (W)	32u	12	Surface width (columns).
xScale	32u	16	X scale (nm).
yScale	32u	20	Y scale (nm).
zScale	32u	24	Z scale (nm).
xOffset	32s	28	X offset (μm).
yOffset	32s	32	Y offset (μm).
zOffset	32s	36	Z offset (μm).
source	8u	40	Source 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
exposure	32u	41	Exposure (ns).
reserved[7]	8u	45	Reserved.
ranges[L][W]	16s	52	Surface ranges.

Surface Intensity

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 9.
attributeSize	16u	6	Size of attributes, in bytes (min: 32, current: 32).
length (L)	32u	8	Surface length (rows).
width (W)	32u	12	Surface width (columns).
xScale	32u	16	X scale (nm).
yScale	32u	20	Y scale (nm).
xOffset	32s	24	X offset (μm).
yOffset	32s	28	Y offset (μm).
source	8u	32	Source 0 – Top 1 – Bottom 2 – Top Left 3 – Top Right
exposure	32u	33	Exposure (ns).
reserved[3]	8u	37	
intensities[H][W]	8u	40	Surface intensities.

Surface Section

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 20.
attributeSize	16u	6	Size of attributes, in bytes (min: 45, current: 45).
count (C)	32u	8	Number of profile arrays.
width (W)	32u	12	Number of points per profile array.
xScale	32u	16	X scale (nm).
zScale	32u	20	Z scale (nm).
xOffset	32s	24	X offset (μm).
zOffset	32s	28	Z offset (μm).
source	8u	32	Source 0 – Top 1 – Bottom

Field	Type	Offset	Description
			2 - Top Left 3 - Top Right
sectionId	32u	33	Section Id
exposure	32u	37	Exposure (ns).
poseAngle	32s	41	Z angle of the pose (microdegrees).
poseX	32s	45	X offset of the pose (μm)
poseY	32s	49	Y offset of the pose (μm)
ranges[C][W]	16s	53	Profile ranges.



The pose field can be used to transform the section data into the surface frame of reference, via a rotation and then a translation.

Surface Section Intensity

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 21.
attributesSize	16u	6	Size of attributes, in bytes (min: 37, current: 37).
count (C)	32u	8	Number of profile intensity arrays
width (W)	32u	12	Number of points per profile intensity array
xScale	32u	16	X scale (nm).
xOffset	32s	20	X offset (μm).
source	8u	24	Source 0 - Top 1 - Bottom 2 - Top Left 3 - Top Right
sectionId	32u	25	Section Id.
exposure	32u	29	Exposure (ns).
poseAngle	32s	33	Z angle of the pose (microdegrees).
poseX	32s	37	X offset of the pose (μm).
poseY	32s	41	Y offset of the pose (μm).
points[C][W]	8u	45	Intensity arrays.

Measurement

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 10.
count (C)	32u	6	Count of measurements in this message.
reserved[2]	8u	10	Reserved.
id	16u	12	Measurement identifier.
measurements[C]	Measurement	14	Array of measurements (see below).

Measurement

Field	Type	Offset	Description
value	32s	0	Measurement value.
decision	8u	4	Measurement decision bitmask. Bit 0: 1 – Pass 0 – Fail Bits 1-7: 0 – Measurement value OK 1 – Invalid value 2 – Invalid anchor
reserved[3]	8u	5	Reserved.

Operation Result

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 11.
attributesSize	16u	6	Size of attributes, in bytes (min: 8, current: 8).
opId	32u	8	Operation ID.
status	32s	12	Operation status. 1 – OK 0 – General failure -1 – No data in the field of view for stationary alignment -2 – No profiles with sufficient data for line fitting for travel alignment -3 – Invalid target detected. Examples include:

Field	Type	Offset	Description
			- Calibration disk diameter too small.
			- Calibration disk touches both sides of the field of view.
			- Too few valid data points after outlier rejection.
			-4 – Target detected in an unexpected position.
			-5 – No reference hole detected in bar alignment.
			-6 – No change in encoder value during travel calibration
			-988 – User aborted
			-993 – Timed out
			-997 – Invalid parameter

Exposure Calibration Result

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 12.
attributesSize	16u	6	Size of attributes, in bytes (min: 12, current: 12).
opId	32u	8	Operation ID.
status	32s	12	Operation status.
exposure	32s	16	Exposure result (ns).

Edge Match Result

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 16.
decision	byte	6	Overall match decision.
xOffset	32s	7	Target x offset in model space (μm).
yOffset	32s	11	Target y offset in model space (μm).
zAngle	32s	15	Target z rotation in model space (microdegrees).
quality	32s	19	Match quality (thousandth).
qualityDecision	byte	23	Quality match decision.
reserved[2]	byte	24	Reserved.

Bounding Box Match Result

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 17.
decision	byte	6	Overall match decision.
xOffset	32s	7	Target x offset in model space (μm).
yOffset	32s	11	Target y offset in model space (μm).
zAngle	32s	15	Target z rotation in model space (microdegrees).
width	32s	19	Width axis length (μm)
widthDecision	8u	23	Width axis decision.
length	32s	24	Length axis length (μm)
lengthDecision	8u	28	Length axis decision.

Ellipse Match Result

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. For this message, set to 18.
decision	byte	6	Overall match decision.
xOffset	32s	7	Target x offset in model space (μm).
yOffset	32s	11	Target y offset in model space (μm).
zAngle	32s	15	Target z rotation in model space (microdegrees).
minor	32s	19	Minor axis length (μm)
minorDecision	8u	23	Minor axis decision.
major	32s	24	Major axis length (μm)
majorDecision	8u	28	Major axis decision.

Health Results

A client can receive health messages from a Gocator sensor by connecting to the Health TCP channel (port 3194).

The Data channel (port 3196) and the Health channel can be connected at the same time. The sensor accepts multiple connections on each port. For more information on the Data channel, see *Data Results* on page 266.

Messages that are received on the Data and Health channels use a common structure, called Gocator Data Protocol (GDP). Each GDP message consists of a 6-byte header, containing *size* and *control* fields, followed by a variable-length, message-specific content section. The structure of the GDP message is defined below.

Gocator Data Protocol

Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last Message flag Bits 0-14: Message type identifier. (See individual data result sections.)

GDP messages are always sent in groups. The Last Message flag in the *control* field is used to indicate the final message in a group. If there is only one message per group, this bit will be set in each message.

A Health Result contains a single data block for health *indicators*. Each indicator reports the current status of some aspect of the sensor system, such as CPU usage or network throughput.

Health Result Header


Field	Type	Offset	Description
size	32u	0	Count of bytes in message (including this field).
control	16u	4	Bit 15: Last message flag. Bits 0-14: Message type identifier. Always 0.
count (C)	32u	6	Count of indicators in this message.
source	8u	10	Source (0 – Main, 1 – Buddy).
reserved[3]	8u	11	Reserved
indicators[C]	Indicator	14	Array of indicators (see format below).

The health indicators block contains a 2-dimensional array of indicator data. Each row in the array has the following format:

Indicator Format

Field	Type	Offset	Description
id	32u	0	Unique indicator identifier (see <i>Health Indicators</i> below table below).
instance	32u	4	Indicator instance.
value	64s	8	Value (identifier-specific meaning).

The following health indicators are defined for Gocator sensor systems.

 Undocumented indicators may be included in addition to the indicators defined below.

Health Indicators

Indicator	ID	Instance	Value
Encoder Value	1003	-	Current system encoder tick.
Encoder Frequency	1005	-	Current system encoder frequency (ticks/s).
App Version	2000	-	Firmware application version.
Uptime	2017	-	Time elapsed since node boot-up or reset (seconds).

Indicator	ID	Instance	Value
Laser safety status	1010	-	0 if laser is disabled; 1 if enabled.
Internal Temperature	2002	-	Internal temperature (centidegrees Celsius).
Projector Temperature	2404	-	Projector module temperature (centidegrees Celsius). Only available on projector based devices.
Control Temperature	2028	-	Control module temperature (centidegrees Celsius). Available only on 3B-class devices.
Memory Usage	2003	-	Amount of memory currently used (bytes).
Memory Capacity	2004	-	Total amount of memory available (bytes).
Storage Usage	2005	-	Amount of non-volatile storage used (bytes).
Storage Capacity	2006	-	Total amount of non-volatile storage available (bytes).
CPU Usage	2007	-	CPU usage (percentage of maximum).
Net Out Capacity	2009	-	Total available outbound network throughput (bytes/s).
Net Out Link Status	2034	-	Current Ethernet link status.
Sync Source	2043	-	Gocator synchronization source. 1 - FireSync Master device 2 - Sensor
Digital Inputs	2024	-	Current digital input status (one bit per input).
Event Count	2102	-	Total number of events triggered.
Camera Search Count	2217	-	Number of search states. (Only important when tracking is enabled.)
Camera Trigger Drops	2201	-	Number of dropped triggers.
Analog Output Drops	21014 (previously 2501)	Output Index	Number of dropped outputs.
Digital Output Drops	21015 (previously 2601)	Output Index	Number of dropped outputs.
Serial Output Drops	21016 (previously 2701)	Output Index	Number of dropped outputs.
Sensor State	20000	-	Gocator sensor state. -1 - Conflict 0 - Ready

Indicator	ID	Instance	Value
			1 – Running
Current Sensor Speed	20001	-	Current sensor speed. (Hz)
Maximum Speed	20002	-	The sensor's maximum speed.
Spot Count	20003	-	Number of found spots in the last profile.
Max Spot Count	20004	-	Maximum number of spots that can be found.
Scan Count	20005	-	Number of surfaces detected from a top device.
Master Status	20006	0 for main 1 for buddy	Master connection status: 0 – Not connected 1 – Connected The indicator with instance = buddy does not exist if the buddy is not connected.
Cast Start State	20007		The state of the second digital input. (NOTE: Only available on XLine capable licensed devices)
Laser Overheat	20020	-	Indicates whether laser overheat has occurred. 0 – Has not overheated 1 – Has overheated Only available on certain 3B laser devices.
Laser Overheat Duration	20021	-	The length of time in which the laser overheating state occurred. Only available on certain 3B laser devices.
Playback Position	20023	-	The current replay playback position.
Playback Count	20024	-	The number of frames present in the replay.
FireSync Version	20600	-	The FireSync version used by the Gocator build.
Processing Drops	21000	-	Number of dropped frames. The sum of various processing drop related indicators.
Last IO Latency	21001	-	Last delay from camera exposure to when rich IO scheduling occurs. Valid only if rich IO is enabled.
Max IO Latency	21002	-	Maximum delay from camera exposure to when rich IO scheduling occurs. Valid only if rich IO is enabled. Reset on start.
Ethernet Output	21003	-	Number of bytes transmitted.
Ethernet Rate	21004	-	The average number of bytes per second being transmitted.
Ethernet Drops	21005	-	Number of dropped Ethernet packets.
Digital Output Pass	21006	Output Index	Number of pass digital output pulse.
Digital Output Fail	21007	Output Index	Number of fail digital output pulse.
Trigger Drops	21010		Number of dropped triggers. The sum of various

Indicator	ID	Instance	Value
			triggering-related drop indicators.
Output Drops	21011		Number of dropped output data. The sum of all output drops (analog, digital, serial, host server, and ASCII server).
Host Server Drops	21012		The number of bytes dropped by the host data server. Not currently emitted.
ASCII Server Drops	21013		The number of bytes dropped by the ASCII Ethernet data server. Not currently emitted.
Range Valid Count	21100	-	Number of valid ranges.
Range Invalid Count	21101	-	Number of invalid ranges.
Anchor Invalid Count	21200	-	Number of frames with anchoring invalid.
Z-Index Drop Count	22000	-	The number of dropped surfaces due to a lack of z-encoder pulse during rotational part detection.
Value	30000	Measurement ID	Measurement Value.
Pass	30001	Measurement ID	Number of pass decision.
Fail	30002	Measurement ID	Number of fail decision.
Max	30003	Measurement ID	Maximum measurement value.
Min	30004	Measurement ID	Minimum measurement value.
Average	30005	Measurement ID	Average measurement value.
Std. Dev.	30006	Measurement ID	Measurement value standard deviation.
Invalid Count	30007	Measurement ID	Number of invalid values.
Overflow	30008	Measurement ID	<p>Number of times this measurement has overflowed on any output. Multiple simultaneous overflows result in only a single increment to this counter. Overflow conditions include:</p> <ul style="list-style-type: none"> -Value exceeds bit representation available for given protocol -Analog output (mA) falls outside of acceptable range (0-20 mA) <p>When a measurement value overflow occurs, the value is set to the null value appropriate for the given protocol's measurement value output type. The Overflow health indicator increments.</p>
Tool Run Time	22004	Tool Index	The most recent time taken to execute the tool.

Modbus Protocol


Modbus is designed to allow industrial equipment such as Programmable Logic Controllers (PLCs), sensors, and physical input/output devices to communicate over an Ethernet network.

Modbus embeds a Modbus frame into a TCP frame in a simple manner. This is a connection-oriented transaction, and every query expects a response.

This section describes the Modbus TCP commands and data formats. Modbus TCP communication lets the client:

- Switch jobs.
- Align and run sensors.
- Receive measurement results, sensor states, and stamps.

To use the Modbus protocol, it must be enabled and configured in the active job.

 The Gocator 4.x firmware uses mm, mm², mm³, and degrees as standard units. In all protocols, values are scaled by 1000, as values in the protocols are represented as integers. This results in effective units of mm/1000, mm²/1000, mm³/1000, and deg/1000 in the protocols.

If buffering is enabled with the Modbus protocol, the PLC must read the Buffer Advance output register (see *State* on page 283) to advance the queue before reading the measurement results.

For information on configuring the protocol using the Web interface, see *Ethernet Output* on page 119.


Concepts

A PLC sends a command to start each Gocator. The PLC then periodically queries each Gocator for its latest measurement results. In Modbus terminology, the PLC is a Modbus Client. Each Gocator is a Modbus Server which serves the results to the PLC.

The Modbus protocol uses TCP for connection and messaging. The PLC makes a TCP connection to the Gocator on port 502. Control and data messages are communicated on this TCP connection. Up to eight clients can be connected to the Gocator simultaneously. A connection closes after 10 minutes of inactivity.

Messages

All Modbus TCP messages consist of an MBAP header (Modbus Application Protocol), a function code, and a data payload.

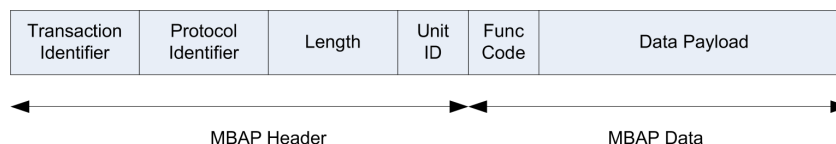

The MBAP header contains the following fields:

Modbus Application Protocol Header

Field	Length (Bytes)	Description
Transaction ID	2	Used for transaction pairing. The Modbus Client sets the value and the Server (Gocator) copies the value into its responses.
Protocol ID	1	Always set to 0.
Length	1	Byte count of the rest of the message, including the Unit identifier and data fields.
Unit ID	1	Used for intra-system routing purpose. The Modbus Client sets the value and the Server (Gocator) copies the value into its responses.

Modbus Application Protocol Specification describes the standard function codes in detail. Gocator supports the following function codes:

Modbus Function Code

Function Code	Name	Data Size (bits)	Description
3	Read Holding Registers	16	Read multiple data values from the sensor.
4	Read Input Registers	16	Read multiple data values from the sensor.
6	Write Single Register	16	Send a command or parameter to the sensor.
16	Write Multiple Registers	16	Send a command and parameters to the sensor.

The data payload contains the registers that can be accessed by Modbus TCP messages. If a message accesses registers that are invalid, a reply with an exception is returned. Modbus Application Protocol Specification defines the exceptions and describes the data payload format for each function code.

The Gocator data includes 16-bit, 32-bit, and 64-bit data. All data are sent in big endian format, with the 32-bit and 64-bit data spread out into two and four consecutive registers.

32-bit Data Format

Register	Name	Bit Position
0	32-bit Word 1	31 .. 16
1	32-bit Word 0	15 .. 0

64-bit Data Format

Register	Name	Bit Position
0	64-bit Word 3	63 .. 48
1	64-bit Word 2	47 .. 32
2	64-bit Word 1	31 .. 16
3	64-bit Word 0	15 .. 0

Registers

Modbus registers are 16 bits wide and are either control registers or output registers.

Control registers are used to control the sensor states (e.g., start, stop, or calibrate a sensor).

The output registers report the sensor states, stamps, and measurement values and decisions. You can read multiple output registers using a single Read Holding Registers or a single Read Input Registers command. Likewise, you can control the state of the sensor using a single Write Multiple Register command.

Control registers are write-only, and output registers are read-only.

Register Map Overview

Register Address	Name	Read/Write	Description
0 - 124	Control Registers	WO	Registers for Modbus commands. See <i>Control Registers</i> below for detailed descriptions.
300 - 899	Sensor States	RO	Report sensor states. See <i>State</i> on the next page for detailed descriptions.
900 - 999	Stamps	RO	Return stamps associated with each profile or surface. See <i>State</i> on the next page for detailed descriptions.
1000 - 1060	Measurements & Decisions	RO	20 measurement and decision pairs. See <i>Measurement Registers</i> on page 285 for detailed descriptions.

Control Registers

Control registers are used to operate the sensor. Register 0 stores the command to be executed. Registers 1 to 21 contain parameters for the commands. The Gocator executes a command when the value in Register 0 is changed. To set the parameters before a command is executed, you should set up the parameters and the command using a single Multiple Write register command.

Control Register Map

Register Address	Name	Read/Write	Description
0	Command Register	WO	Command register. See the Command Register Values table below for more information.
1 - 21	Job Filename	WO	Null-terminated filename. Each 16-bit register holds a single character. Only used for Load Job Command. Specifies the complete filename, including the file extension ".job".

The values used for the Command Register are described below.

Command Register Values

Value	Name	Description
0	Stop running	Stop the sensor. No effect if sensor is already stopped.
1	Start Running	Start the sensor. No effect if sensor is already started.
2	Align (stationary target)	Start the alignment process. State register 301 will be set to 1 (busy)

Value	Name	Description
		until the alignment process is complete.
3	Align (moving target)	Start alignment process and also calibrate encoder resolution. State register 301 will be set to 1 (busy) until the motion calibration process is complete.
4	Clear Alignment	Clear the alignment.
5	Load Job	Activate a job file. Registers 1 - 21 specify the filename.
6	Set Runtime Variables	Registers 1 through 9 are used to set the values of all four runtime variables.

Output Registers

Output registers are used to output states, stamps, and measurement results. Each register address holds a 16-bit data value.

State

State registers report the current sensor state.

State Register Map

Register Address	Name	Type	Description
300	Stopped / Running		Sensor State: 0 - Stopped 1 - Running
301	Busy		Busy State: 0 - Not busy 1 - Busy Registers 302 to 363 below are only valid when the Busy State is not Busy
302	Alignment State		Current Alignment State: 0 - Not aligned 1 - Aligned
303 – 306	Encoder Value	64s	Current Encoder value (ticks).
307 – 310	Time	64s	Current time (µs).
311	Job File Name Length	16u	Number of characters in the current job file name.
312 – 371	Live Job Name		Current Job Name. Name of currently loaded job file. Does not include the extension. Each 16-bit register contains a single character.
375	Runtime Variable 0 High	32s	Runtime variable value
376	Runtime Variable 0 Low		
...

Register Address	Name	Type	Description
381	Runtime Variable 3 High	32s	Runtime variable value
382	Runtime Variable 3 Low		

Stamp

Stamps contain trigger timing information used for synchronizing a PLC's actions. A PLC can also use this information to match up data from multiple Gocator sensors.

In Profile mode, the stamps are updated after each profile is processed. In Surface mode, the stamps are updated after each surface has been processed.

Stamp Register Map

Register Address	Name	Type	Description
976	Buffer Advance		If buffering is enabled this address must be read by the PLC Modbus client first to advance the buffer. After the buffer advance read operation, the Modbus client can read the updated Measurements & Decisions in addresses 1000-1060.
977	Buffer Counter		Number of buffered messages currently in the queue.
978	Buffer Overflow		Buffer Overflow Indicator: 0 - No overflow 1 - Overflow
979	Inputs		Digital input state.
980	zPosition High	64s	Encoder value when the index is last triggered.
981	zPosition		
982	zPosition		
983	zPosition Low		
984	Exposure High	32u	Laser exposure (μ s).
985	Exposure Low		
986	Temperature High	32u	Sensor temperature in degrees Celcius * 100 (centidegrees).
987	Temperature Low		
988	Position High	64s	Encoder position
989	Position		
990	Position		
991	Position Low		
992	Time Low	64u	Timestamp (μ s).
993	Time		

Register Address	Name	Type	Description
994	Time		
995	Time Low		
996	Frame Index High	64u	Frame counter. Each new sample is assigned a frame number.
997	Frame Index		
998	Frame Index		
999	Fame Index Low		

Measurement Registers

Measurement results are reported in pairs of values and decisions. Measurement values are 32 bits wide and decisions are 8 bits wide.

The measurement ID defines the register address of each pair. The register address of the first word can be calculated as $(1000 + 3 * ID)$. For example, a measurement with ID set to 4 can be read from registers 1012 (high word) and, 1013 (low word), and the decision at 1015.

In Profile mode, the measurement results are updated after each profile is processed. In Surface mode, the measurement results are updated after each discrete part has been processed.

Measurement Register Map

Register Address	Name	Type	Description
1000	Measurement 0 High	32s	Measurement value in μm (0x80000000 if invalid)
1001	Measurement 0 Low		
1002	Decision 0	16u	Measurement decision. A bit mask, where: Bit 0: 1 - Pass 0 - Fail Bits 1-7: 0 - Measurement value OK 1 - Invalid value 2 - Invalid anchor
1003	Measurement 1 High		
1004	Measurement 1 Low		
1005	Decision 1		
1006	Measurement 2 High		
1007	Measurement 2 Low		
1008	Decision 2		

Register Address	Name	Type	Description
...
1057	Measurement 19 High		
1058	Measurement 19 Low		
1059	Decision 19		


EtherNet/IP Protocol

EtherNet/IP is an industrial protocol that allows bidirectional data transfer with PLCs. It encapsulates the object-oriented Common Industrial Protocol (CIP).

This section describes the EtherNet/IP messages and data formats. EtherNet/IP communication enables the client to:

- Switch jobs.
- Align and run sensors.
- Receive sensor states, stamps, and measurement results.

To use the EtherNet/IP protocol, it must be enabled and configured in the active job.

 The Gocator 4.x firmware uses mm, mm², mm³, and degrees as standard units. In all protocols, values are scaled by 1000, as values in the protocols are represented as integers. This results in effective units of mm/1000, mm²/1000, mm³/1000, and deg/1000 in the protocols.

For information on configuring the protocol using the Web interface, see *Ethernet Output* on page 119.

Concepts

To EtherNet/IP-enabled devices on the network, the sensor information is seen as a collection of objects, which have attributes that can be queried.

Gocator supports all required objects, such as the Identity object, TCP/IP object, and Ethernet Link object. In addition, assembly objects are used for sending sensor and sample data and receiving commands. There are three assembly objects: the command assembly (32 bytes), the sensor state assembly (100 bytes), and the sample state assembly object (380 bytes). The data attribute (0x03) of the assembly objects is a byte array containing information about the sensor. The data attribute can be accessed with the GetAttribute and SetAttribute commands.

The PLC sends a command to start a Gocator. The PLC then periodically queries the attributes of the assembly objects for its latest measurement results. In EtherNet/IP terminology, the PLC is a scanner and the Gocator is an adapter.

The Gocator supports unconnected or connected explicit messaging (with TCP). Implicit I/O messaging is supported as an advanced setting. For more information, see http://lmi3d.com/sites/default/files/APPNOTE_Implicit_Messaging_with_Allen-Bradley_PLCs.pdf.

The default EtherNet/IP ports are used. Port 44818 is used for TCP connections and UDP queries (e.g., list Identity requests). Port 2222 for UDP I/O Messaging is not supported.

Basic Object

Identity Object (Class 0x01)

Attribute	Name	Type	Value	Description	Access
1	Vendor ID	UINT	1256	ODVA-provided vendor ID	Get
2	Device Type	UINT	43	Device type	Get
3	Product Code	UINT	2000	Product code	Get
4	Revision	USINT USINT	x.x	Byte 0 - Major revision Byte 1 - Minor revision	Get
6	Serial number	UDINT	32-bit value	Sensor serial number	Get
7	Product Name	SHORT STRING 32	"Gocator"	Gocator product name	Get

TCP/IP Object (Class 0xF5)

The TCP/IP Object contains read-only network configuration attributes such as IP Address. TCP/IP configuration via Ethernet/IP is not supported. See Volume 2, Chapter 5-3 of the CIP Specification for a complete listing of TCP/IP object attributes.

Attribute	Name	Type	Value	Description	Access
1	Status	UDINT	0	TCP interface status	Get
2	Configuration Capability	UINT	0		Get
3	Configuration Control	UINT	0	Product code	Get
4	Physical Link Object	Structure (See description)		See 5.3.3.2.4 of CIP Specification Volume 2: Path size (UINT) Path (Padded EPATH)	Get
5	Interface Configuration	Structure (See description)		See 5.3.3.2.5 of CIP Specification Volume 2: IP address (UDINT) Network mask (UDINT) Gateway address (UDINT) Name server (UDINT) Secondary name (UDINT) Domain name (UDINT)	Get

Ethernet Link Object (Class 0xF6)

The Ethernet Link Object contains read-only attributes such as MAC Address (Attribute 3). See Volume 2, Chapter 5-4 of the CIP Specification for a complete listing of Ethernet Link object attributes.

Attribute	Name	Type	Value	Description	Access
1	Interface Speed	UDINT	1000	Ethernet interface data rate (mbps)	Get
2	Interface Flags	UDINT		See 5.4.3.2.1 of CIP Specification Volume 2: Bit 0: Link Status 0 – Inactive 1 – Active Bit 1: Duplex 0 – Half Duplex 1 – Full Duplex	Get
3	Physical Address	Array of 6 USINTs		MAC address (for example: 00 16 20 00 2E 42)	Get

Assembly Object (Class 0x04)

The Gocator Ethernet/IP object model includes the following assembly objects: Command, Sensor State, and Sample State.

All assembly object instances are static. Data in a data byte array in an assembly object are stored in the big endian format.

Command Assembly

The command assembly object is used to start, stop, and align the sensor, and also to switch jobs on the sensor.

Command Assembly

Information	Value
Class	0x4
Instance	0x310
Attribute Number	3
Length	32 bytes
Supported Service	0x10 (SetAttributeSingle)

Attributes 1 and 2 are not implemented, as they are not required for the static assembly object.

Attribute 3

Attribute	Name	Type	Value	Description	Access
3	Command	Byte Array	See Below	Command parameters Byte 0 - Command. See table below for specification of the values.	Get, Set

Command Definitions

Value	Name	Description
0	Stop running	Stop the sensor. No action if the sensor is already stopped

Value	Name	Description
1	Start Running	Start the sensor. No action if the sensor is already started.
2	Stationary Alignment	Start the stationary alignment process. Byte 1 of the sensor state assembly will be set to 1 (busy) until the alignment process is complete, then back to zero.
3	Moving Alignment	Start the moving alignment process. Byte 1 of the sensor state assembly will be set to 1 (busy) until the alignment process is complete, then back to zero.
4	Clear Alignment	Clear the alignment.
5	Load Job	Load the job. Set bytes 1-31 to the file name (one character per byte, including the extension).

Sensor State Assembly

The sensor state assembly object contains the sensor's states, such as the current sensor temperature, frame count, and encoder values.

Sensor State Assembly

Information	Value
Class	0x04
Instance	0x320
Attribute Number	3
Length	100 bytes
Supported Service	0x0E (GetAttributeSingle)

Attributes 1 and 2 are not implemented, as they are not required for the static assembly object.

Attribute 3

Attribute	Name	Type	Value	Description	Access
3	Command	Byte Array	See below	Sensor state information. See below for more details.	Get

Sensor State Information

Byte	Name	Type	Description
0	Sensor's state		Sensor state: 0 - Ready 1 - Running
1	Command in progress		Command busy status: 0 - Not busy 1 - Busy performing the last command Bytes 2 to 43 below are only valid when there is no command in progress.
2	Alignment state		Alignment status:

Byte	Name	Type	Description
			0 - Not aligned 1 - Aligned The value is only valid when byte1 is set to 0.
3-10	Encoder	64s	Current encoder position
11-18	Time	64s	Current timestamp
19	Current Job Filename Length	16u	Number of characters in the current job filename. (e.g., 11 for "current.job"). The length includes the .job extension. Valid when byte 1 = 0.
20-43	Current Job Filename		Name of currently loaded job file, including the ".job" extension. Each byte contains a single character. Valid when byte 1 = 0.
84-87	Runtime Variable 0	32s	Runtime variable value at index 0
...	...		
96-99	Runtime Variable 3	32s	Runtime variable value at index 3

Sample State Assembly

The sample state object contains measurements and their associated stamp information.

Sample State Assembly

Information	Value
Class	0x04
Instance	0x321
Attribute Number	3
Length	380 bytes
Supported Service	0x0E (GetAttributeSingle)

Attribute 3

Attribute	Name	Type	Value	Description	Access
3	Command	Byte Array	See below	Sample state information. See below for more details.	Get

Sample State Information

Byte	Name	Type	Description
0-1	Inputs		Digital input state.
2-9	Z Index Position	64s	Encoder position at time of last index pulse.
10-13	Exposure	32u	Laser exposure in μ s.
14-17	Temperature	32u	Sensor temperature in degrees Celsius * 100 (centidegrees).

Byte	Name	Type	Description
18-25	Position	64s	Encoder position.
26-33	Time	64u	Time.
34-41	Frame Counter	64u	Frame counter.
42	Buffer Counter	8u	Number of buffered messages currently in the queue.
43	Buffer Overflow		Buffer Overflow Indicator: 0 - No overflow 1 - Overflow
44 - 79	Reserved		Reserved bytes.
80-83	Measurement 0	32s	Measurement value in μm (0x80000000 if invalid).
84	Decision 0	8u	Measurement decision. A bit mask, where: Bit 0: 1 - Pass 0 - Fail Bits 1-7: 0 - Measurement value OK 1 - Invalid value 2 - Invalid anchor
...	...		
375-378	Measurement 59	32s	Measurement value in μm (0x80000000 if invalid).
379	Decision 59	8u	Measurement decision. A bit mask, where: Bit 0: 1 - Pass 0 - Fail Bits 1-7: 0 - Measurement value OK 1 = Invalid value 2 = Invalid anchor

Measurement results are reported in pairs of values and decisions. Measurement values are 32 bits wide and decisions are 8 bits wide.

The measurement ID defines the byte position of each pair within the state information. The position of the first word can be calculated as $(80 + 5 * \text{ID})$. For example, a measurement with ID set to 4 can be read from byte 100 (high word) to 103 (low word) and the decision at 104.

In Profile mode, the measurement results are updated after each profile is processed. In Surface mode, the measurement results are updated after each discrete part has been processed. If buffering is

enabled in the Ethernet Output panel, reading the Extended Sample State Assembly Object automatically advances the buffer. See *Ethernet Output* on page 119 for information on the **Output** panel.


ASCII Protocol

This section describes the ASCII protocol.

Communication can be asynchronous or can use polling. For more information on polling commands, see *Polling Operation Commands (Ethernet Only)* on the next page.

The protocol communicates using ASCII strings. The output result format from the sensor is user-configurable.

To use the ASCII protocol, it must be enabled and configured in the active job.

 The Gocator 4.x firmware uses mm, mm², mm³, and degrees as standard units. In all protocols, values are scaled by 1000, as values in the protocols are represented as integers. This results in effective units of mm/1000, mm²/1000, mm³/1000, and deg/1000 in the protocols.

For information on configuring the protocol with the Web interface (when using the protocol over Ethernet), see *Ethernet Output* on page 119.

Connection Settings

Ethernet Communication

With Ethernet ASCII output, you can set the connection port numbers of the three channels used for communication (Control, Data, and Health):

Ethernet Ports for ASCII

Name	Description	Default Port
Control	To send commands to control the sensor.	8190
Data	To retrieve measurement output.	8190
Health	To retrieve specific health indicator values.	8190

Channels can share the same port or operate on individual ports. The following port numbers are reserved for Gocator internal use: 2016, 2017, 2018, and 2019. Each port can accept multiple connections, up to a total of 16 connections for all ports.

Serial Communication

Over serial, Gocator ASCII communication uses the following connection settings:

Serial Connection Settings for ASCII

Parameter	Value
Start Bits	1

Parameter	Value
Stop Bits	1
Parity	None
Data Bits	8
Baud Rate (b/s)	115200
Format	ASCII
Delimiter	CR

Up to 16 users can connect to the sensor for ASCII interfacing at a time. Any additional connections will remove the oldest connected user.

Polling Operation Commands (Ethernet Only)

On the Ethernet output, the Data channel can operate asynchronously or by polling.

Under asynchronous operation, measurement results are automatically sent on the Data channel when the sensor is in the running state and results become available. The result is sent on all connected data channels.

Under polling operation, a client can:

- Switch to a different job.
- Align, run, and trigger sensors.
- Receive sensor states, health indicators, stamps, and measurement results

Gocator sends Control, Data, and Health messages over separate channels. The Control channel is used for commands such as starting and stopping the sensor, loading jobs, and performing alignment (see *Control Commands* on the next page).

The Data channel is used to receive and poll for measurement results. When the sensor receives a [Result](#) command, it will send the latest measurement results on the same data channel that the request is received on. See *Data Commands* on page 298 for more information.

The Health channel is used to receive health indicators (see *Health Commands* on page 301).

Command and Reply Format

Commands are sent from the client to the Gocator. Command strings are not case sensitive. The command format is:

```
<COMMAND><DELIMITER><PARAMETER><TERMINATION>
```

If a command has more than one parameter, each parameter is separated by the delimiter. Similarly, the reply has the following format:

```
<STATUS><DELIMITER><OPTIONAL RESULTS><DELIMITER>
```

The status can either be "OK" or "ERROR". The optional results can be relevant data for the command if successful, or a text based error message if the operation failed. If there is more than one data item, each item is separated by the delimiter.

The delimiter and termination characters are configured in the Special Character settings.

Special Characters

The ASCII Protocol has three special characters.

Special Characters

Special Character	Explanation
Delimiter	Separates input arguments in commands and replies, or data items in results. Default value is ",".
Terminator	Terminates both commands and result output. Default value is "%r%n".
Invalid	Represents invalid measurement results. Default value is "INVALID"

The values of the special characters are defined in the Special Character settings. In addition to normal ASCII characters, the special characters can also contain the following format values.

Format values for Special Characters

Format Value	Explanation
%t	Tab
%n	New line
%r	Carriage return
%%	Percentage (%) symbol

Control Commands

Optional parameters are shown in italic. The placeholder for data is surrounded by brackets (<>). In the examples, the delimiter is set to ','.

Start

The Start command starts the sensor system (causes it to enter the Running state). This command is only valid when the system is in the Ready state. If a start target is specified, the sensor starts at the target time or encoder (depending on the trigger mode).

Formats

Message	Format
Command	Start,start target The start target (optional) is the time or encoder position at which the sensor will be started. The time and encoder target value should be set by adding a delay to the time or encoder position returned by the Stamp command. The delay should be set such that it covers the command response time of the Start command.
Reply	OK or ERROR, <Error Message>

Examples:

```
Command: Start
Reply: OK
Command: Start,1000000
Reply: OK
Command: Start
Reply: ERROR, Could not start the sensor
```

Stop

The stop command stops the sensor system (causes it to enter the Ready state). This command is valid when the system is in the Ready or Running state.

Formats

Message	Format
Command	Stop
Reply	OK or ERROR, <Error Message>

Examples:

```
Command: Stop
Reply: OK
```

Trigger

The Trigger command triggers a single frame capture. This command is only valid if the sensor is configured in the Software trigger mode and the sensor is in the Running state. If a start target is specified, the sensor starts at the target time or encoder (depending on the unit setting in the Trigger panel; see *Triggers* on page 63).

Formats

Message	Format
Command	Trigger,start target The start target (optional) is the time or encoder position at which the sensor will be started. The time and encoder target value should be set by adding a delay to the time or encoder position returned by the Stamp command. The delay should be set such that it covers the command response time of the Start command.
Reply	OK or ERROR, <Error Message>

Examples:

```
Command: Trigger
Reply: OK
Command: Trigger,1000000
Reply: OK
```

LoadJob

The Load Job command switches the active sensor configuration.

Formats

Message	Format
Command	LoadJob,job file name If the job file name is not specified, the command returns the current job name. An error message is generated if no job is loaded. ".job" is appended if the filename does not have an extension.
Reply	OK or ERROR, <Error Message>

Examples:

```
Command: LoadJob,test.job
Reply: OK,test.job loaded successfully
Command: LoadJob
Reply: OK,test.job
Command: LoadJob,wrongname.job
Reply: ERROR, failed to load wrongname.job
```

Stamp

The Stamp command retrieves the current time, encoder, and/or the last frame count.

Formats

Message	Format
Command	Stamp,time,encoder,frame If no parameters are given, time, encoder, and frame will be returned. There could be more than one selection.
Reply	If no arguments are specified: OK, time, <time value>, encoder, <encoder position>, frame, <frame count> ERROR, <Error Message> If arguments are specified, only the selected stamps will be returned.

Examples:

```
Command: Stamp
Reply: OK,Time,9226989840,Encoder,0,Frame,6
Command: Stamp,frame
Reply: OK,6
```

Stationary Alignment

The Stationary Alignment command performs an alignment based on the settings in the sensor's live job file. A reply to the command is sent when the alignment has completed or failed. The command is timed out if there has been no progress after one minute.

Formats

Message	Format
Command	StationaryAlignment

Message	Format
Reply	If no arguments are specified OK or ERROR, <Error Message>

Examples:

Command: StationaryAlignment

Reply: OK

Command: StationaryAlignment

Reply: ERROR, ALIGNMENT FAILED

Moving Alignment

The Moving Alignment command performs an alignment based on the settings in the sensor's live job file. A reply to the command is sent when the alignment has completed or failed. The command is timed out if there has been no progress after one minute.

Formats

Message	Format
Command	MovingAlignment
Reply	If no arguments are specified OK or ERROR, <Error Message>

Examples:

Command: MovingAlignment

Reply: OK

Command: MovingAlignment

Reply: ERROR, ALIGNMENT FAILED

Clear Alignment

The Clear Alignment command clears the alignment record generated by the alignment process.

Formats

Message	Format
Command	ClearAlignment
Reply	OK or ERROR, <Error Message>

Examples:

Command: ClearAlignment

Reply: OK

Data Commands

Optional parameters are shown in *italics*. The placeholder for data is surrounded by brackets (<>). In the examples, the delimiter is set to ','.

Result

The Result command retrieves measurement values and decisions.

Formats

Message	Format
Command	Result,measurement ID,measurement ID...
Reply	If no arguments are specified, the custom format data string is used. OK, <custom data string> ERROR, <Error Message> If arguments are specified, OK, <data string in standard format> ERROR, <Error Message>

Examples:

Standard data string for measurements ID 0 and 1:

```
Result,0,1
```

```
OK,M00,00,V151290,D0,M01,01,V18520,D0
```

Standard formatted measurement data with a non-existent measurement of ID 2:

```
Result,2
```

```
ERROR,Specified measurement ID not found. Please verify your input
```

Custom formatted data string (%time, %value[0], %decision[0]):

```
Result
```

```
OK,1420266101,151290,0
```

Value

The Value command retrieves measurement values.

Formats

Message	Format
Command	Value,measurement ID,measurement ID...
Reply	If no arguments are specified, the custom format data string is used. OK, <custom data string> ERROR, <Error Message> If arguments are specified, OK, <data string in standard format, except that the decisions are not sent> ERROR, <Error Message>

Examples:

Standard data string for measurements ID 0 and 1:

```
Value,0,1
```

```
OK,M00,00,V151290,M01,01,V18520
```

Standard formatted measurement data with a non-existent measurement of ID 2:

```
Value,2
```

```
ERROR,Specified measurement ID not found. Please verify your input
```

Custom formatted data string (%time, %value[0]):

```
Value
```

```
OK, 1420266101, 151290
```

Decision

The Decision command retrieves measurement decisions.

Formats

Message	Format
Command	Decision,measurement ID,measurement ID...
Reply	If no arguments are specified, the custom format data string is used. OK, <custom data string> ERROR, <Error Message> If arguments are specified, OK, <data string in standard format, except that the values are not sent> ERROR, <Error Message>

Examples:

Standard data string for measurements ID 0 and 1:

```
Decision,0,1
```

```
OK,M00,00,D0,M01,01,D0
```

Standard formatted measurement data with a non-existent measurement of ID 2:

```
Decision,2
```

```
ERROR,Specified measurement ID not found. Please verify your input
```

Custom formatted data string (%time, %decision[0]):

```
Decision
```

```
OK,1420266101, 0
```


Health Commands

Optional parameters are shown in *italic*. The placeholder for data is surrounded by brackets (<>). In the examples, the delimiter is set to ','.

Health

The Health command retrieves health indicators. See *Health Results* on page 275 for details on health indicators.

Formats

Message	Format
Command	Health,health indicator ID.Optional health indicator instance ... More than one health indicator can be specified. Note that the health indicator instance is optionally attached to the indicator ID with a '.'. If the health indicator instance field is used the delimiter cannot be set to '.'.
Reply	OK, <health indicator of first ID>, <health indicator of second ID> ERROR, <Error Message>

Examples:

health,2002,2017

OK,46,1674

Health

ERROR,Insufficient parameters.

Standard Result Format

Gocator can send measurement results either in the standard format or in a custom format. In the standard format, you select in the web interface which measurement values and decisions to send. For each measurement the following message is transmitted:

M	t _n	,	i _n	,	V	v _n	,	D	d ₁	CR
---	----------------	---	----------------	---	---	----------------	---	---	----------------	----

Field	Shorthand	Length	Description
MeasurementStart	M	1	Start of measurement frame.
Type	t _n	n	Hexadecimal value that identifies the type of measurement. The measurement type is the same as defined elsewhere (see <i>Data Results</i> on page 266).
Id	i _n	n	Decimal value that represents the unique identifier of the measurement.
ValueStart	V	1	Start of measurement value.
Value	v _n	n	Measurement value, in decimal. The unit of the

Field	Shorthand	Length	Description
			value is measurement-specific.
DecisionStart	D	1	Start of measurement decision.
Decision	d ₁	1	Measurement decision, a bit mask where: Bit 0: 1 – Pass 0 – Fail Bits 1-7: 0 – Measurement value OK 1 – Invalid value 2 - Invalid anchor

Custom Result Format

In the custom format, you enter a format string with place holders to create a custom message. The default format string is "%time, %value[0], %decision[0]".

Result Placeholders

Format Value	Explanation
%time	Timestamp
%encoder	Encoder position
%frame	Frame number
%value[Measurement ID]	Measurement value of the specified measurement ID. The ID must correspond to an existing measurement. The value output will be displayed as an integer in micrometers.
%decision[Measurement ID]	Measurement decision, where the selected measurement ID must correspond to an existing measurement. Measurement decision is a bit mask where: Bit 0: 1 – Pass 0 – Fail Bits 1-7: 0 – Measurement value OK 1 – Invalid value 2 - Invalid anchor

Selcom Protocol

Gocator 2345 and 2385 sensors do not currently support this feature.

Troubleshooting

Review the guidance in this chapter if you are experiencing difficulty with a Gocator sensor system.

Mechanical/Environmental

The sensor is warm.

- It is normal for a sensor to be warm when powered on. A Gocator sensor is typically 15° C warmer than the ambient temperature.

Connection

When attempting to connect to the sensor with a web browser, the sensor is not found (page does not load).

- Verify that the sensor is powered on and connected to the client computer network. The Power Indicator LED should illuminate when the sensor is powered.
- Check that the client computer's network settings are properly configured.
- Ensure that the latest version of Flash is loaded on the client computer.

Laser Profiling

When the Start button or the Snapshot button is pressed, the sensor does not emit laser light.

- Ensure that the sticker covering the laser emitter window (normally affixed to new sensors) has been removed.
- The laser safety input signal may not be correctly applied. See *Specifications* on page 306 for more information.
- The exposure setting may be too low. See *Exposure* on page 73 for more information on configuring exposure time.
- Use the Snapshot button instead of the Start button to capture a laser profile. If the laser flashes when you use the **Snapshot** button, but not when you use the **Start** button, then the problem could be related to triggering. See *Triggers* on page 63 for information on configuring the trigger source.

The sensor emits laser light, but the Range Indicator LED does not illuminate and/or points are not displayed in the Data Viewer.

- Verify that the measurement target is within the sensor's field of view and measurement range. See *Specifications* on page 306 to review the measurement specifications for your sensor model.
- Check that the exposure time is set to a reasonable level. See *Exposure* on page 73 for more information on configuring exposure time.

Performance

The sensor CPU level is near 100%.

- Consider reducing the speed. If you are using a time or encoder trigger source, see *Triggers* on page 63 for information on reducing the speed. If you are using an external input or software trigger, consider reducing

the rate at which you apply triggers.

- Consider reducing the laser profile resolution.
See *Spacing* on page 78 for more information on configuring resolution.
- Review the measurements that you have programmed and eliminate any unnecessary measurements.

Specifications

The following sections describe the specifications of Gocator sensors and connectors.

Gocator 2345, 2381 & 2385


MODEL	2345	2381	2385
Data Points / Profile	400	40	50
Linearity Z (+/- % of MR) ¹	0.02	0.07	0.04
Accuracy Z - Digital (mm) ²	0.06	0.2	0.5
Resolution Z - Analog (mm) ³	0.11	0.11	0.26
Accuracy Z - Analog (mm) ²	0.2	0.2	0.5
Clearance Distance (CD) (mm)	450	700	1300
Measurement Range (MR) (mm)	300	300	700
Field of View (FOV) (mm)	38 - 66	30 - 50	6 - 12
Laser Classes	2M, 3R	2	2M, 3R
Dimensions (mm)	Top Mount 49x75x197	Top Mount 49x75x272	Top Mount 49x75x272
Weight (kg)	0.94	1.3	1.3
Estimated Laser Lifetime	~18,000 hrs (5% Failure) ~32,000 hrs (MTBF)	~15,000 hrs (5% Failure) ~27,000 hrs (MTBF)	~18,000 hrs (5% Failure) ~32,000 hrs (MTBF)

1. Linearity is the worst case difference in the average height measured, compared to the actual position over the measurement range (digital output).

2. Accuracy is the worst case difference between the height measured by the level tracking tool and the actual position over the measurement range.

3. Using 12-bit A to D conversion.

The following diagram illustrates some of the terms used in the table above (Gocator 2345 shown).

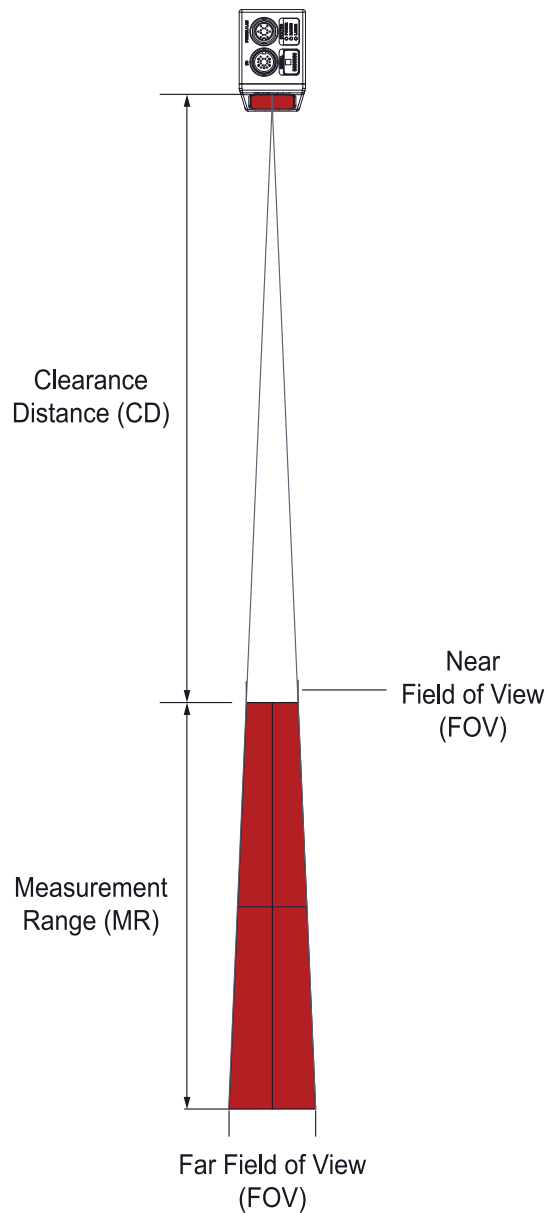

All specification measurements are performed on LMI's standard calibration target (a diffuse, painted white surface).

Linearity Z is the worst case difference in average height measured, compared to the actual position over the measurement range.

Resolution Z is the maximum variability of height measurements across multiple frames, with 95% confidence.

Resolution X is the distance between data points along the laser line.



ALL MODELS

Scan Rate	60 Hz (maximum scan rate: 340 Hz)
Interface	Gigabit Ethernet
Inputs	3x Digital In (Laser Safety Enable, Cast Start, Alignment Trigger)
Outputs	2x Digital Out (Alignment Status, Valid Signal), 2x Analog Out, 12-bit (Range, Temperature)
Housing	Gasketed aluminum enclosure, IP67
Input Voltage (Power)	+24 to +48 VDC (10 W); Ripple +/- 10%
Operating Temp.	0 to 50° C
Storage Temp.	-30 to 70° C


Mechanical dimensions, CD/FOV/MR, and the envelope for each sensor model are illustrated on the following pages.

Gocator 2345


Field of View / Measurement Range / Coordinate System Orientation

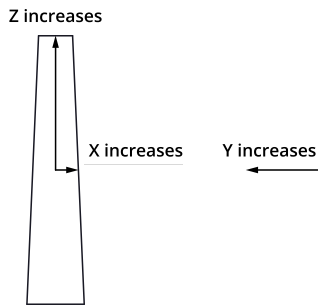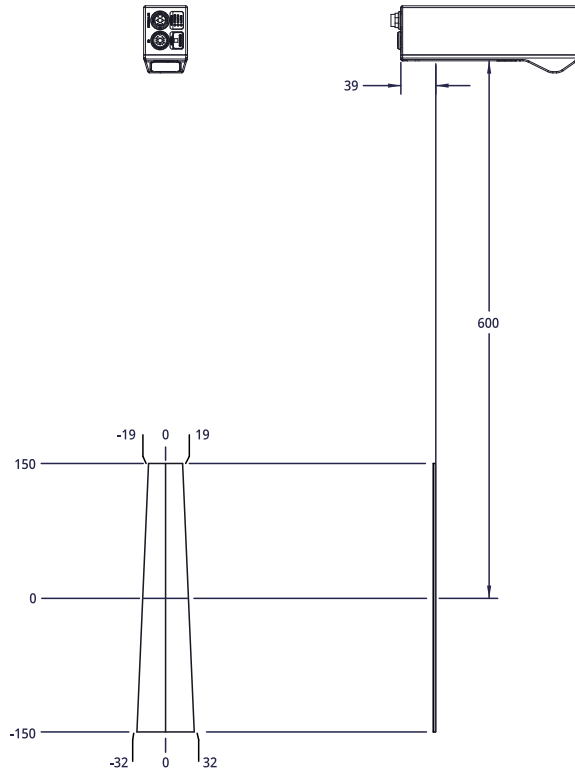

Dimensions


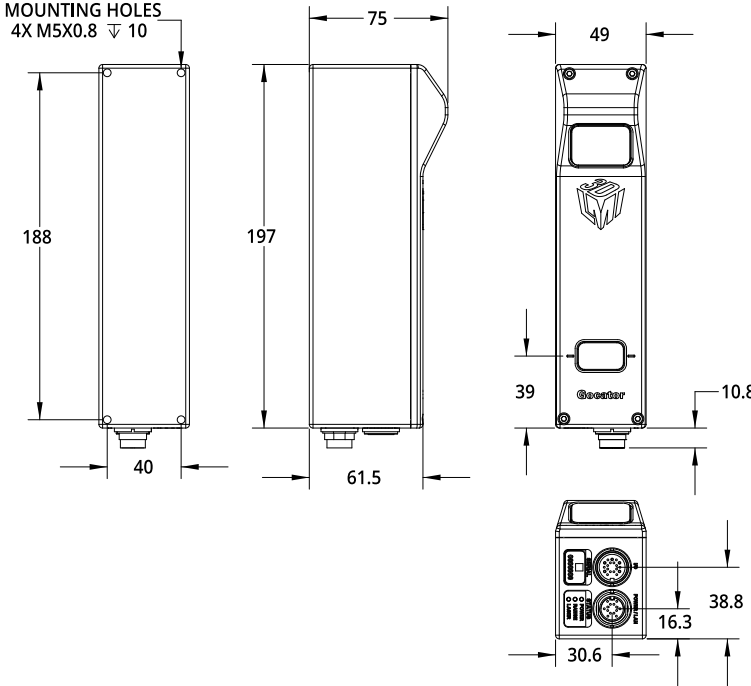


Envelope

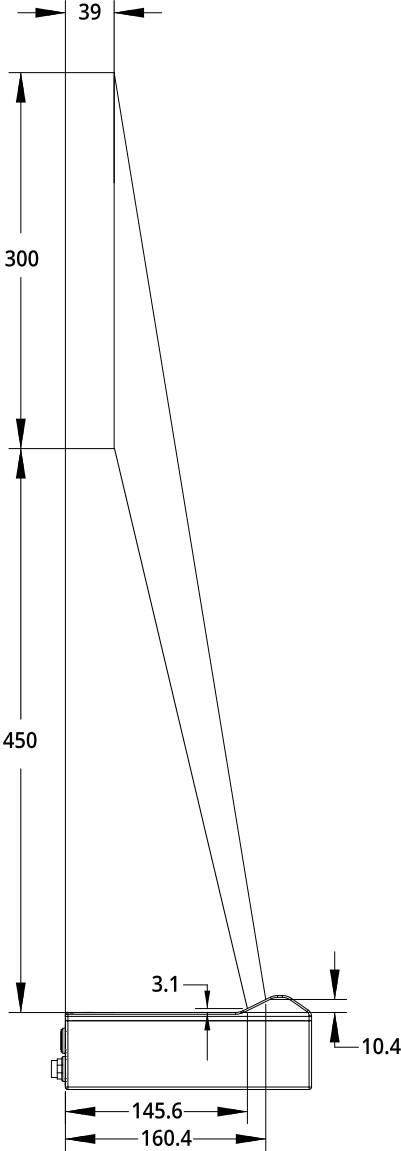


Gocator 2381


Field of View / Measurement Range / Coordinate System Orientation

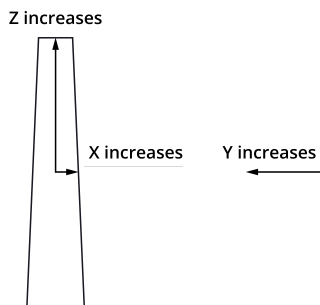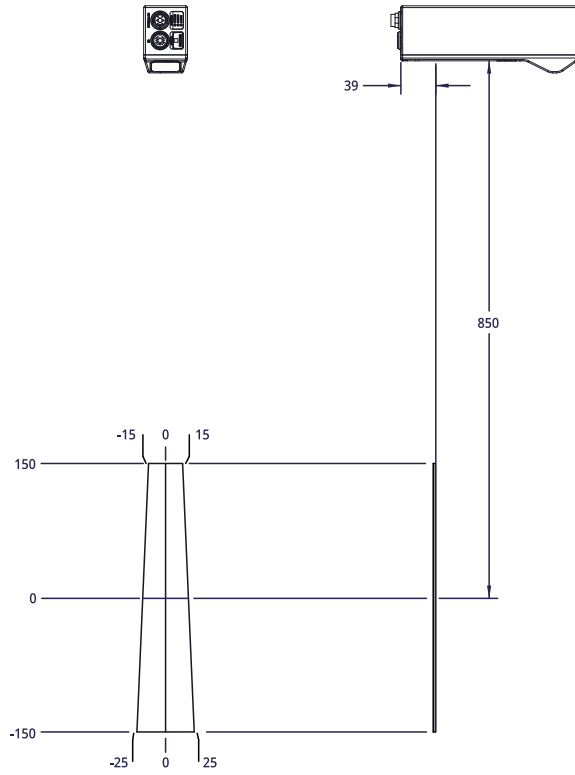

Dimensions

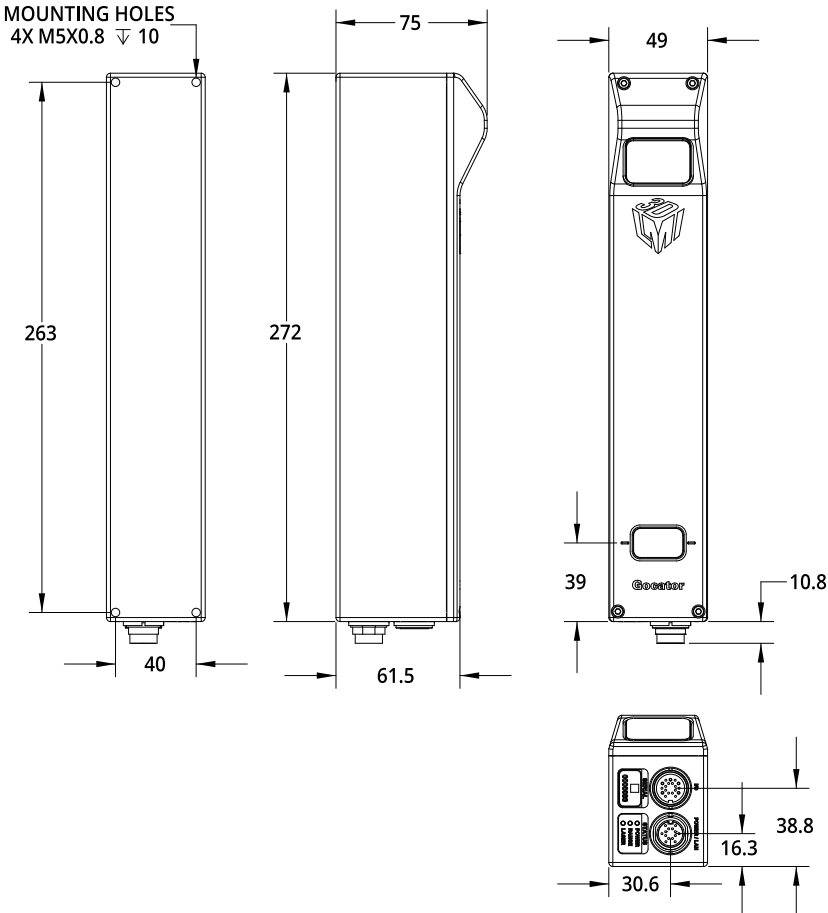


Envelope

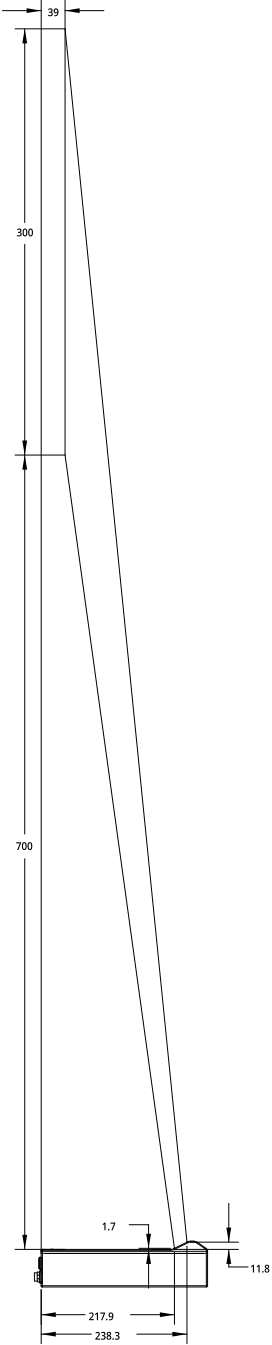


Gocator 2385


Field of View / Measurement Range / Coordinate System Orientation

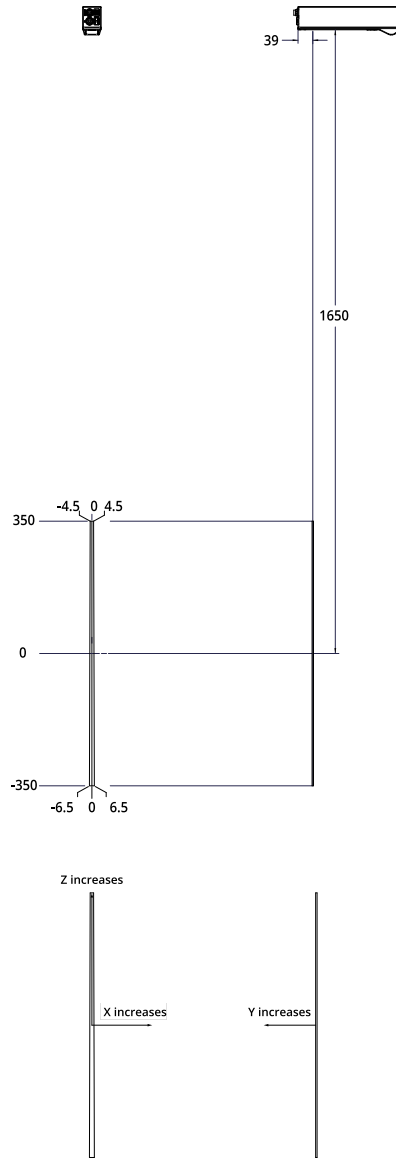

Dimensions

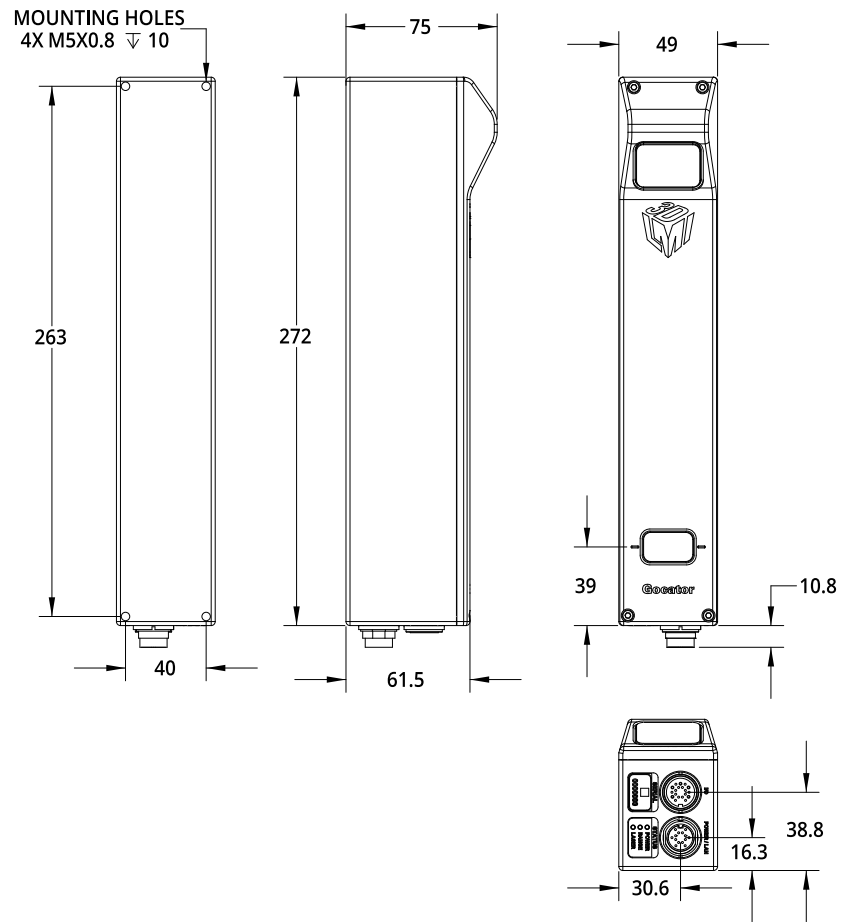

Envelope

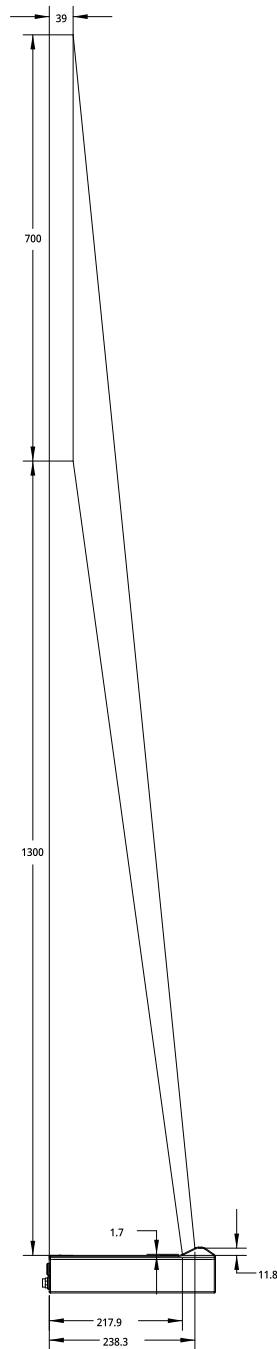

Gocator Power/LAN Connector

The Gocator Power/LAN connector is a 14 pin, M16 style connector that provides power input, laser safety input and Ethernet.




This connector is rated IP67 only when a cable is connected or when a protective cap is used.

This section defines the electrical specifications for Gocator Power/LAN Connector pins, organized by function.

Gocator Power/LAN Connector Pins

Function	Pin	Lead Color on Cordset
GND_24-48V	L	White/ Orange & Black
GND_24-48V	L	Orange/ Black
DC_24-48V	A	White/ Green & Black
DC_24-48V	A	Green/ Black
Safety-	G	White/ Blue & Black
Safety+	J	Blue/ Black
Sync+	E	White/ Brown & Black
Sync-	C	Brown/ Black
Ethernet MX1+	M	White/ Orange
Ethernet MX1-	N	Orange
Ethernet MX2+	O	White/ Green
Ethernet MX2-	P	Green
Ethernet MX3-	S	White/ Blue
Ethernet MX3+	R	Blue
Ethernet MX4+	T	White/ Brown
Ethernet MX4-	U	Brown

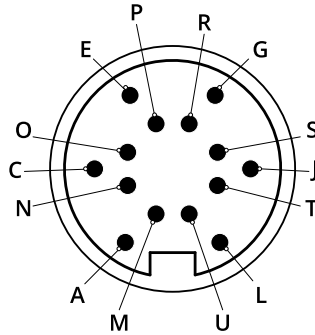

View: Looking into the connector **on** the sensor

Two wires are connected to the ground and power pins.

Grounding Shield

The grounding shield should be mounted to the earth ground.

Power

Apply positive voltage to DC_24-48V. See Gocator 2345 & 2385 for the sensor's power requirement. Apply ground to GND_24-48VDC.

Power requirements

Function	Pins	Min	Max
DC_24-48V	A	24 V	48 V
GND_24-48VDC	L	0 V	0 V

Laser Safety Input

The Safety_in+ signal should be connected to a voltage source in the range listed below. The Safety_in- signal should be connected to the ground/common of the source supplying the Safety_in+.

Laser safety requirements


Function	Pins	Min	Max
Safety_in+	J	24 V	48 V
Safety_in-	G	0 V	0 V



Confirm the wiring of Safety_in- before starting the sensor. Wiring DC_24-48V into Safety_in- may damage the sensor.

Gocator I/O Connector


The Gocator I/O connector is a 12 pin, M16 style connector that provides for digital input, digital output, and analog output signals.

 This connector is rated IP67 only when a cable is connected or when a protective cap is used.

This section defines the electrical specifications for Gocator I/O connector pins, organized by function.

Gocator I/O Connector Pins

Function	Pin	I/O Mapping
Analog Out 1-	A	Range output -
Digital Out 2 +	B	Alignment status +
Digital Out 1 +	C	Valid signal +
Digital Out 1 -	D	Valid signal -
Analog Out 2 +	E	Temperature output +
Analog Out 2 -	F	Temperature output -
Digital In 1 +	G	Cast start +
Digital In 1 -	H	Cast start -
Digital In 2 +	J	Alignment trigger +
Analog Out 1 +	K	Range output +
Digital Out 2 -	L	Alignment status -
Digital In 2 -	M	Alignment trigger -

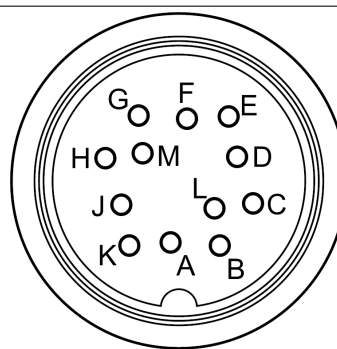

View: Looking into the connector **on** the sensor

Grounding Shield


The grounding shield should be mounted to the earth ground.

Digital Outputs

Each Gocator sensor has two optically isolated outputs. Both outputs are open collector and open emitter, which allows a variety of power sources to be connected and a variety of signal configurations.

Out_1 (Collector – Pin D and Emitter – Pin C) and Out_2 (Collector – Pin B and Emitter – Pin L) are independent and therefore V+ and GND are not required to be the same.

Function	Pins	Max Collector Current	Max Collector-Emitter Voltage	Min Pulse Width
Digital Out 1 (valid signal)	C, D	40 mA	70 V	20 μ s
Digital Out 2 (alignment status)	B, L	40 mA	70 V	20 μ s

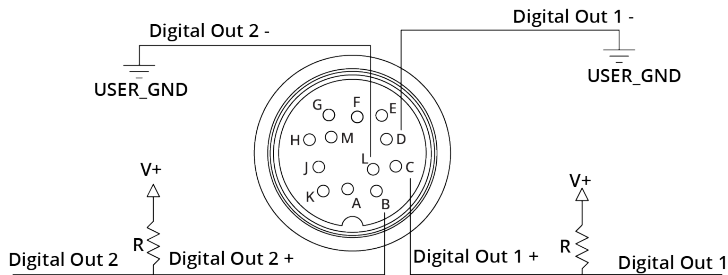


The resistors shown above are calculated by $R = (V+) / 2.5 \text{ mA}$.

The size of the resistors is determined by power = $(V+)^2 / R$.

Inverting Outputs


To invert an output, connect a resistor between ground and Out_1- or Out_2- and connect Out_1+ or Out_2+ to the supply voltage. Take the output at Out_1- or Out_2-.

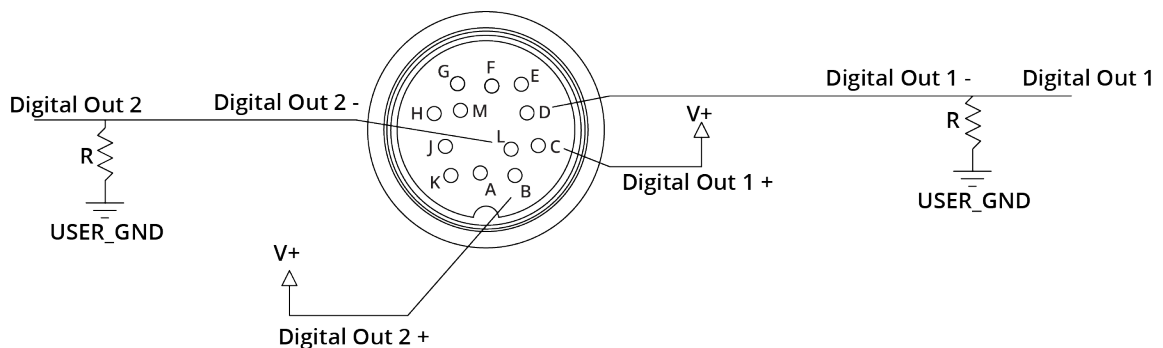


Digital Input

Gocator 2345 and 2385 have two optically isolated inputs. The sensors use digital input to trigger alignment and to signal that the cast has started. The external input must be pulsed for at least 1 millisecond.


To use an input without an external resistor, supply 3.3 - 24 V to the positive pin and GND to the negative.

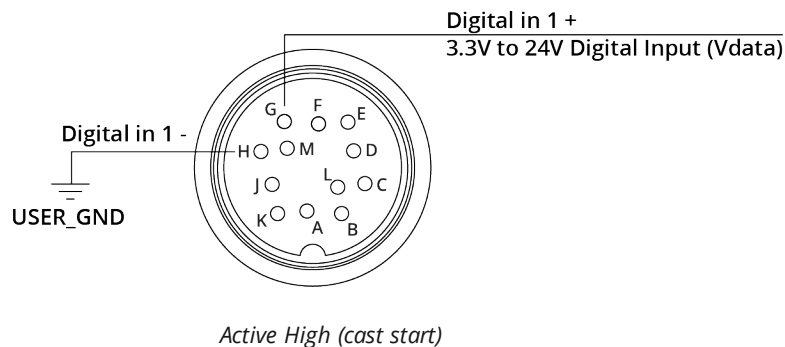

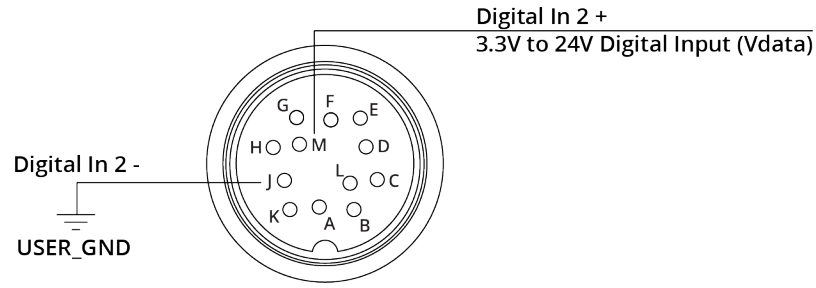


Active High (alignment)

If the supplied voltage is greater than 24 V, connect an external resistor in series to the positive. The resistor value should be $R = [(V_{in} - 1.2V) / 10mA] - 680$.

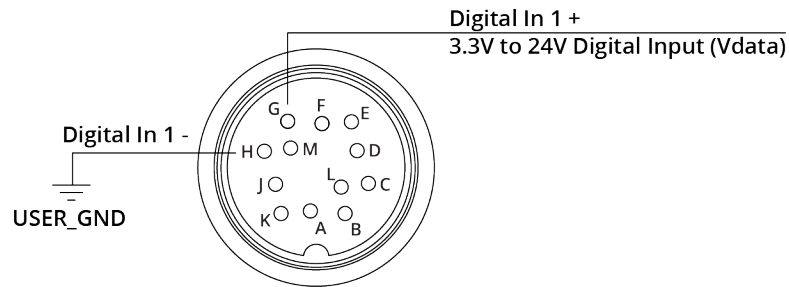

Active Low (cast start)

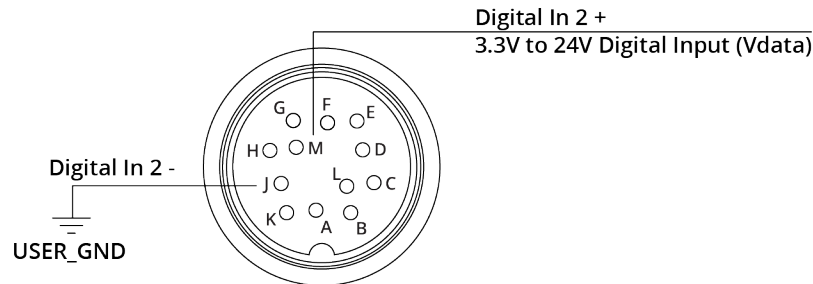

Active Low (alignment)


To assert the signal, the digital input voltage should be set to draw a current of 3 mA to 40 mA from the positive pin. The current that passes through the positive pin is $I = (V_{in} - 1.2 - V_{data}) / 680$. To reduce noise sensitivity, we recommend leaving a 20% margin for current variation (i.e., uses a digital input voltage that draws 4mA to 25mA).

Function	Pins	Min Voltage	Max Voltage	Min Current	Max Current	Min Pulse Width
Digital In 1 (cast start) +	G, H	3.3 V	24 V	3 mA	40 mA	1 ms
Digital In 2 (alignment trigger) +	J, M	3.3 V	24 V	3 mA	40 mA	1 ms


Analog Output

The Sensor I/O Connector defines two analog output interfaces: Range (Analog Out 1) and Temperature (Analog Out 2).

Function	Pins	Current Range
Analog Out 1 (Range)	K, A	4 – 20 mA (+150 to -150 mm)
Analog Out 2 (Temperature)	E, F	4 – 20 mA (-128 to +128 degrees Celsius)

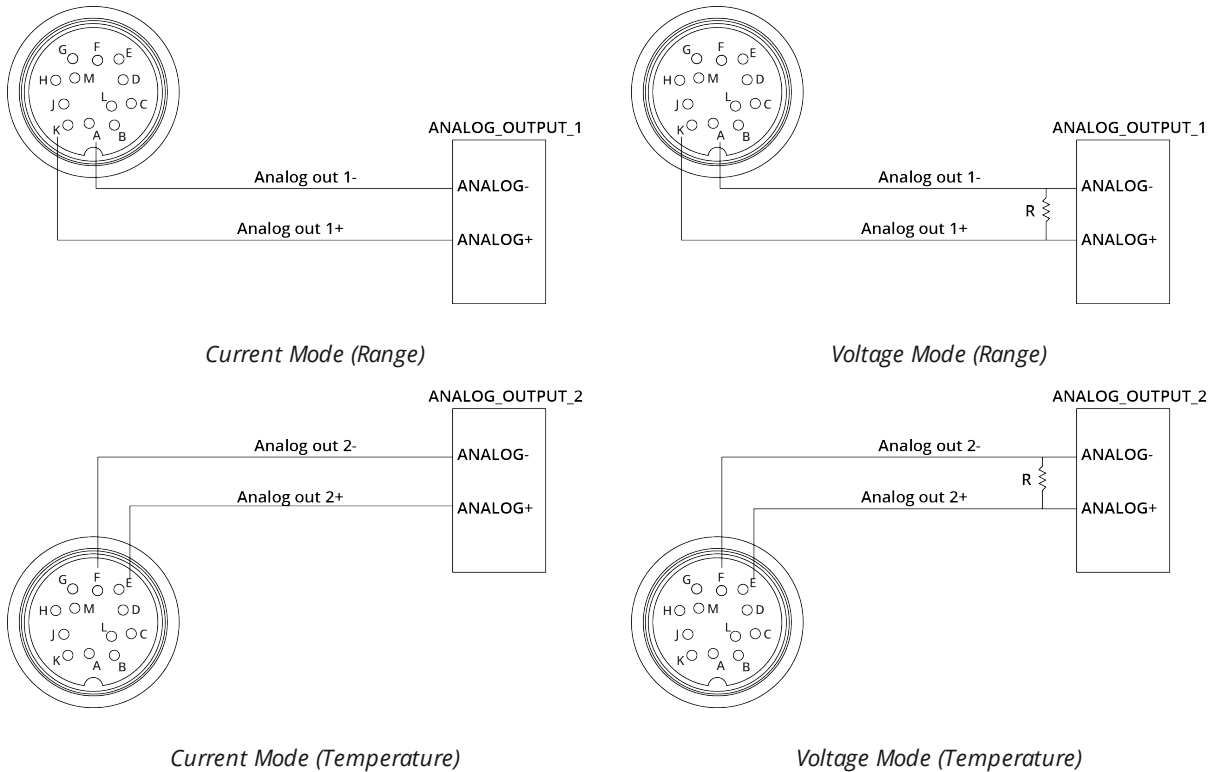

To configure for voltage output, connect a 500 Ohm ¼ Watt resistor between Analog_out+ and Analog_out- and measure the voltage across the resistor. To reduce the noise in the output, we recommend using an RC filter as shown below.

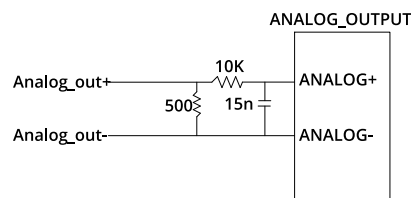

Software Licenses

Pico-C

Website:

<http://code.google.com/p/picoc/>

License:

picoc is published under the "New BSD License".

<http://www.opensource.org/licenses/bsd-license.php>

Copyright (c) 2009-2011, Zik Saleeba

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- * Neither the name of the Zik Saleeba nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

BlowFish

Website:

<http://www.chiark.greenend.org.uk/~sgtatham/putty/licence.html>

License:

PuTTY is copyright 1997-2011 Simon Tatham.

Portions copyright Robert de Bath, Joris van Rantwijk, Delian Delchev, Andreas Schultz, Jeroen Massar, Wez Furlong, Nicolas Barry, Justin Bradford, Ben Harris, Malcolm Smith, Ahmad Khalifa, Markus Kuhn, Colin Watson, and CORE SDI S.A.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL SIMON TATHAM BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

CodeMirror

Website:

<http://codemirror.net>

License:

Copyright (C) 2011 by Marijn Haverbeke <marijnh@gmail.com>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

jQuery

Website:

<http://jquery.com/>

License:

Copyright (c) 2011 John Resig, <http://jquery.com/>

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Closure Library

Website:

<http://code.google.com/closure/library/index.html>

License:

Copyright 2006 The Closure Library Authors. All Rights Reserved.

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License.

You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS-IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

jQuery.CopyEvents

Website:

<http://brandonaaaron.net>

License:

Copyright (c) 2006 Brandon Aaron

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

jQuery.history

License:

jQuery history plugin

Copyright (c) 2006 Taku Sano (Mikage Sawatari)

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

Modified by Lincoln Cooper to add Safari support and only call the callback once during initialization for msie when no initial hash supplied. API rewrite by Lauris Bukis-Haberkorns

jQuery.mouseWheel

Website:

<http://brandonaaaron.net>

License:

Copyright (c) 2010 Brandon Aaron

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

jQuery.scaling

Website:

<http://eric.garside.name>

License:

Scaling 1.0 - Scale any page element

Copyright (c) 2009 Eric Garside

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

jQuery.scrollFollow

Website:

<http://kitchen.net-perspective.com/>

License:

Copyright (c) 2008 Net Perspective

Licensed under the MIT License (<http://www.opensource.org/licenses/mit-license.php>)

Flex SDK

Website:

<http://opensource.adobe.com/wiki/display/flexsdk/Flex+SDK>

License:

Copyright (c) 2010 Adobe Systems Incorporated

The contents of this file are subject to the Mozilla Public License Version 1.1 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at

<http://www.mozilla.org/MPL/>

Software distributed under the License is distributed on an "AS IS" basis, WITHOUT WARRANTY OF ANY KIND, either express or implied. See the License for the specific language governing rights and limitations under the License.

EtherNet/IP Communication Stack

Website:

sourceforge.net/projects/opener

License:

SOFTWARE DISTRIBUTION LICENSE FOR THE
ETHERNET/IP(TM) COMMUNICATION STACK (ADAPTED BSD STYLE LICENSE)

Copyright (c) 2009, Rockwell Automation, Inc. ALL RIGHTS RESERVED.

EtherNet/IP is a trademark of ODVA, Inc.